



MOUNTAIN TOP[®] EVOm ROLL COVER

Installation manual


Parts

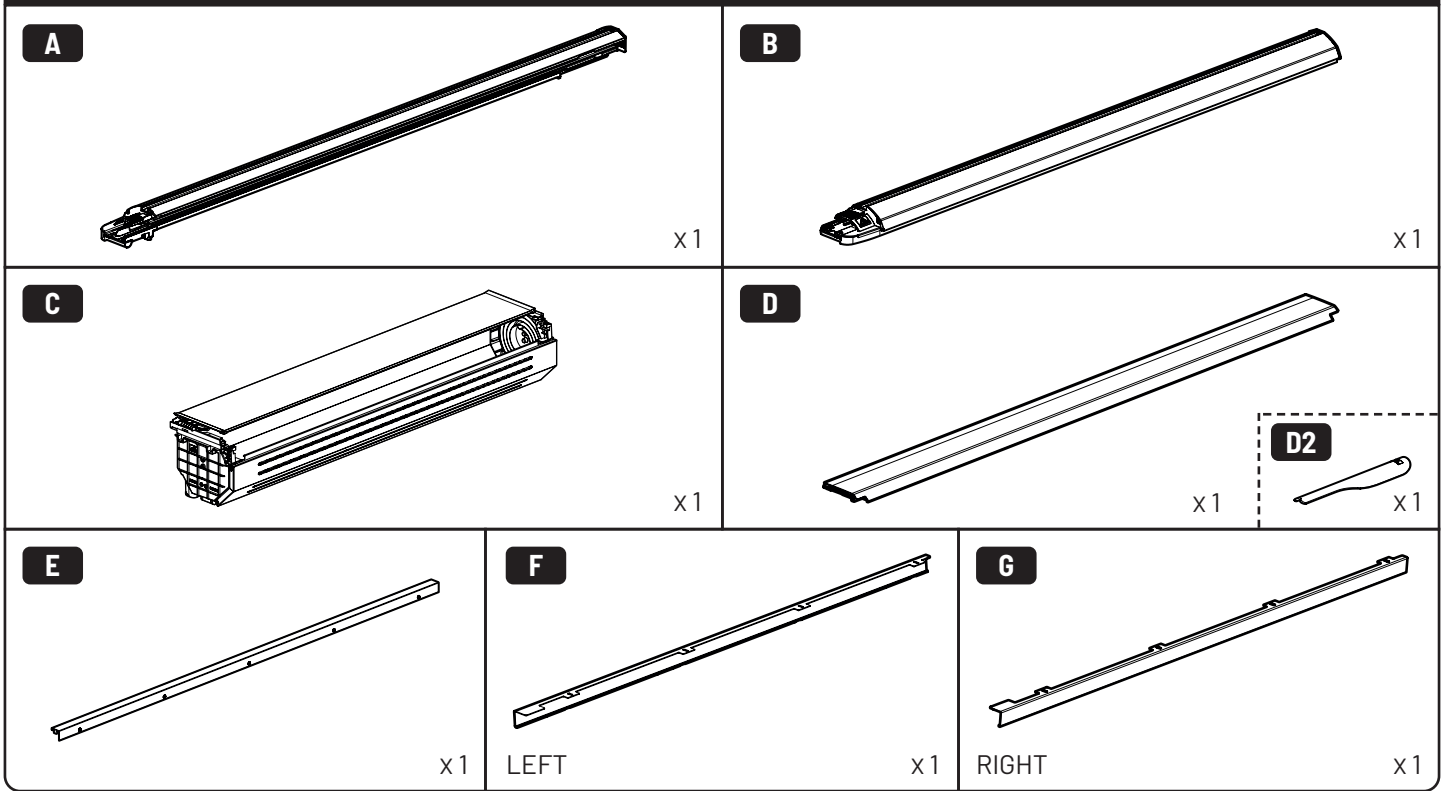

Parts

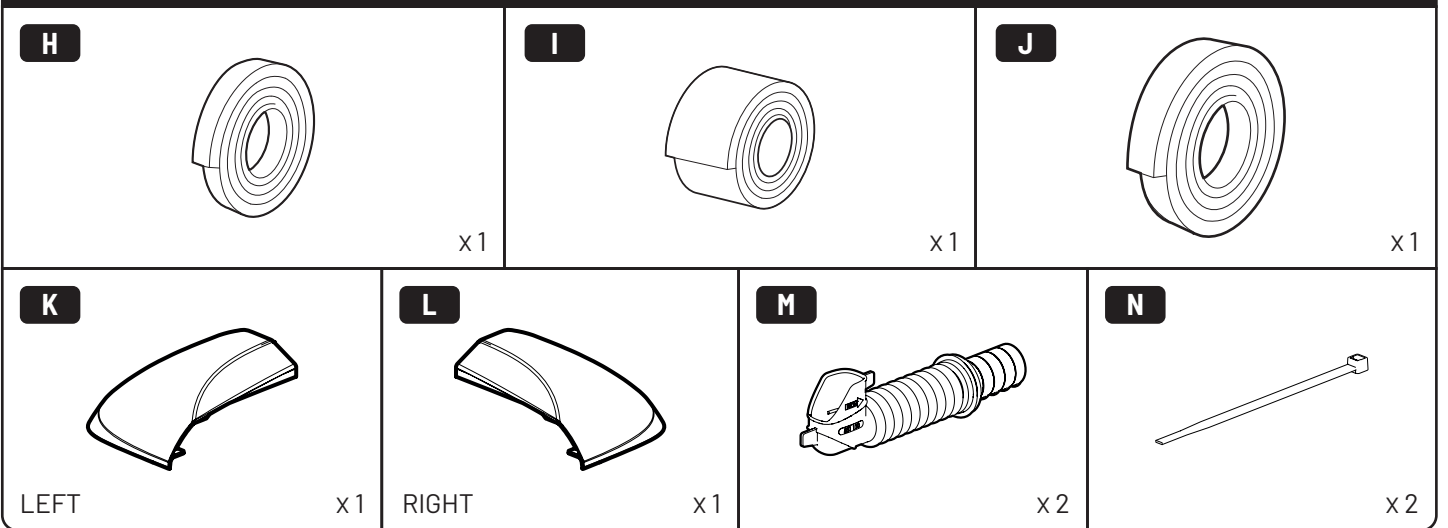


Parts

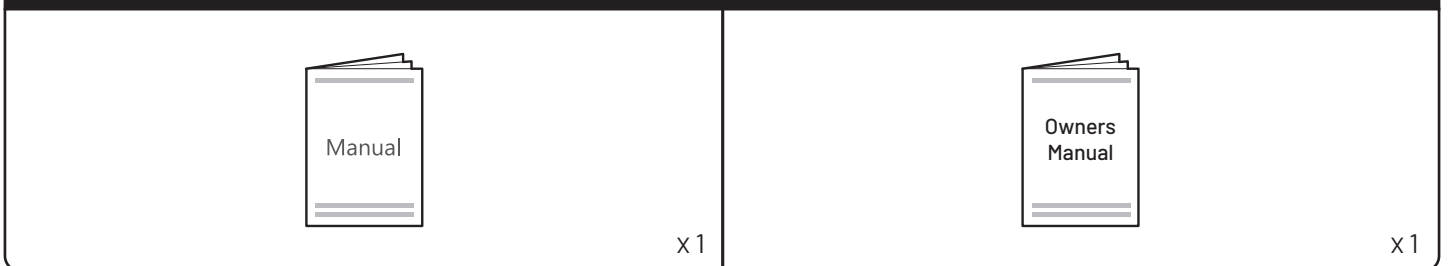


Kit

O




x8

P

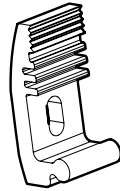


x8

Q




x8

R

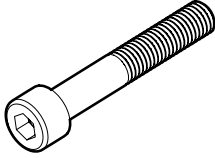


x8

S



x8


T

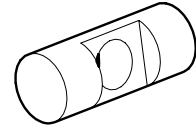

x8


Kit

U

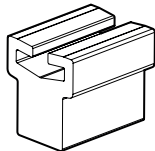


x4

V

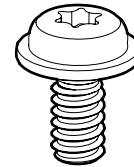


x4

W




x5

X











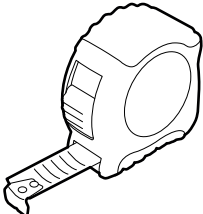



x8

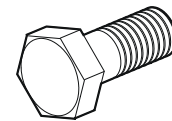Y






x8


Tools needed

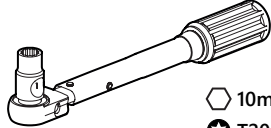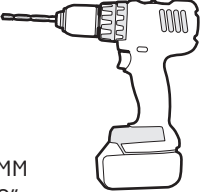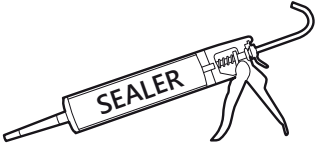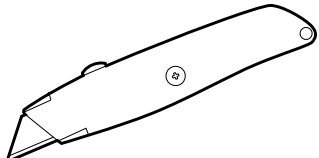	 Ø 2.4MM	 Rust protection Rostschutzmittel Anti-rouille Anti roest	1 - 25 Nm  10mm T20 T30
 Ø 2.4MM Ø 3/32"	 SEALER		 H ₂ O
			 LOCTITE 243


Applying rust protection

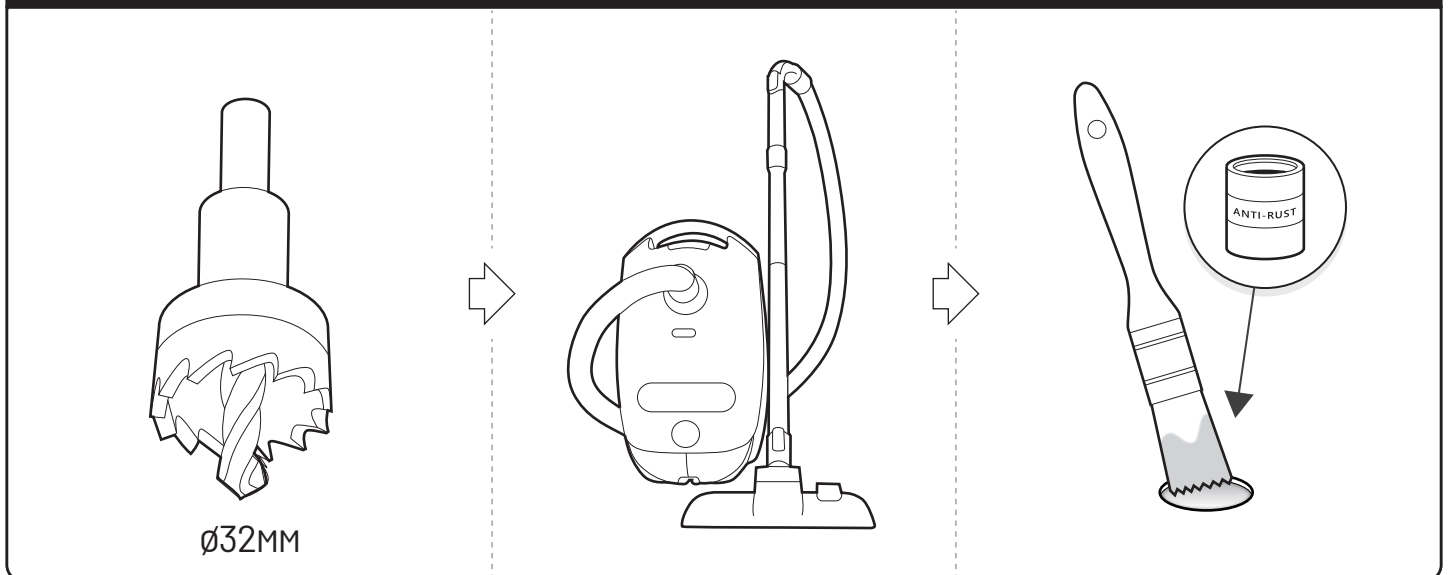

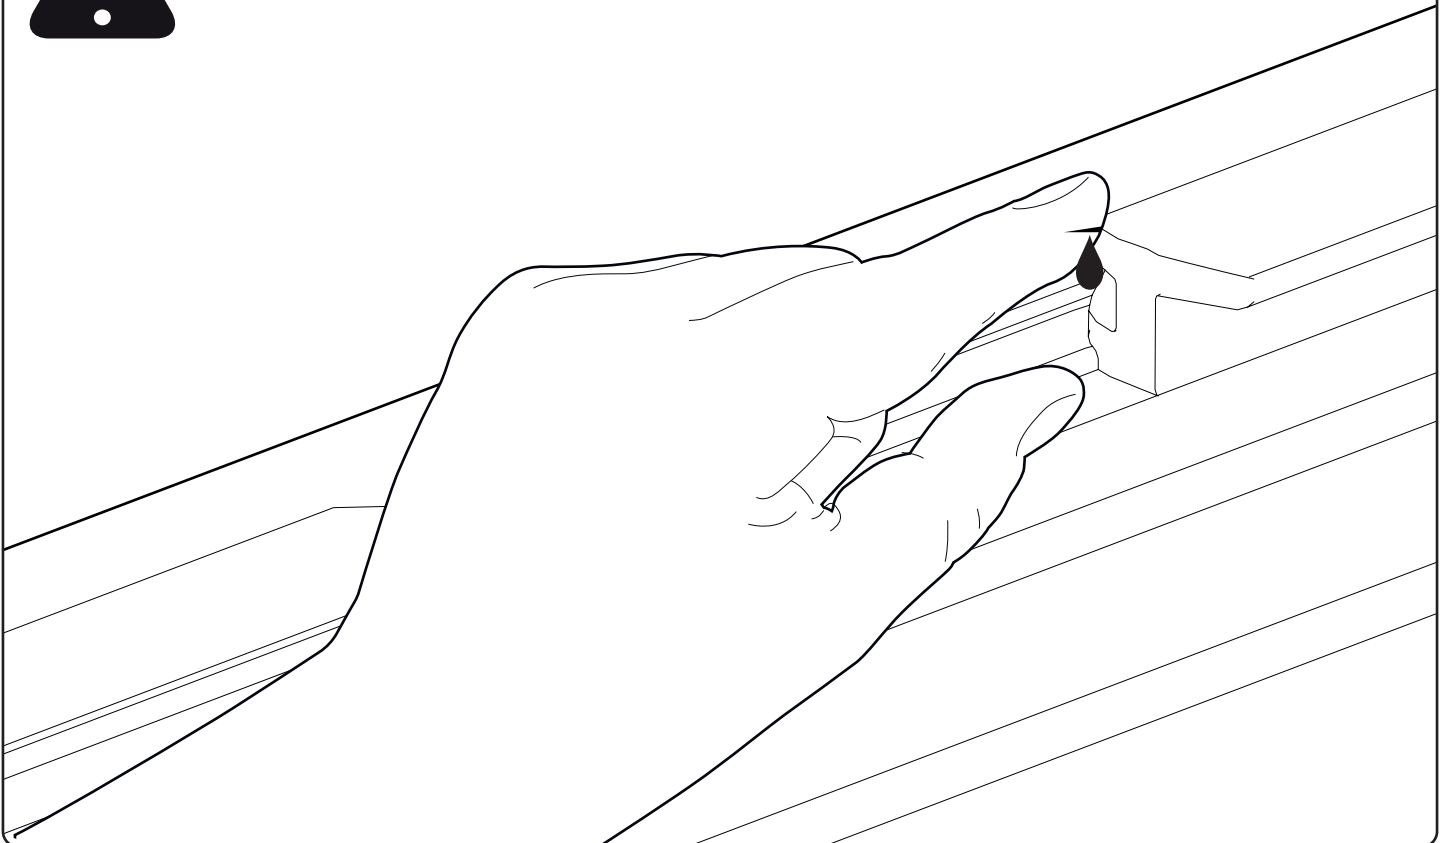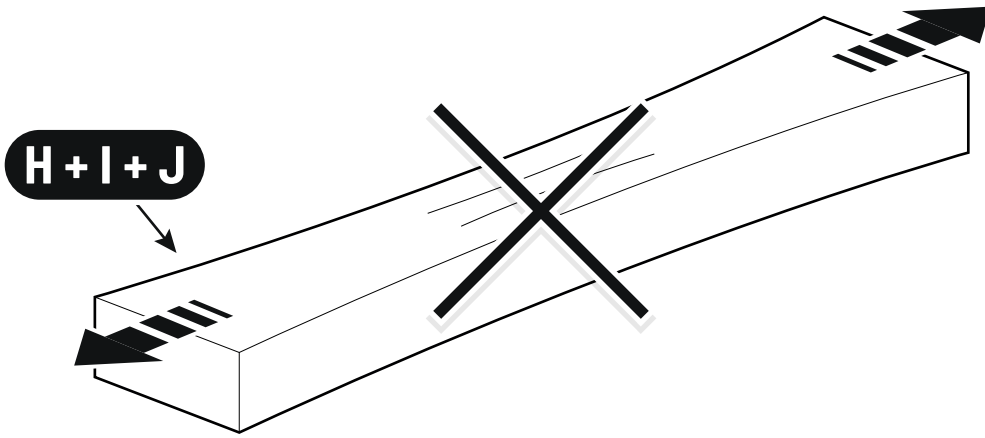


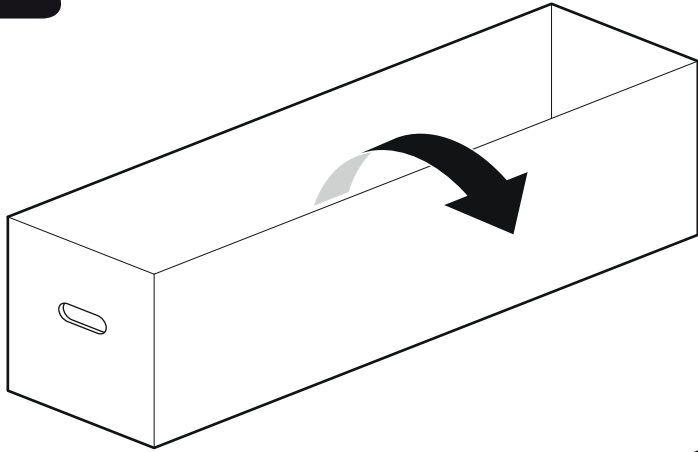


C

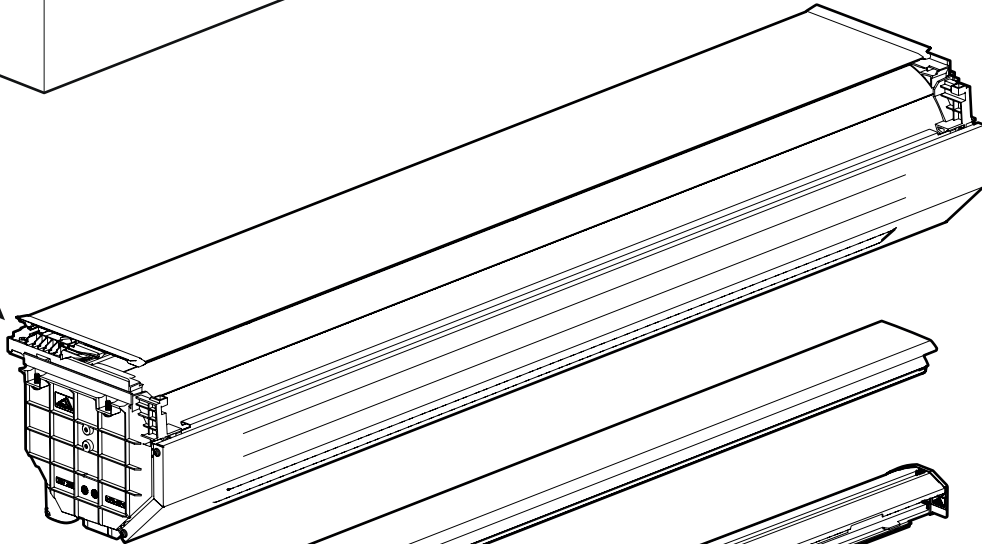


D

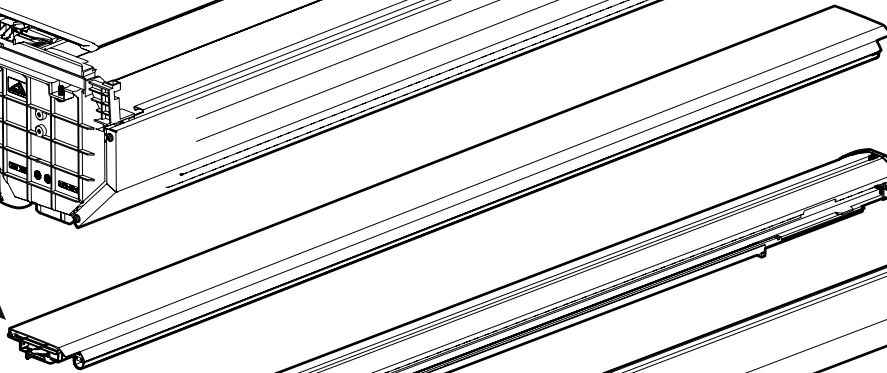


A

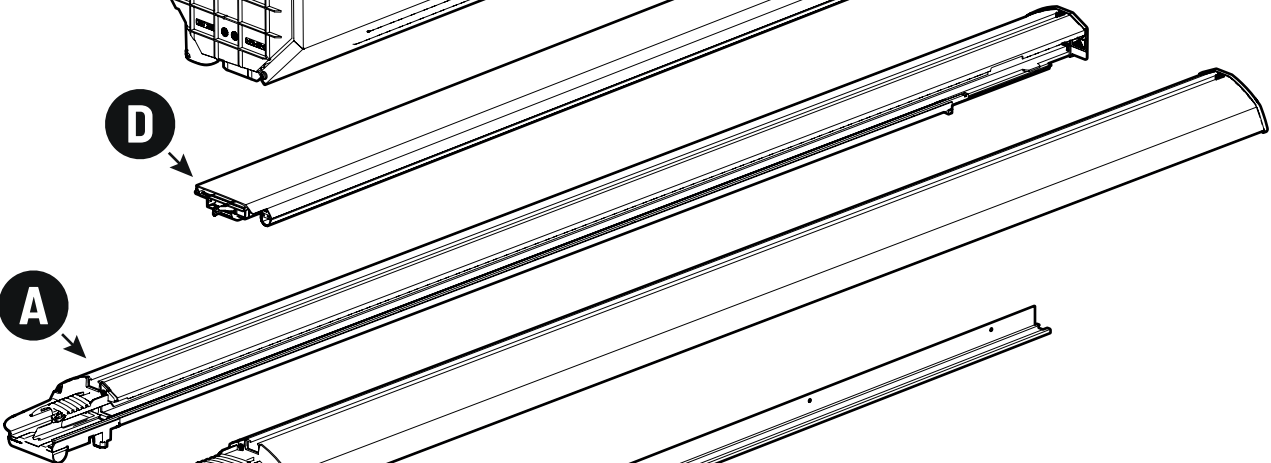


B

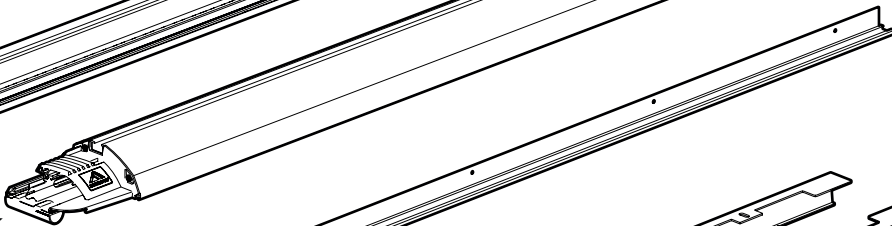


E

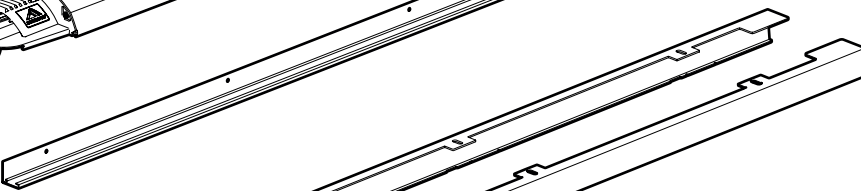

G

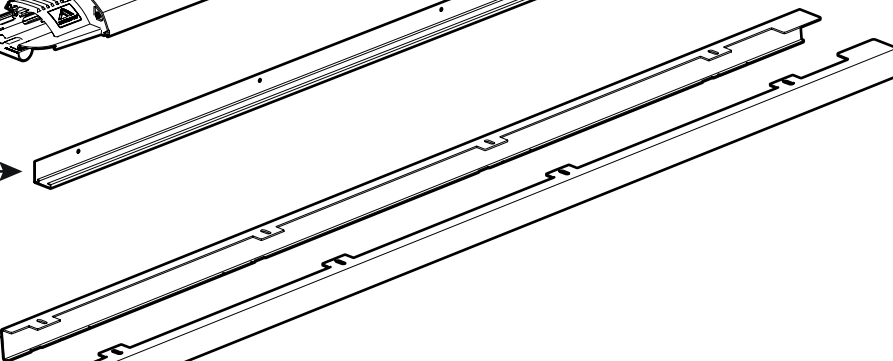


F

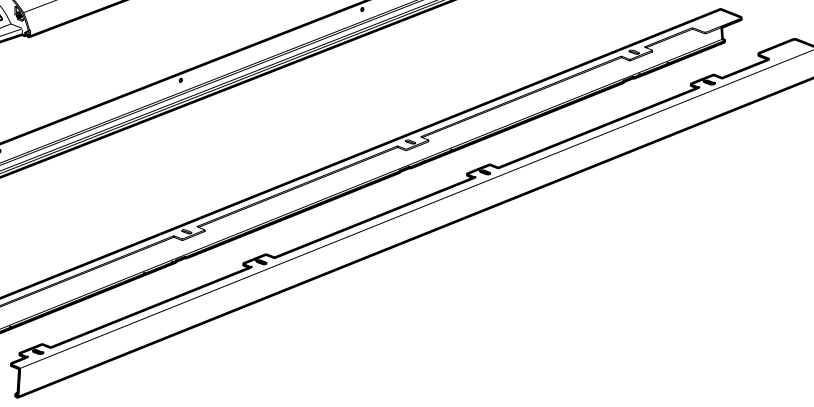







Water & sponge

2


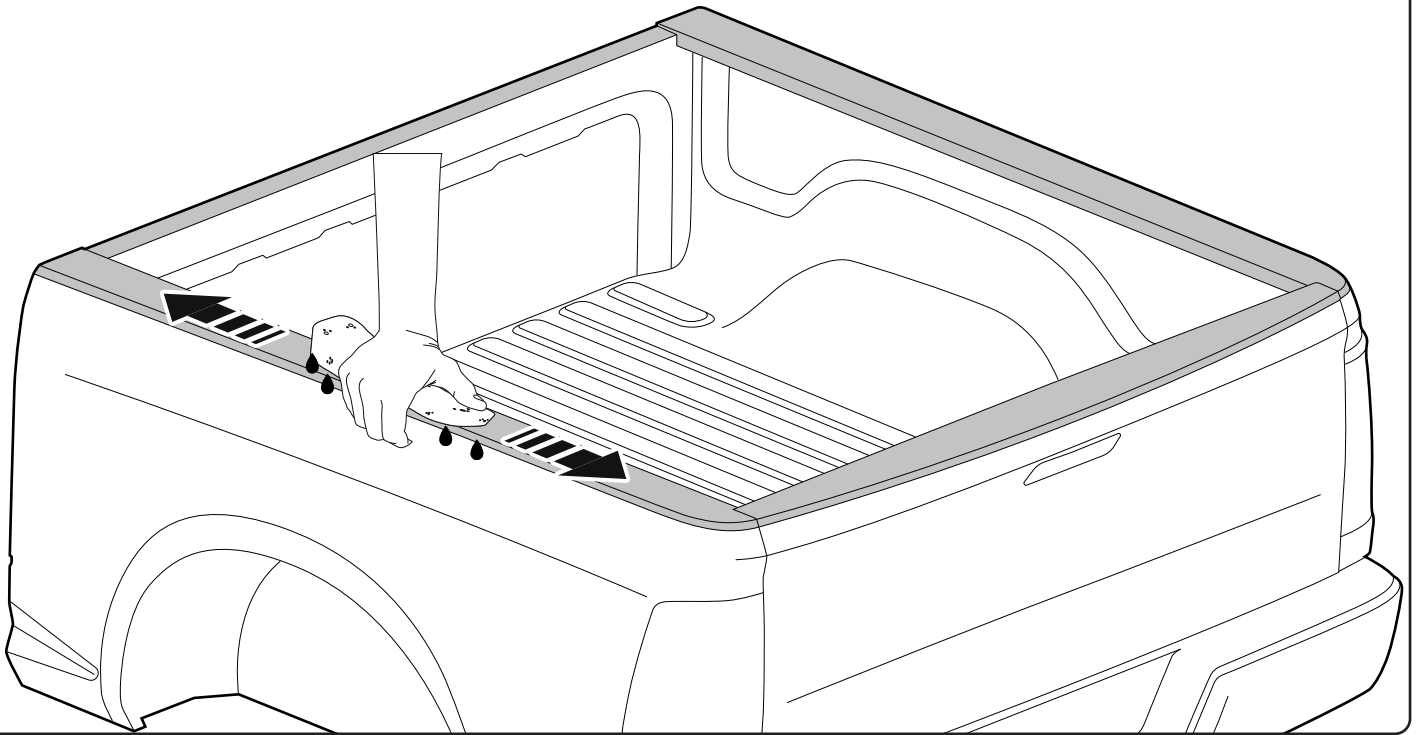


3


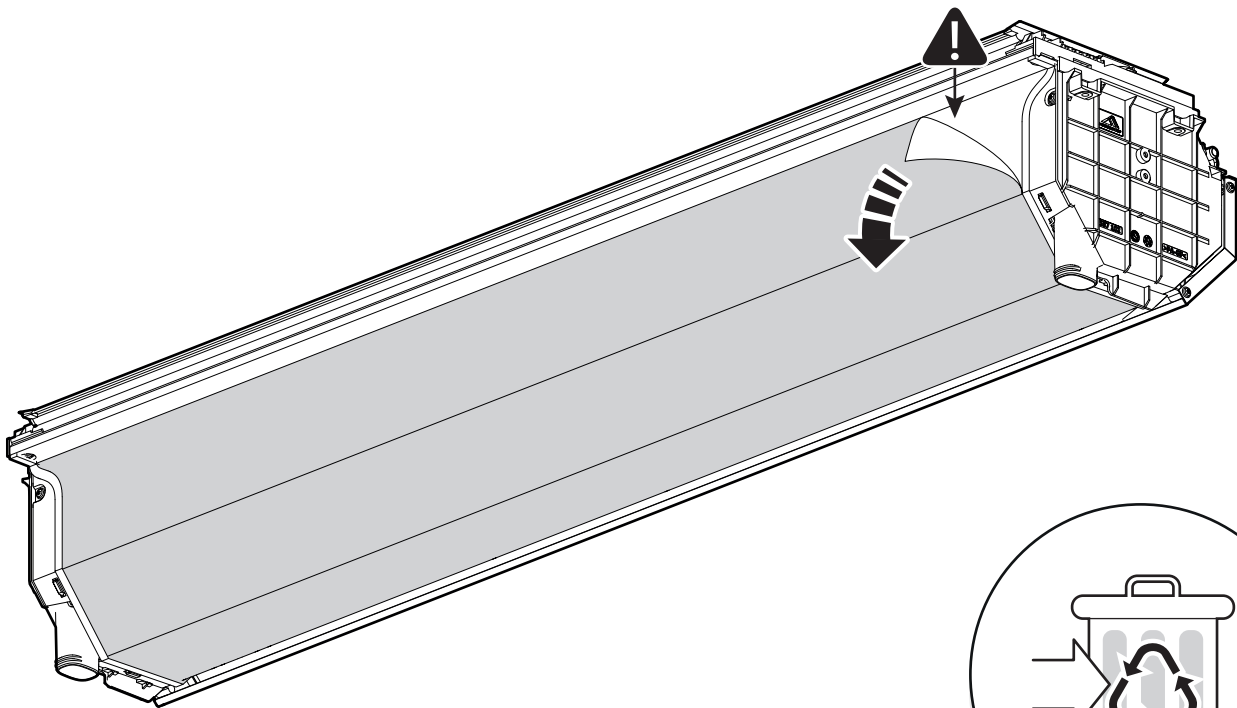


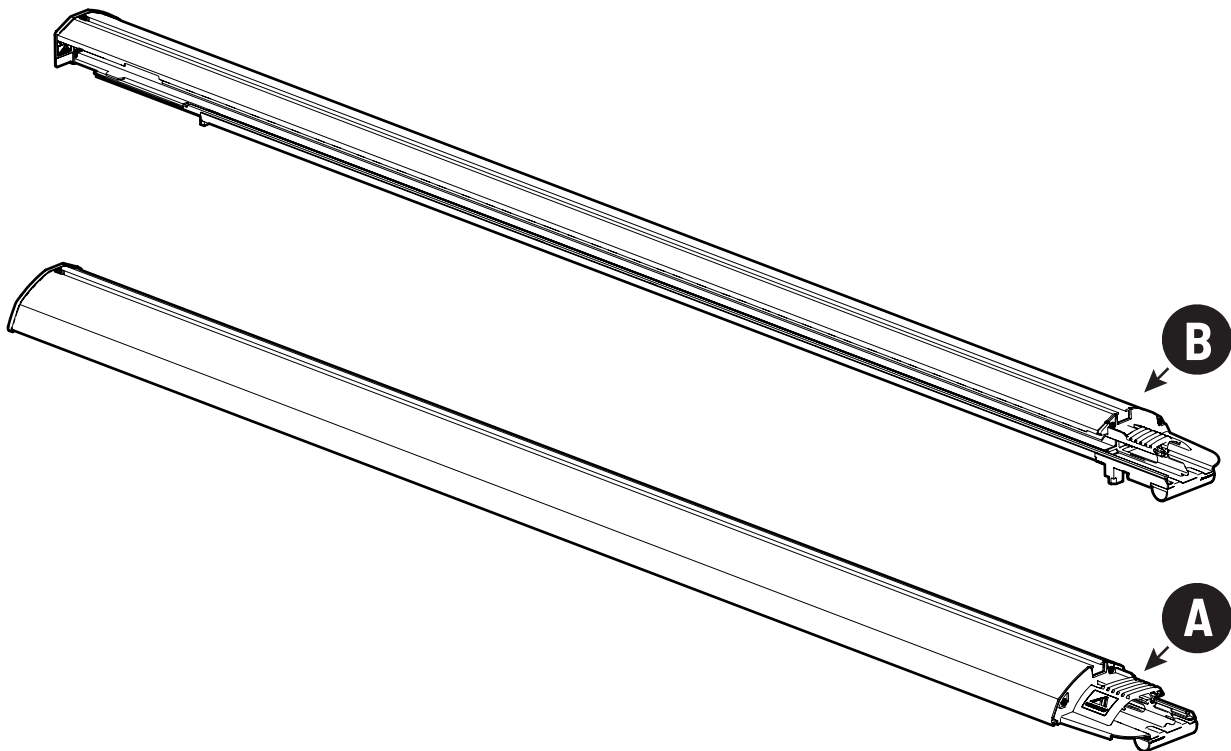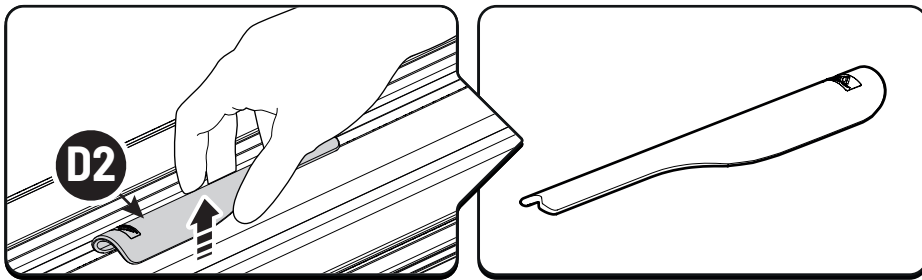
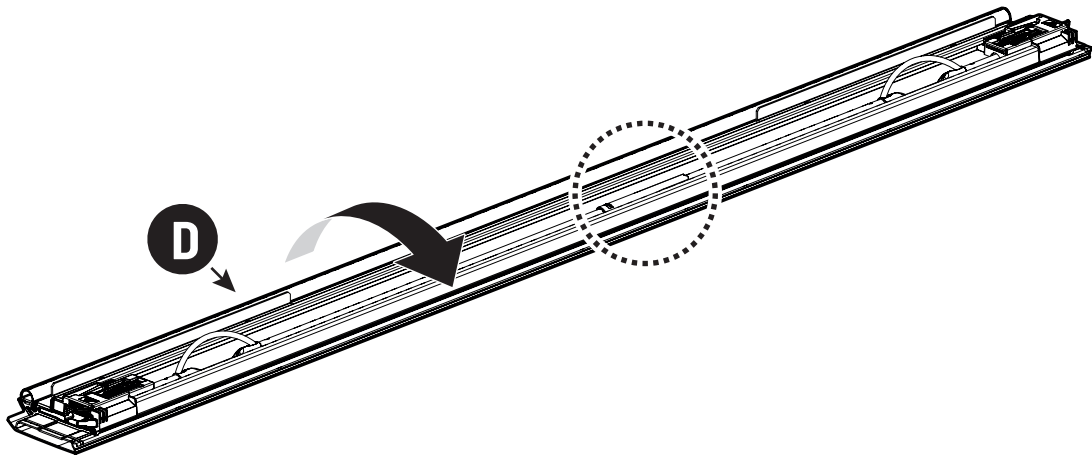





6


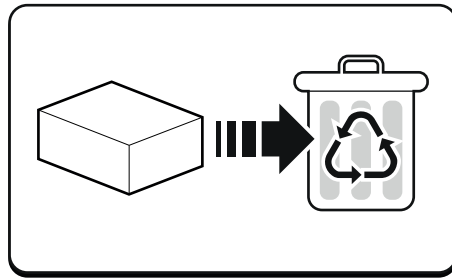
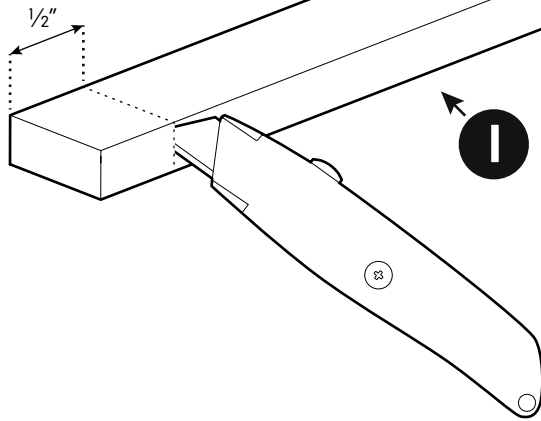




7

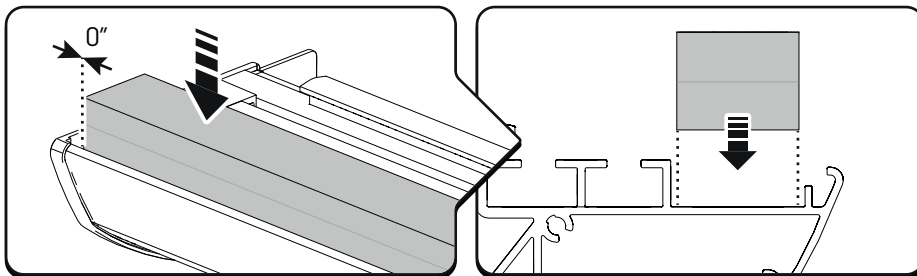
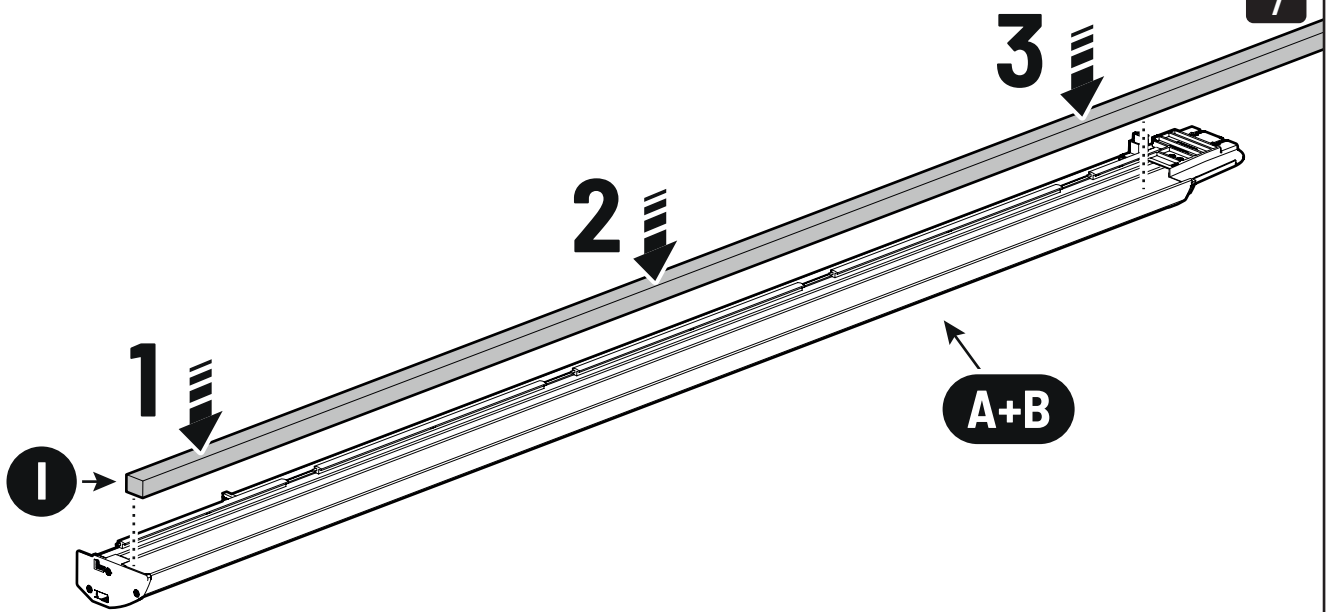


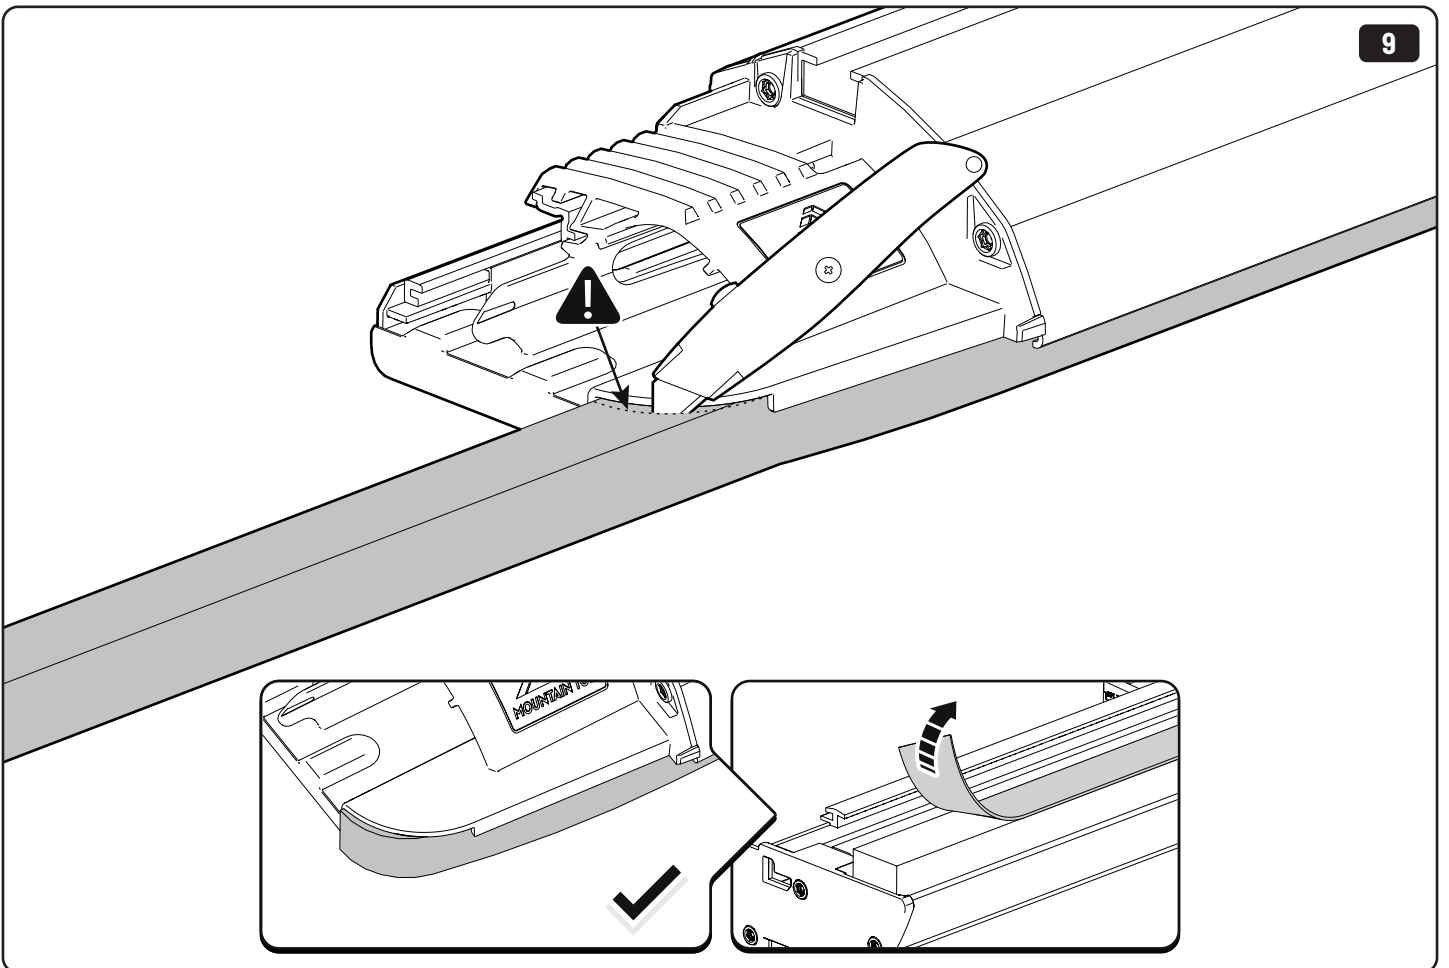
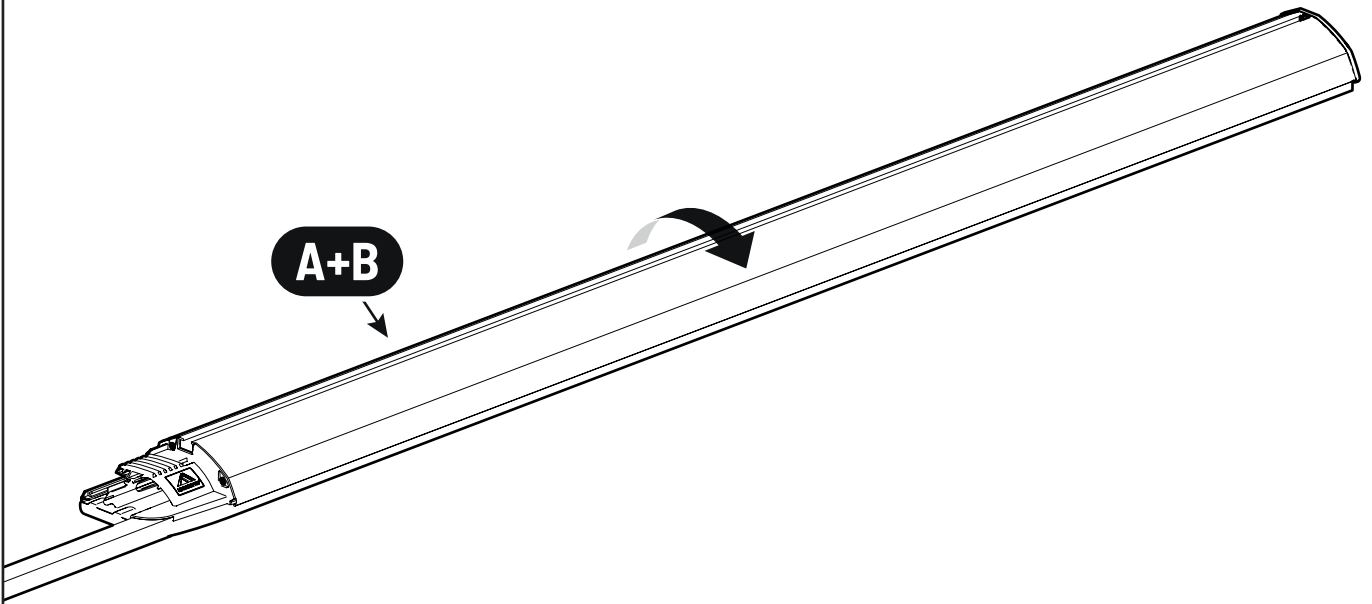


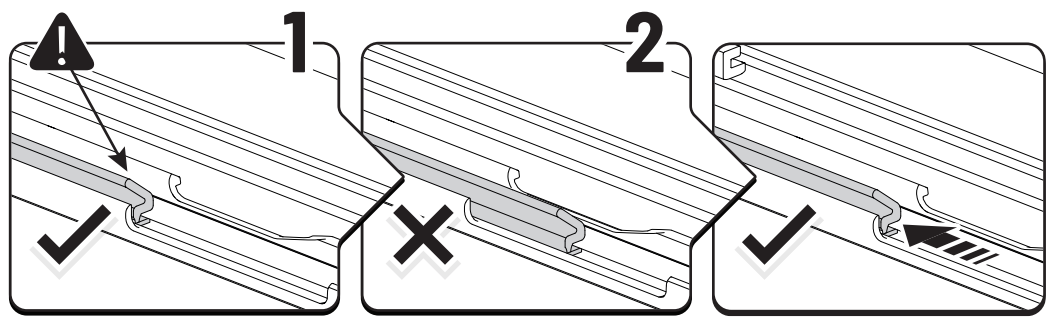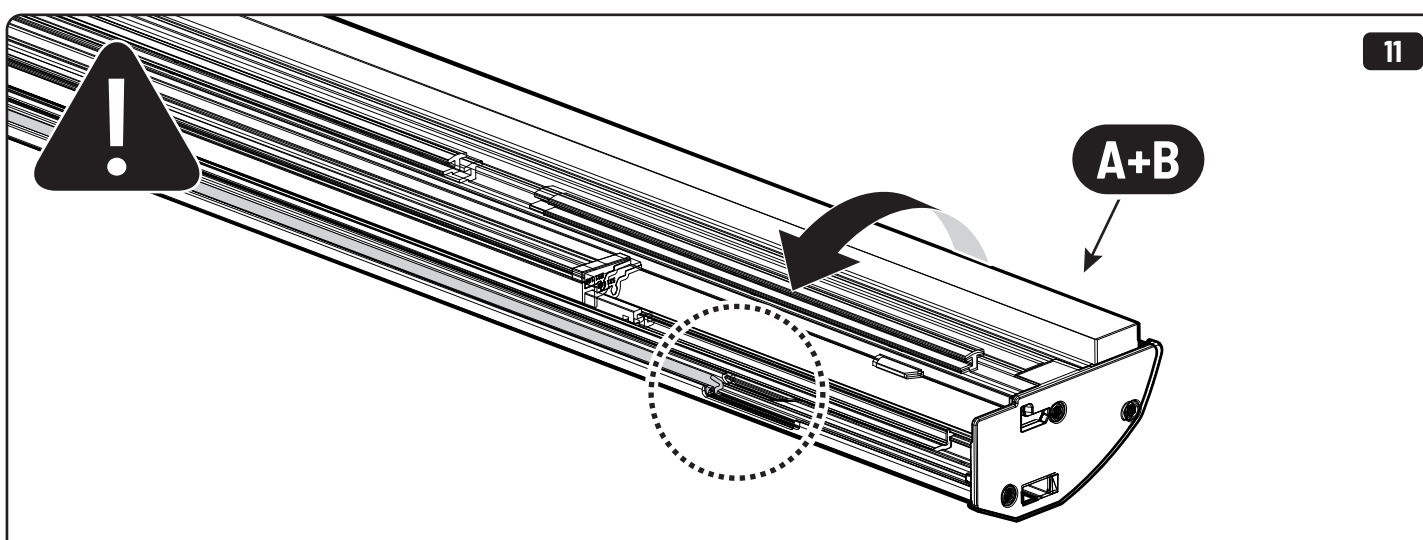
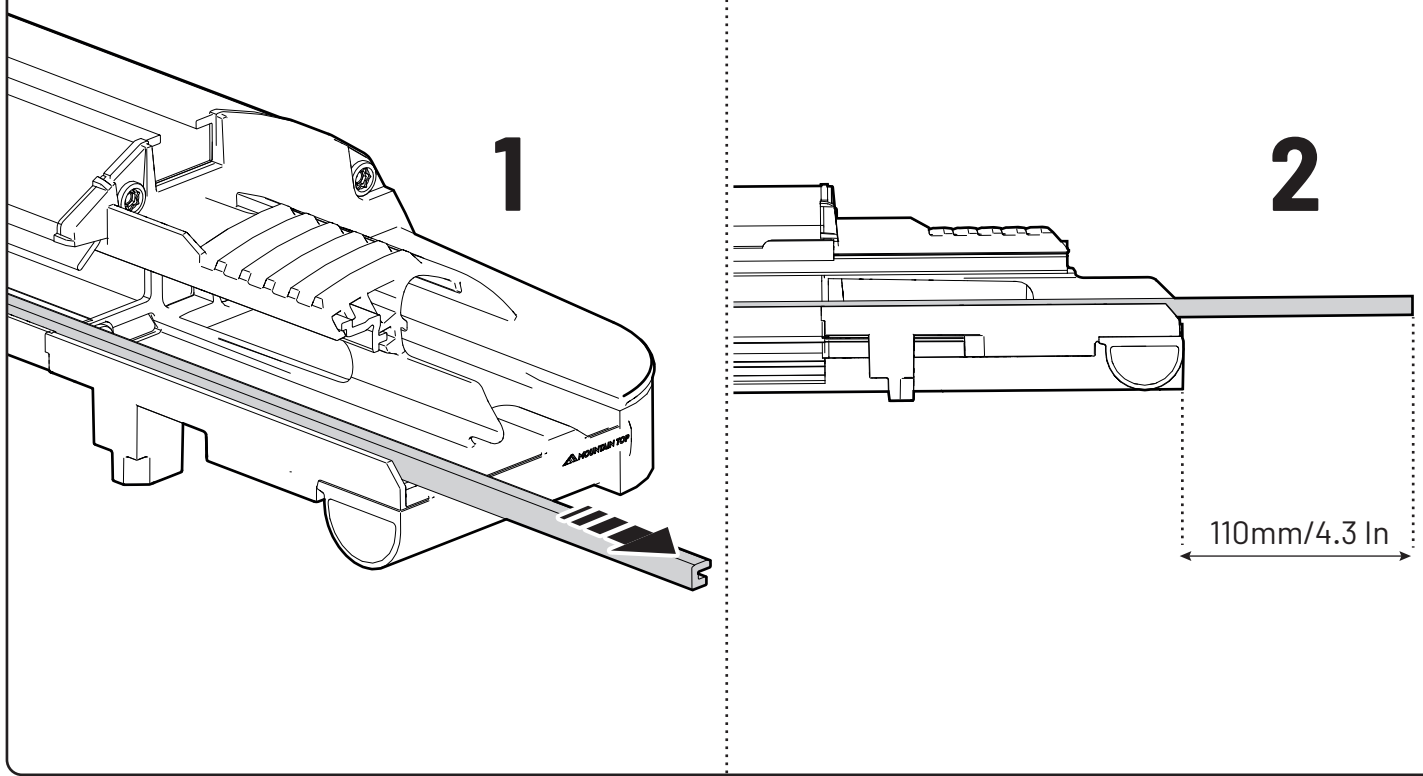


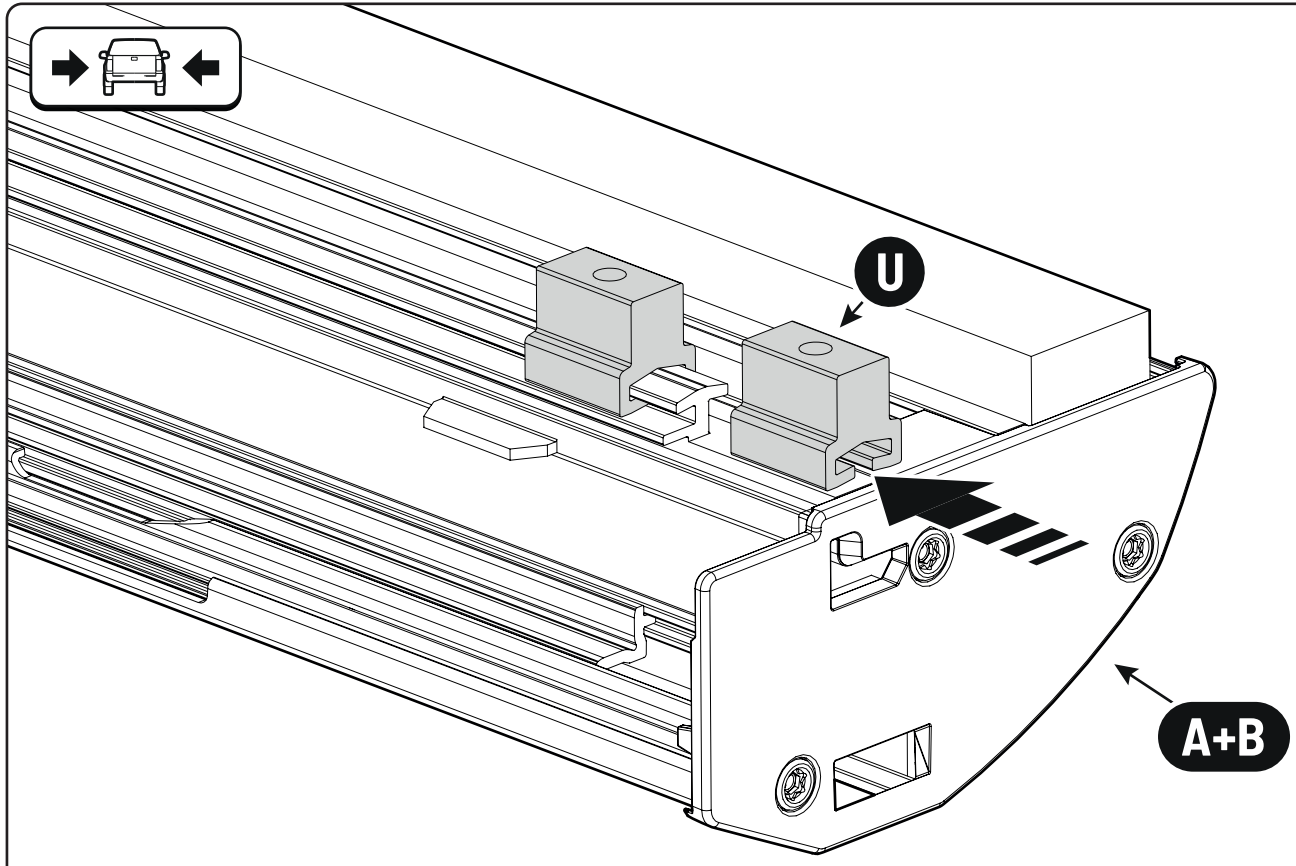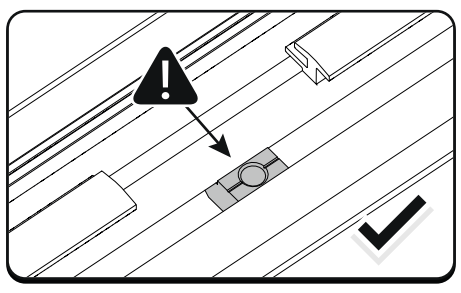
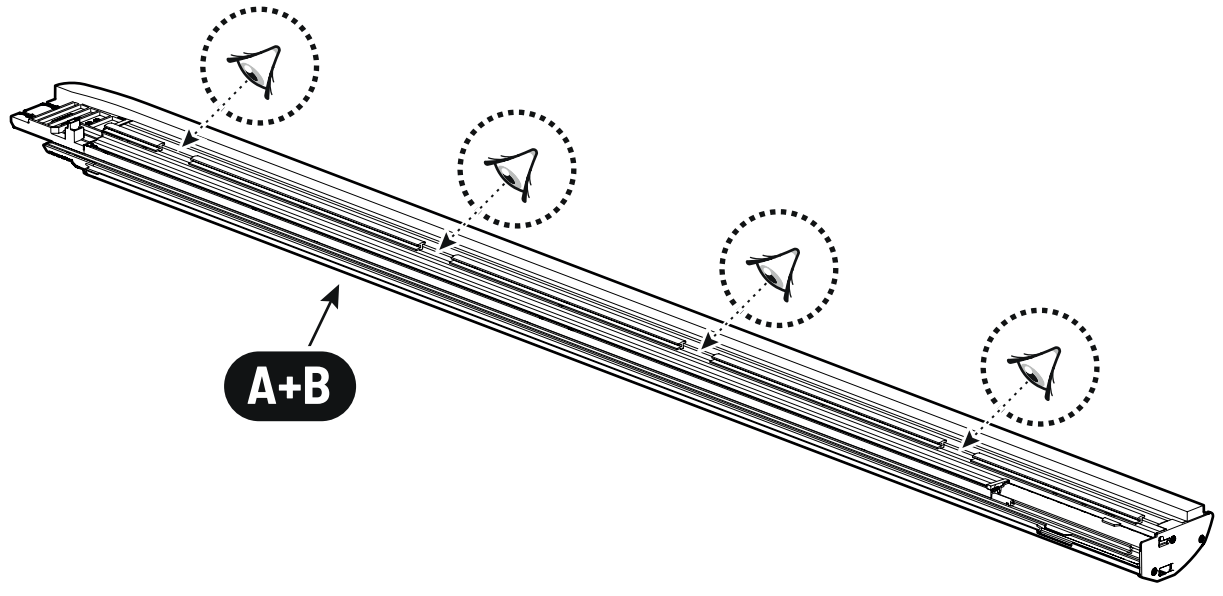


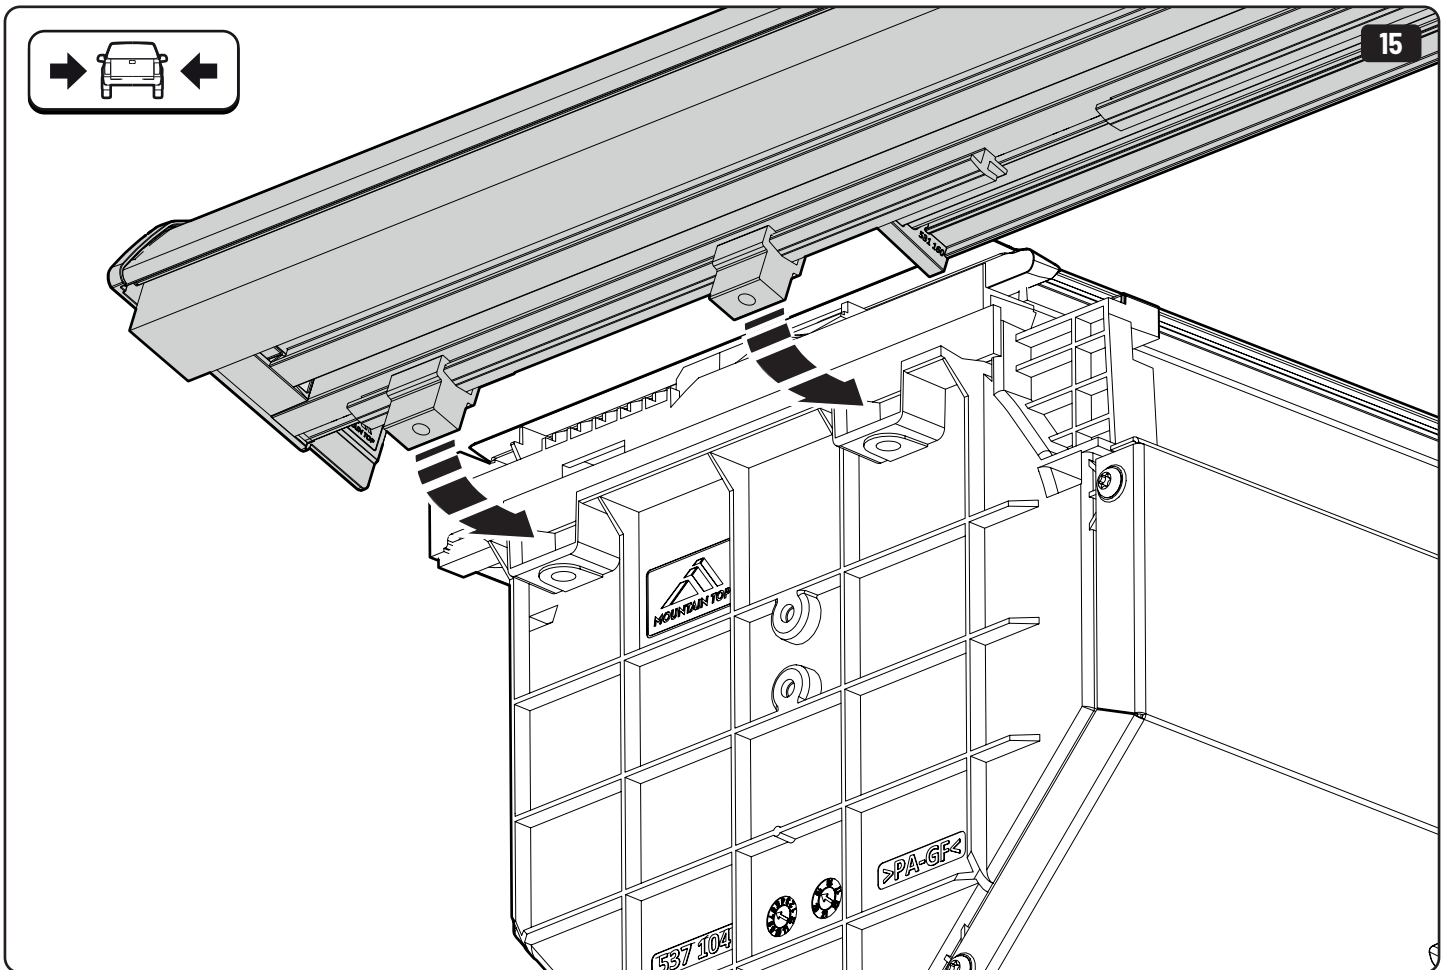
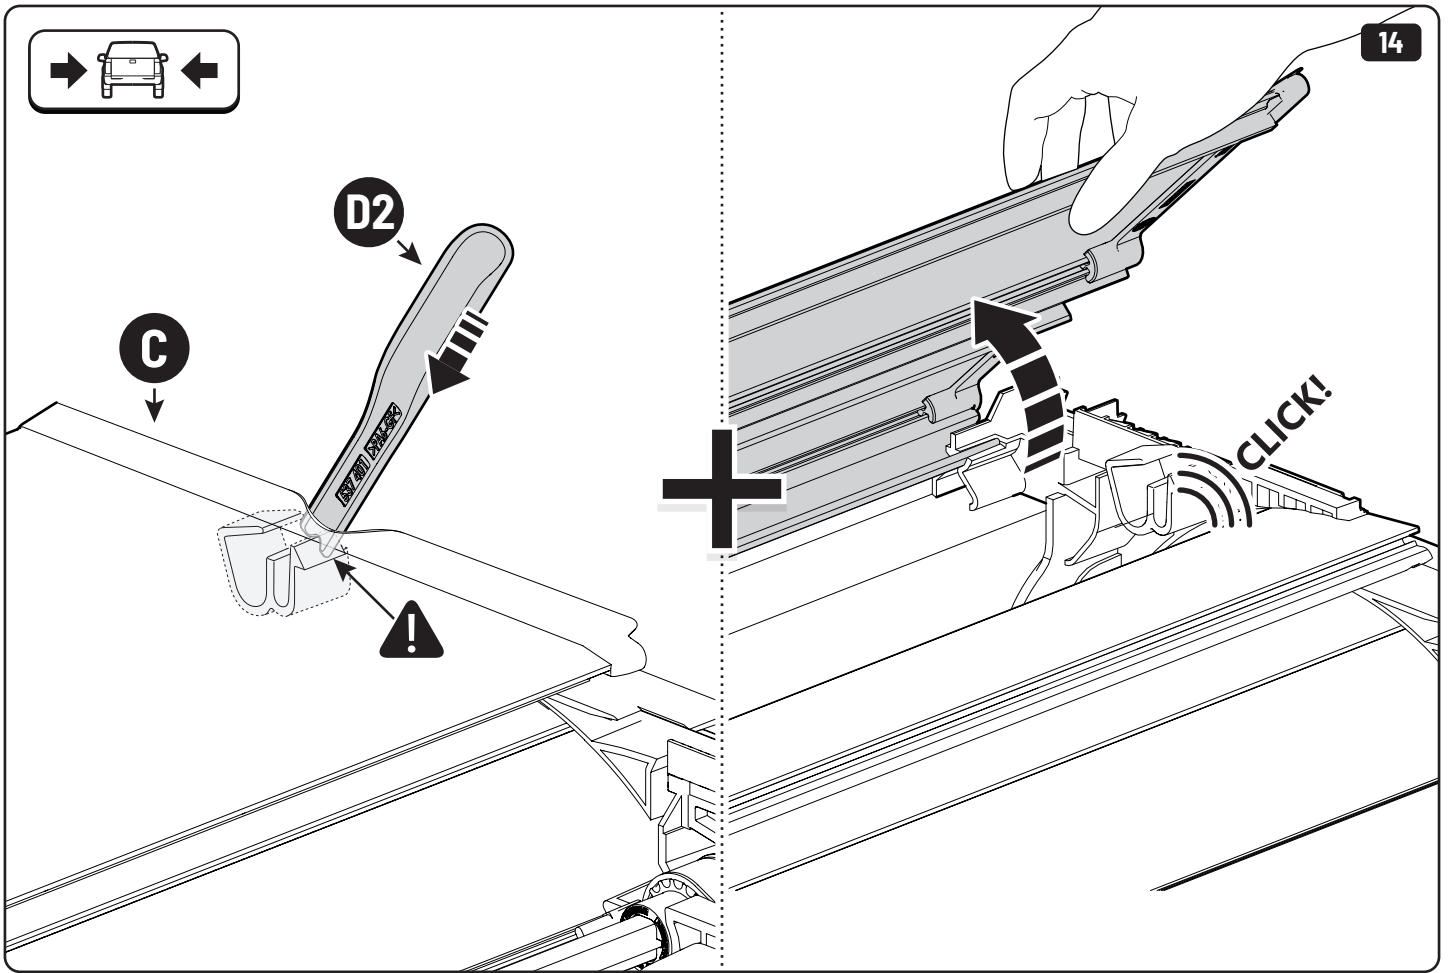


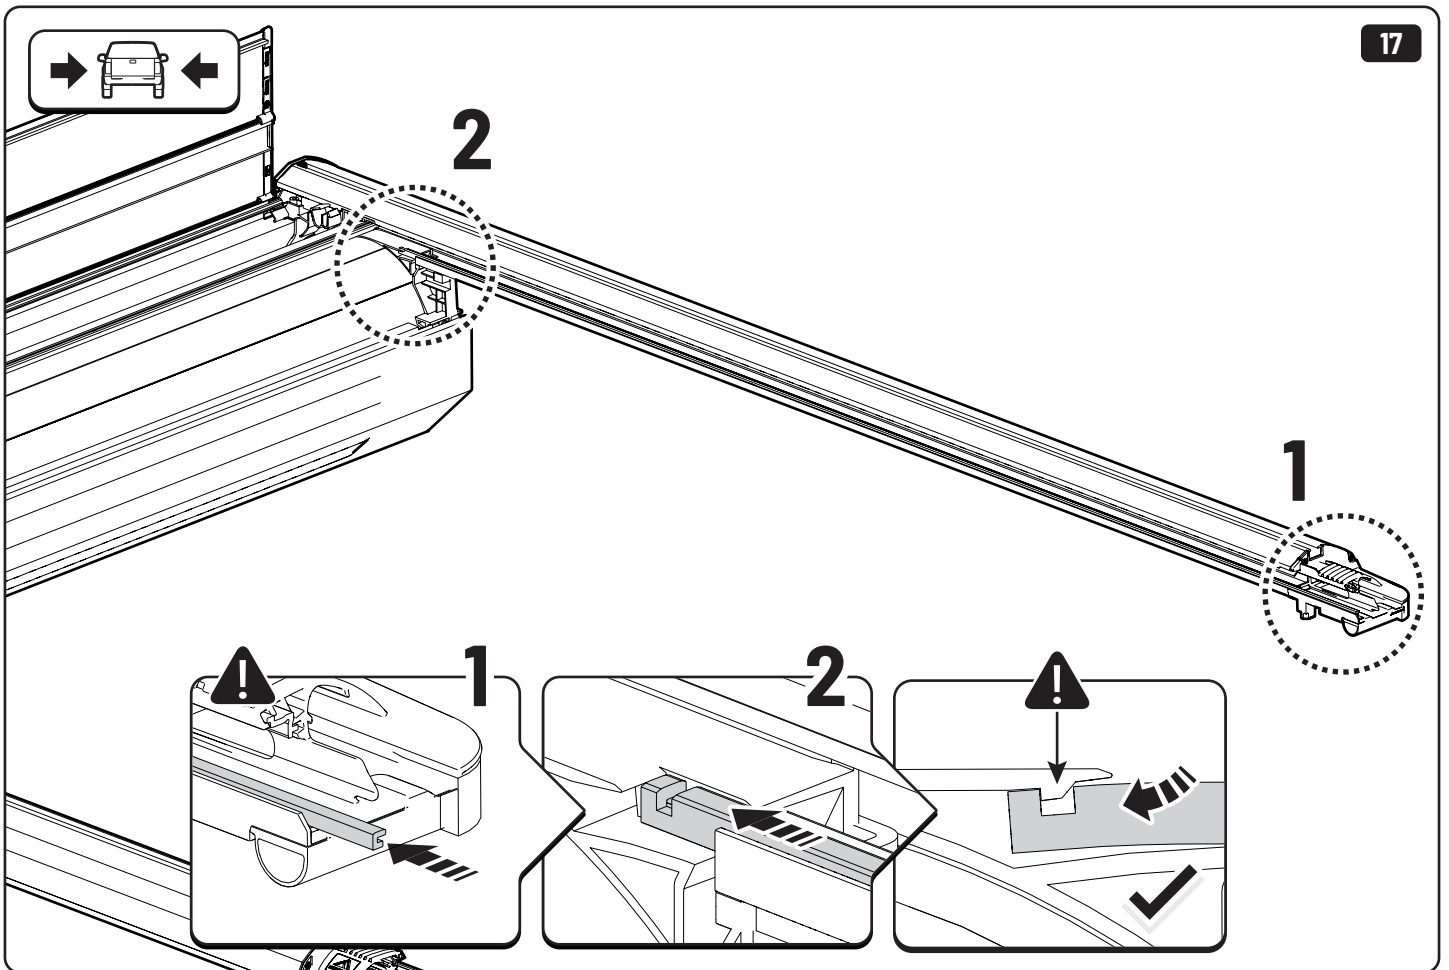
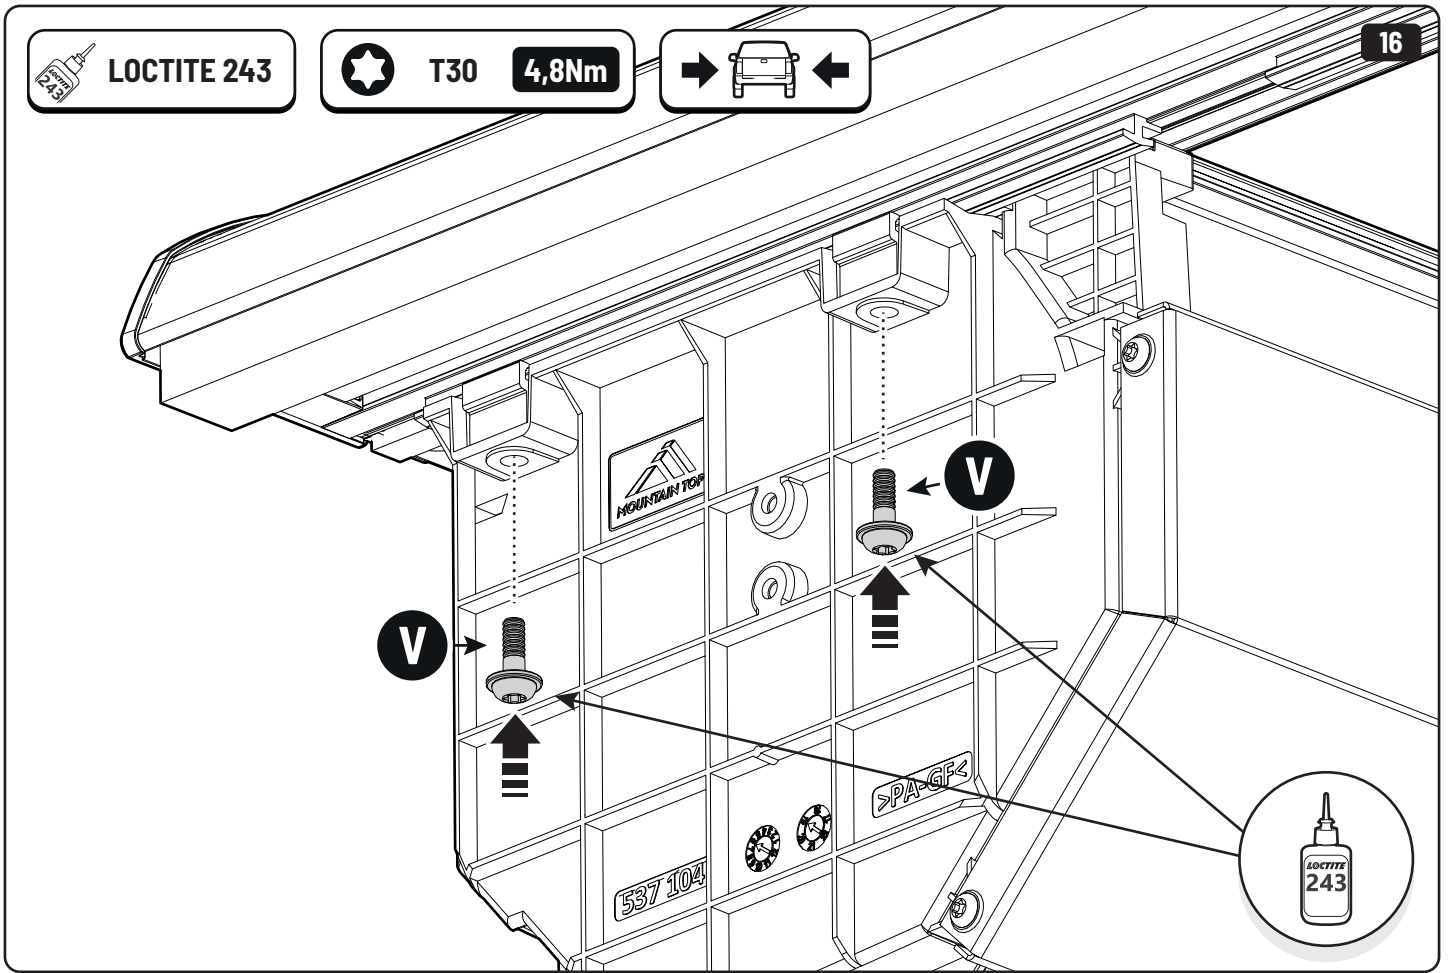


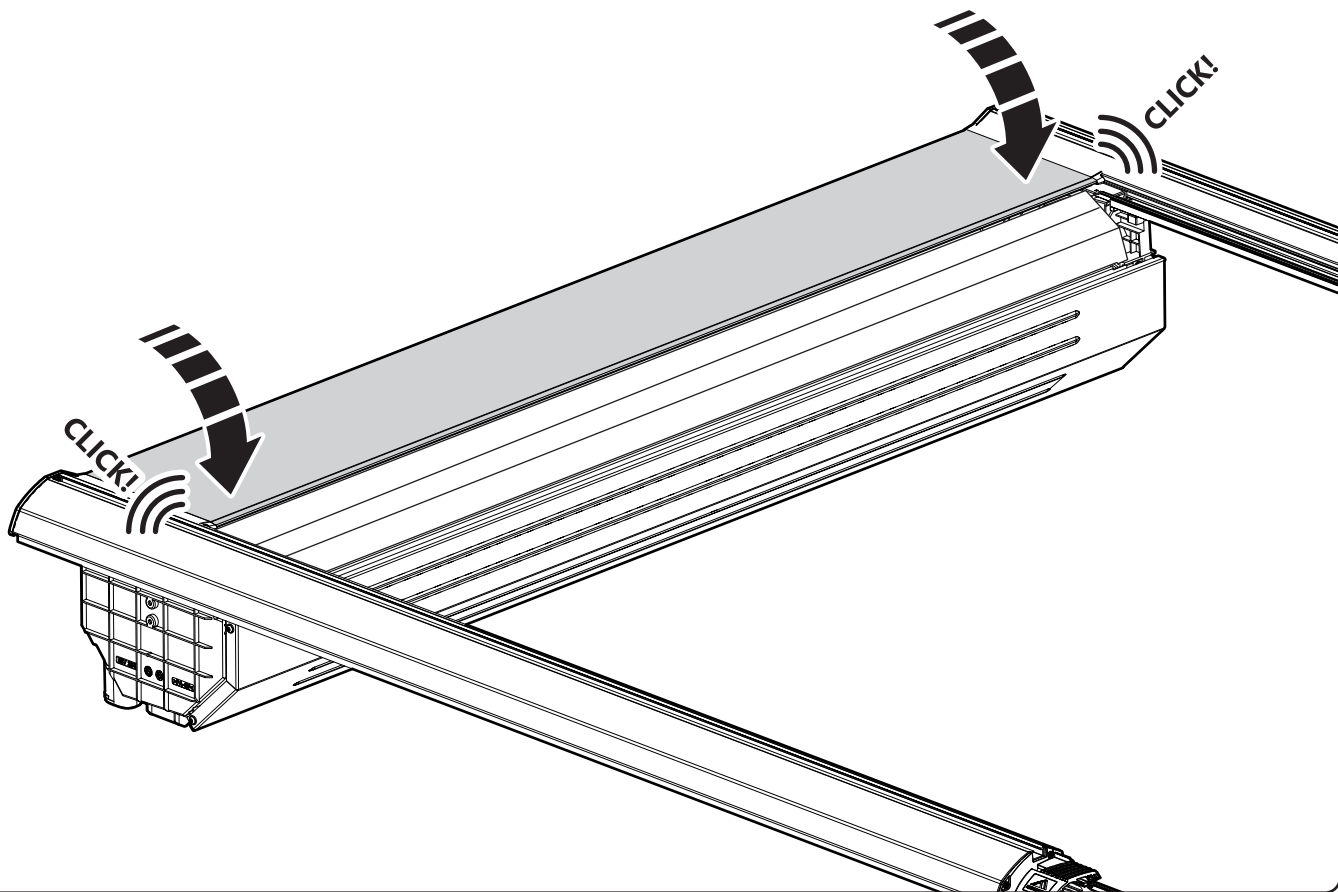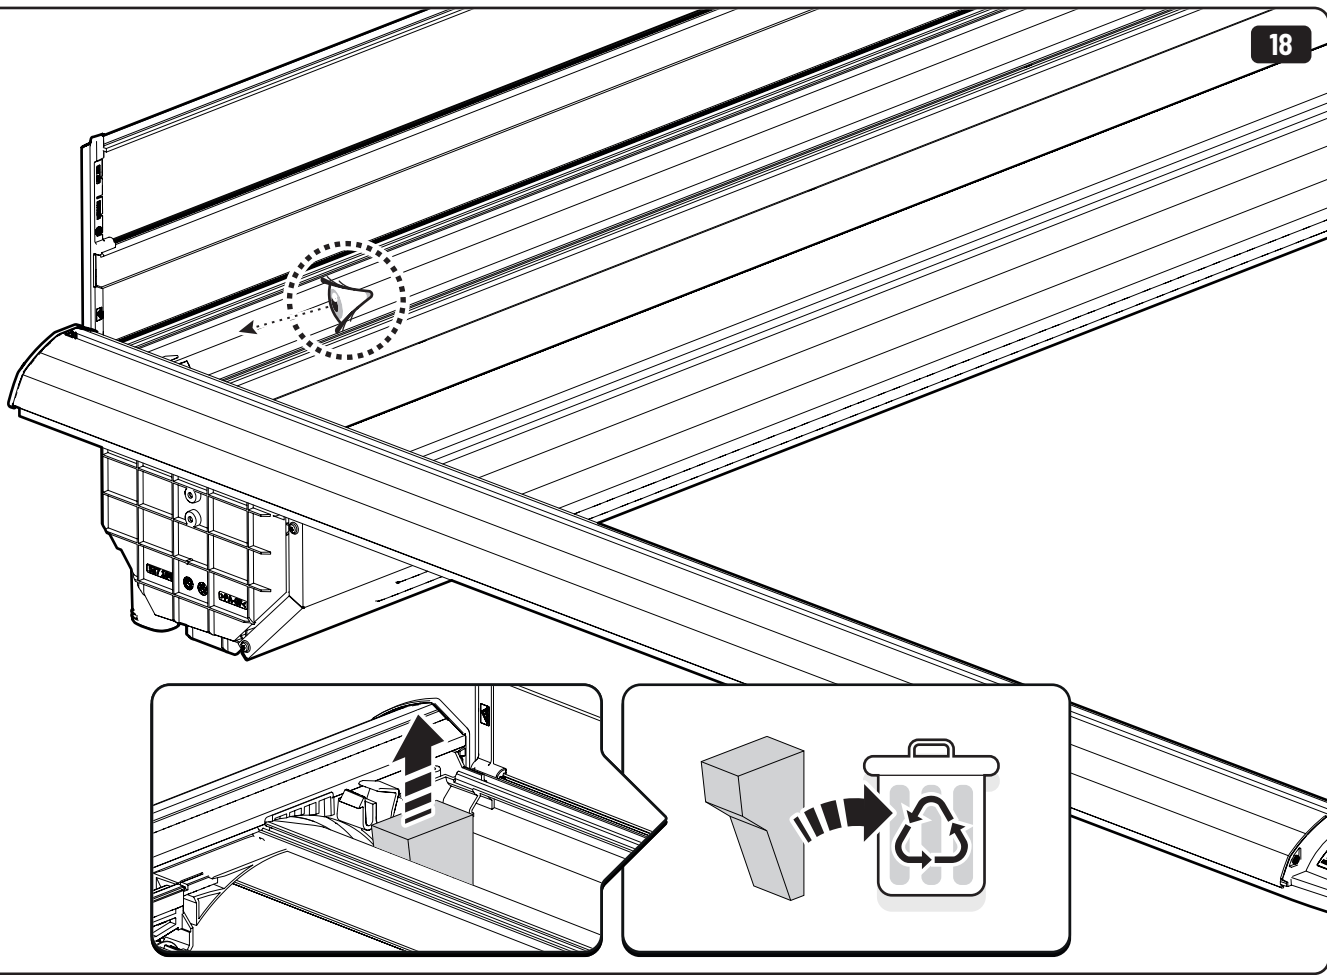

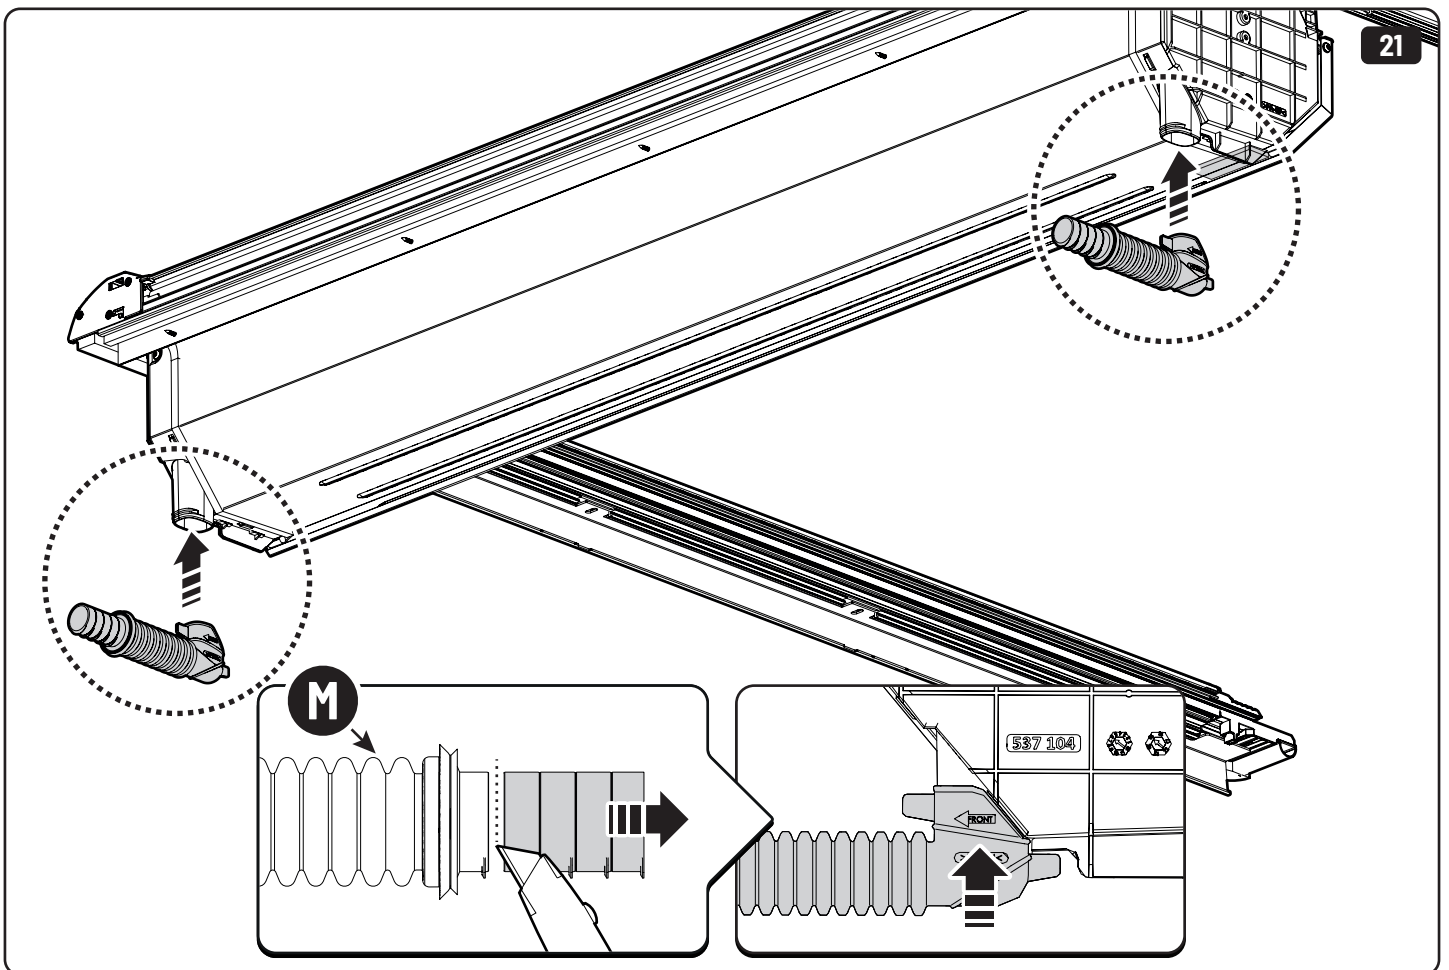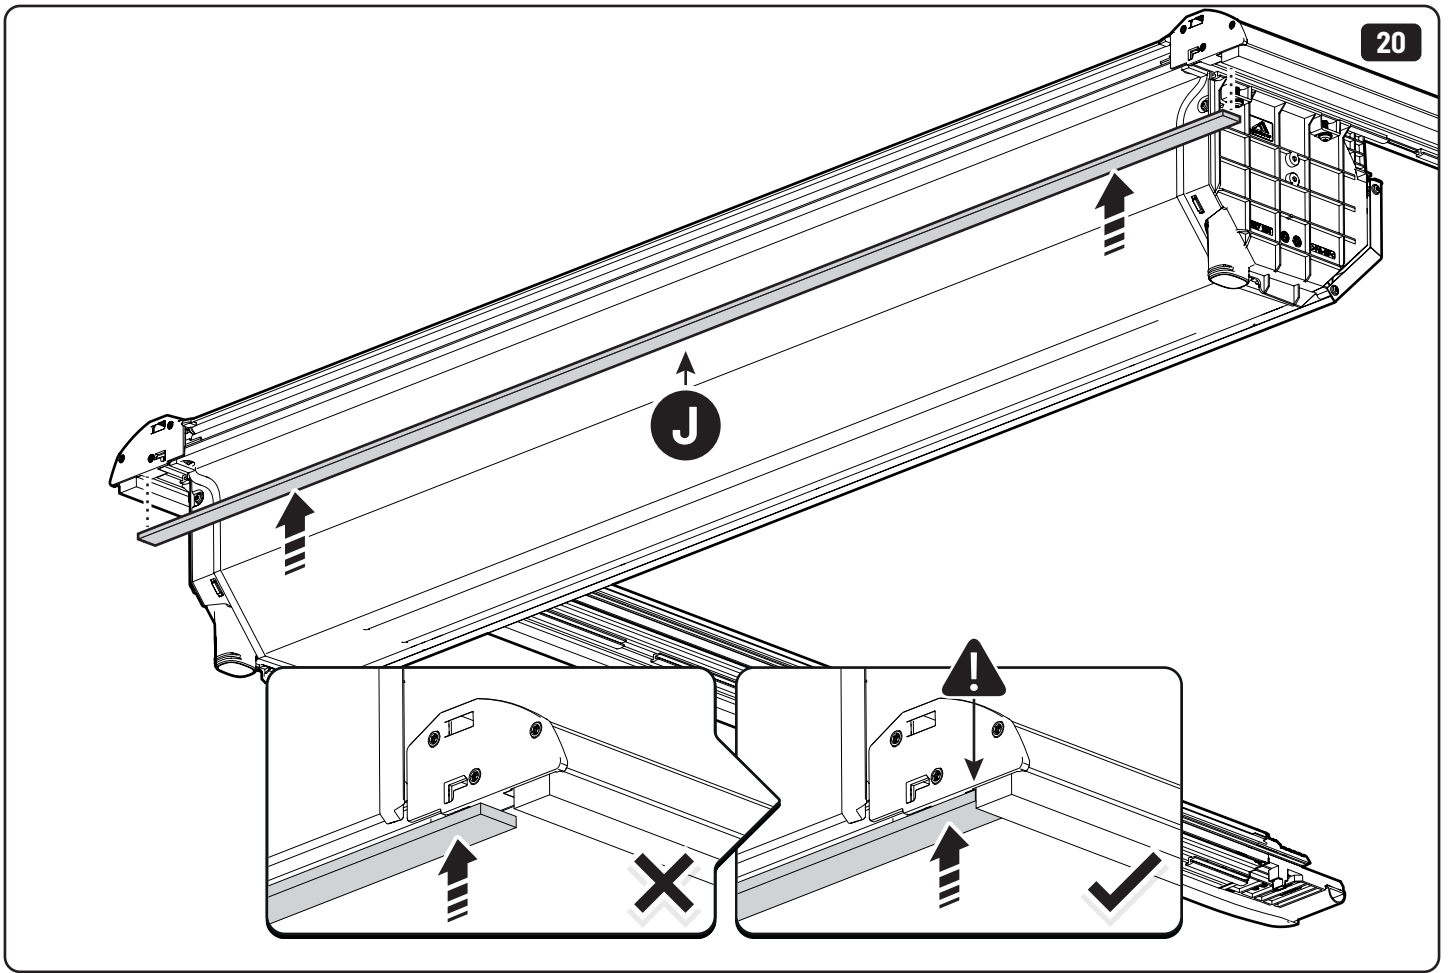

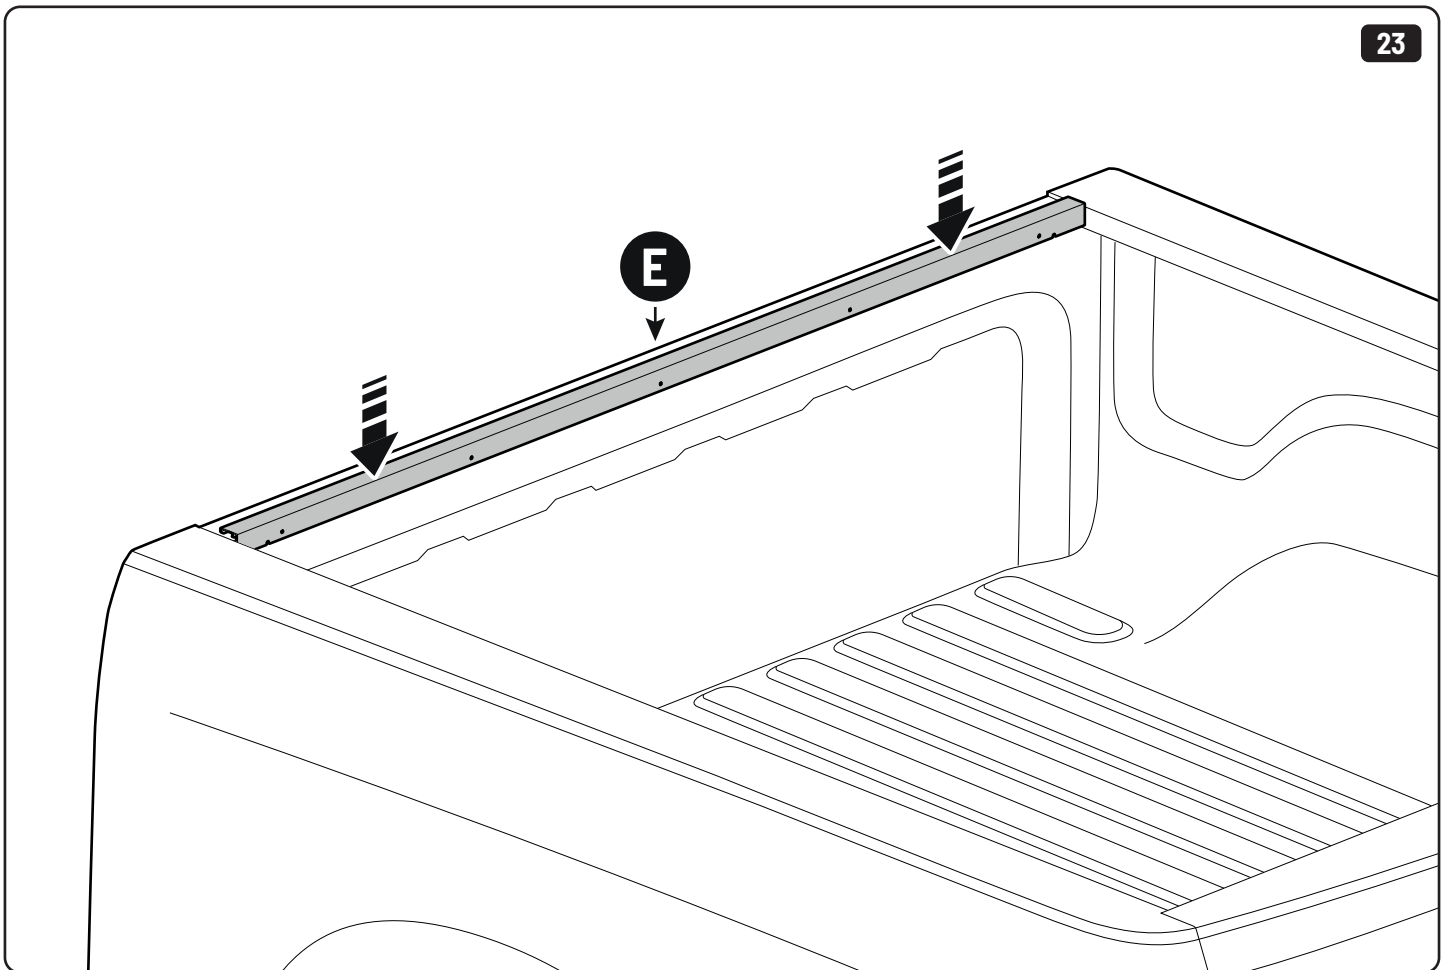
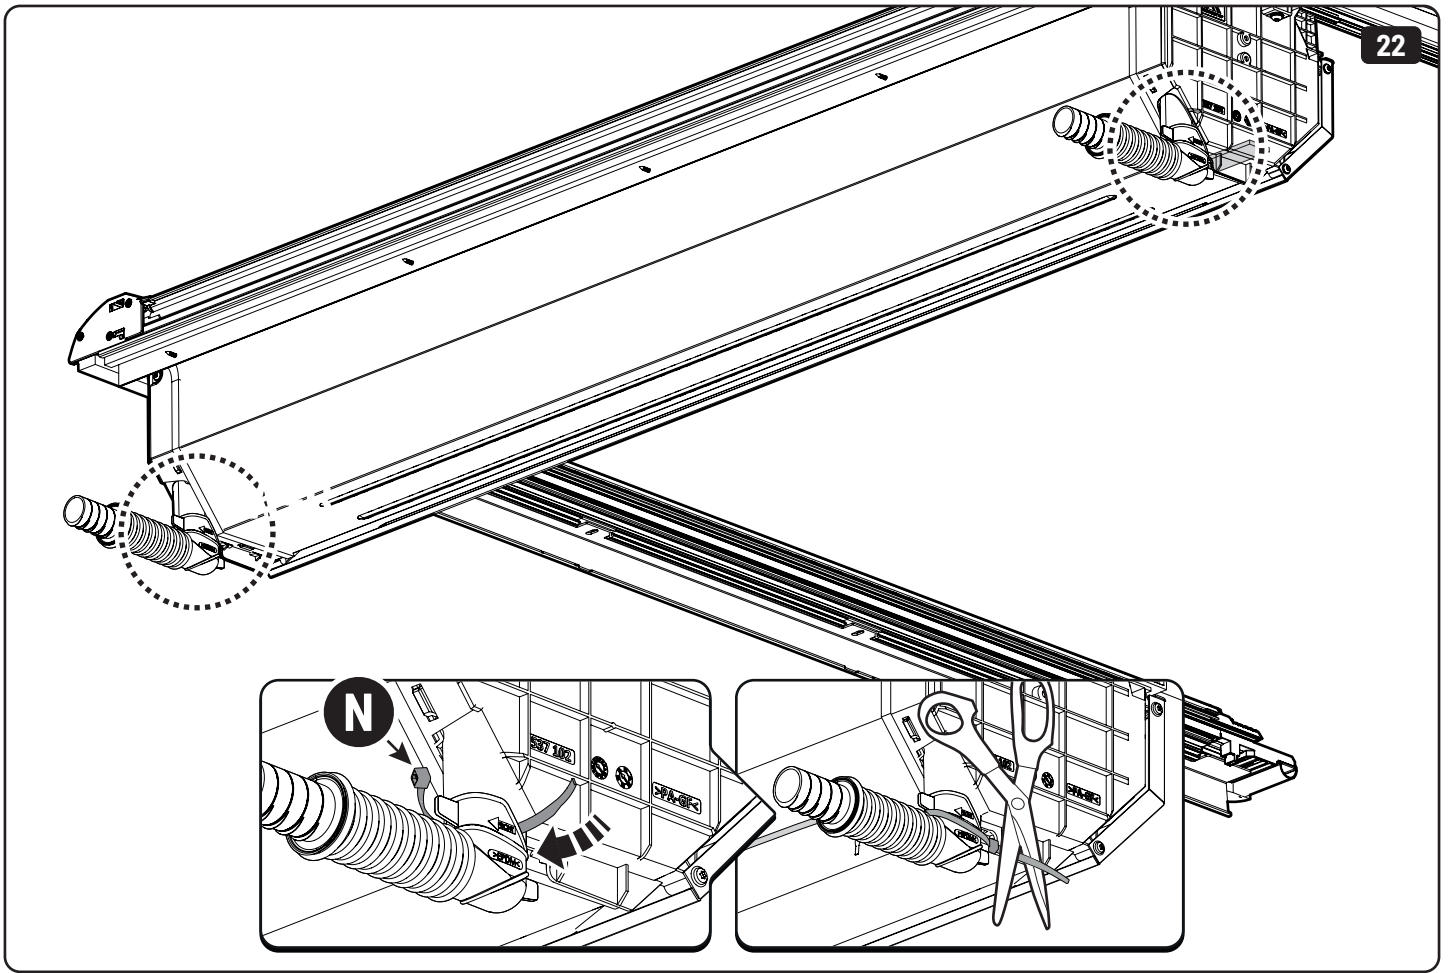


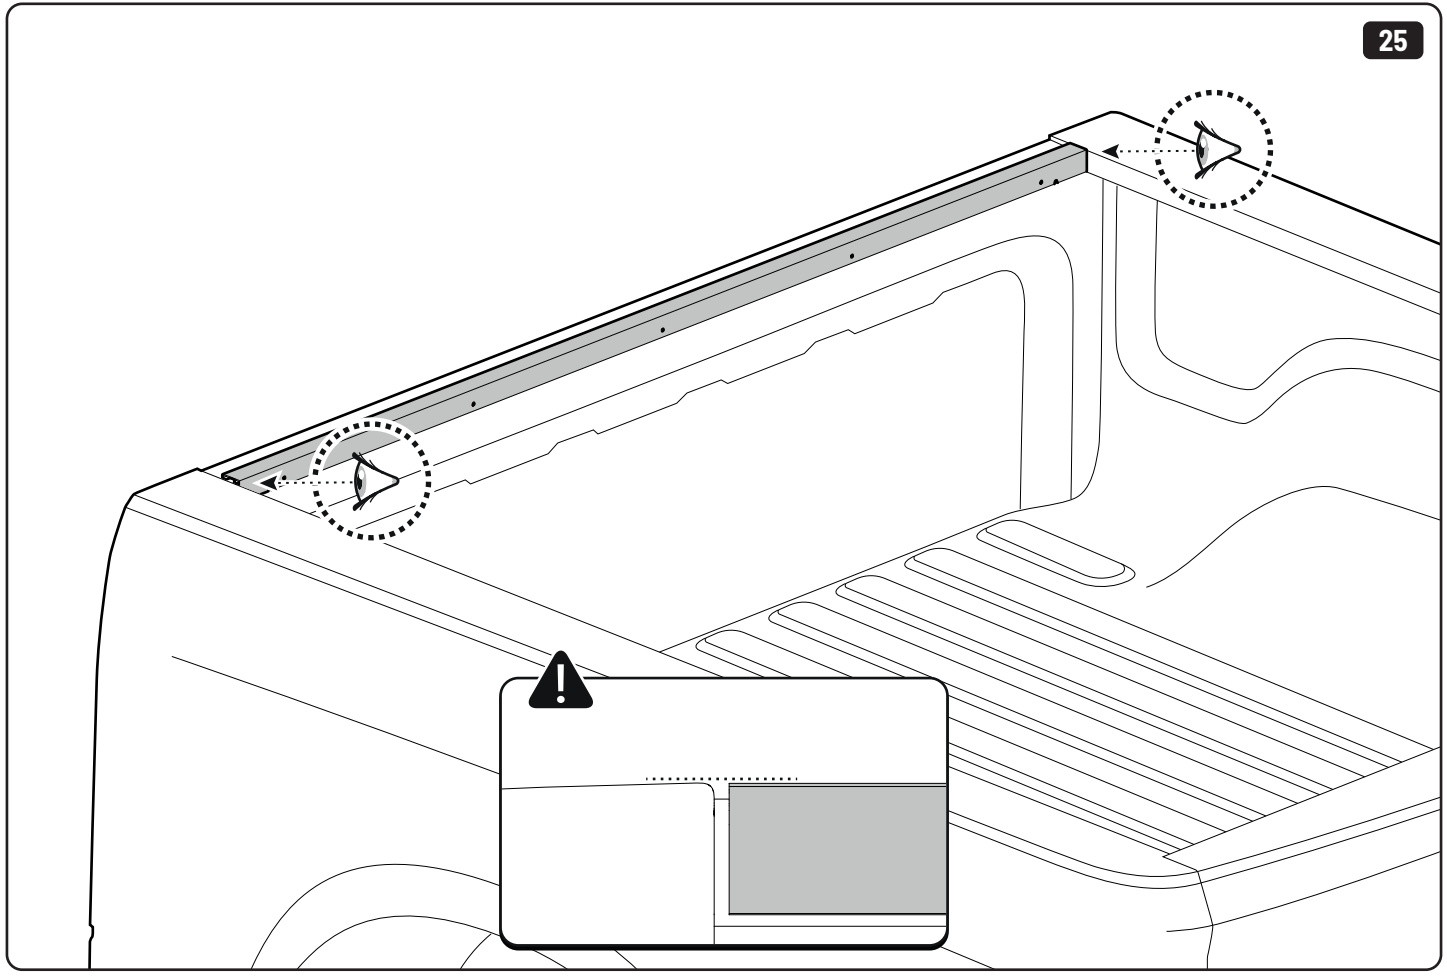
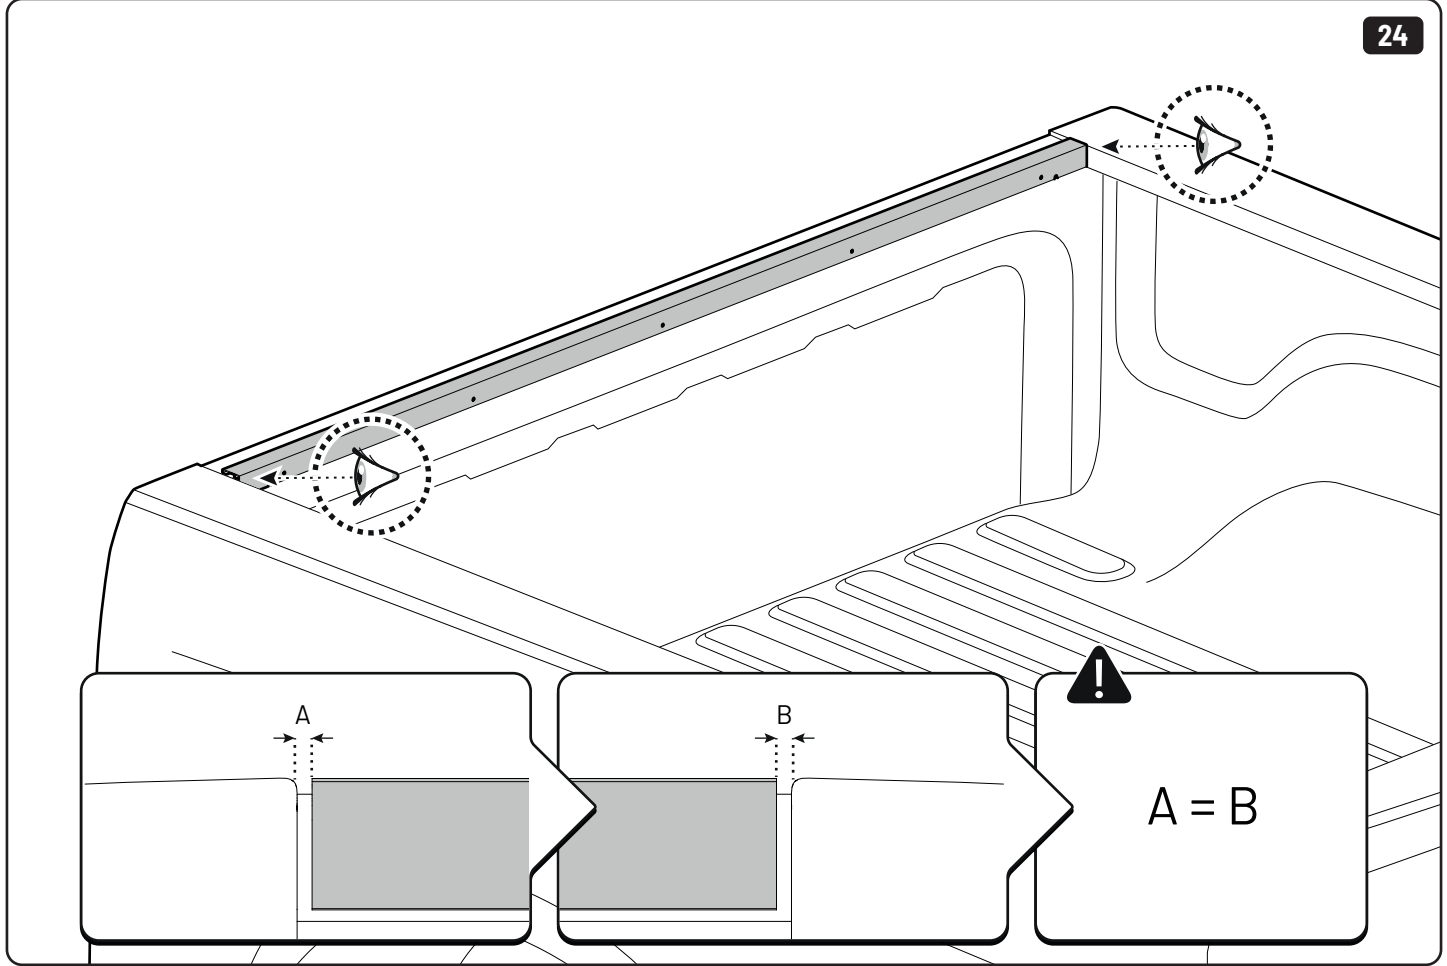


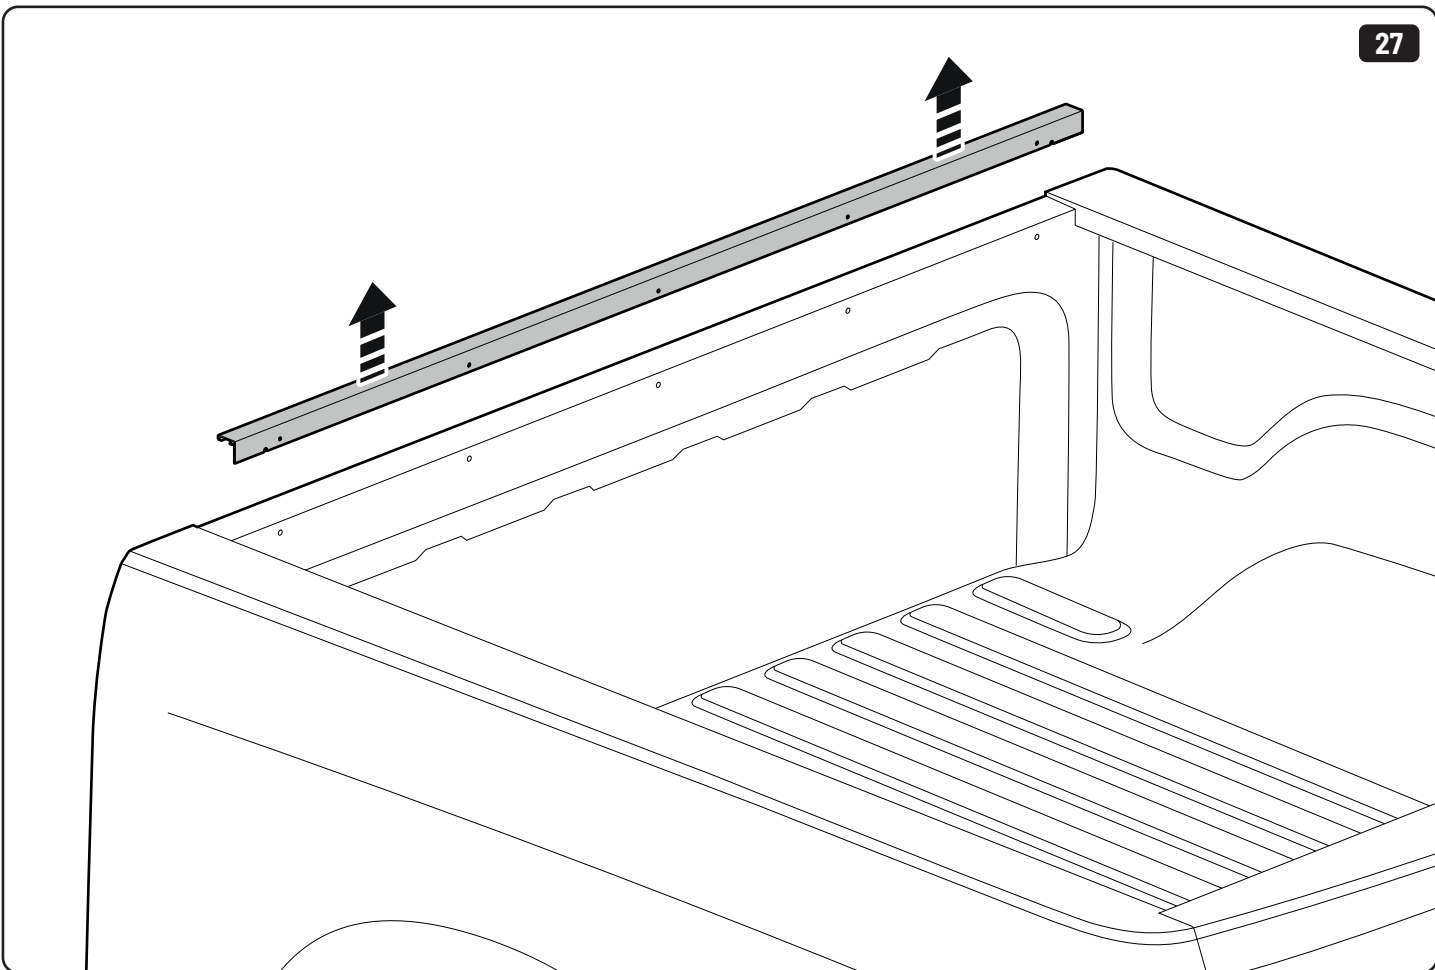
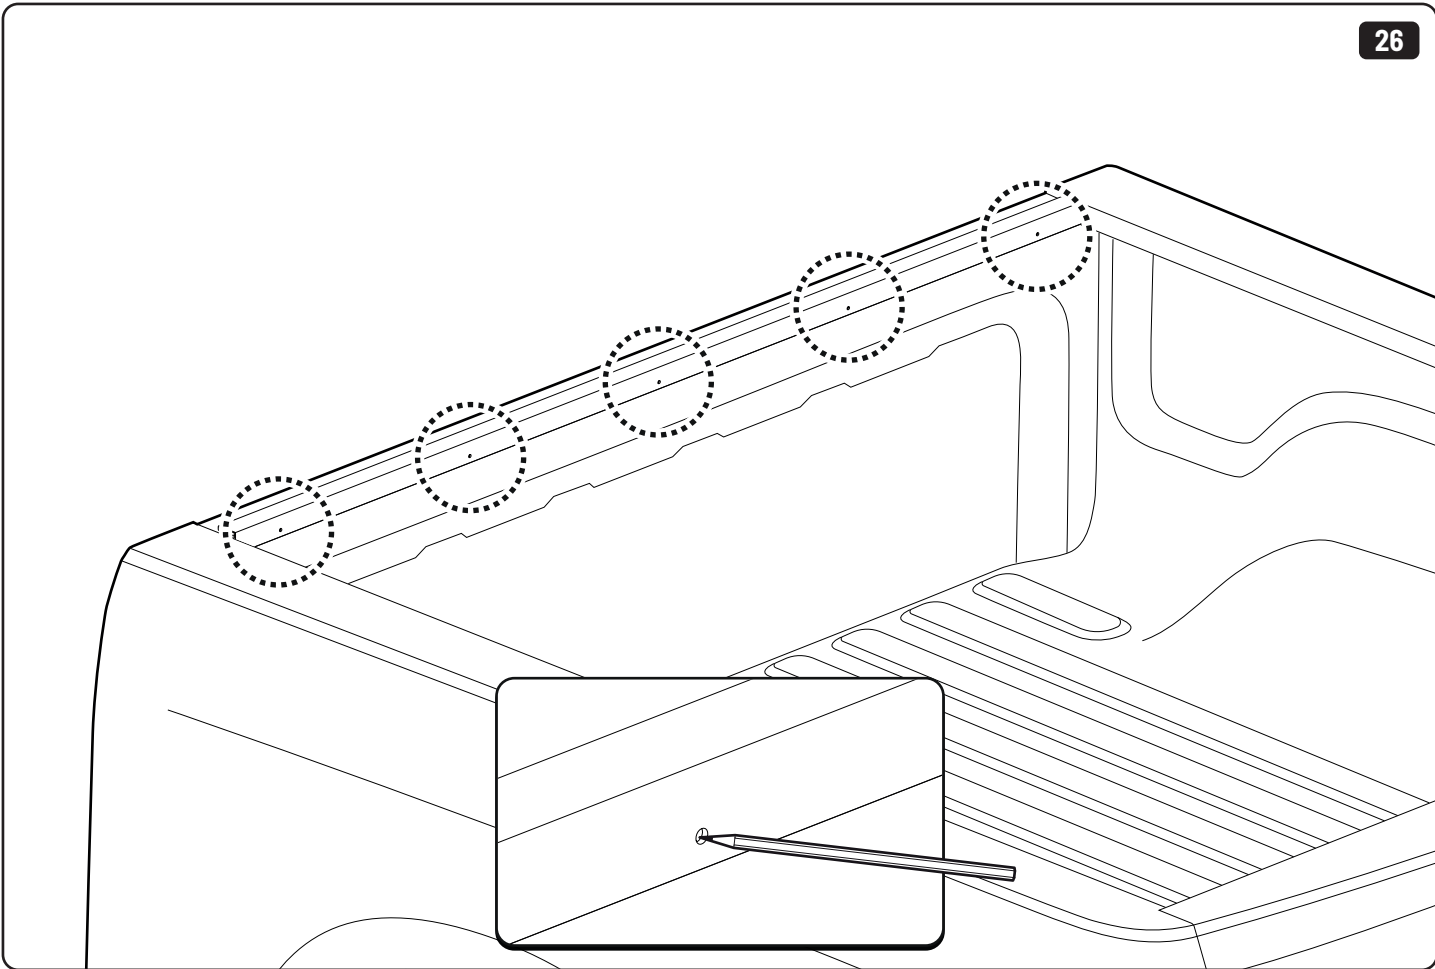




 Ø 2,4mm 3/32"




 Rust Protection

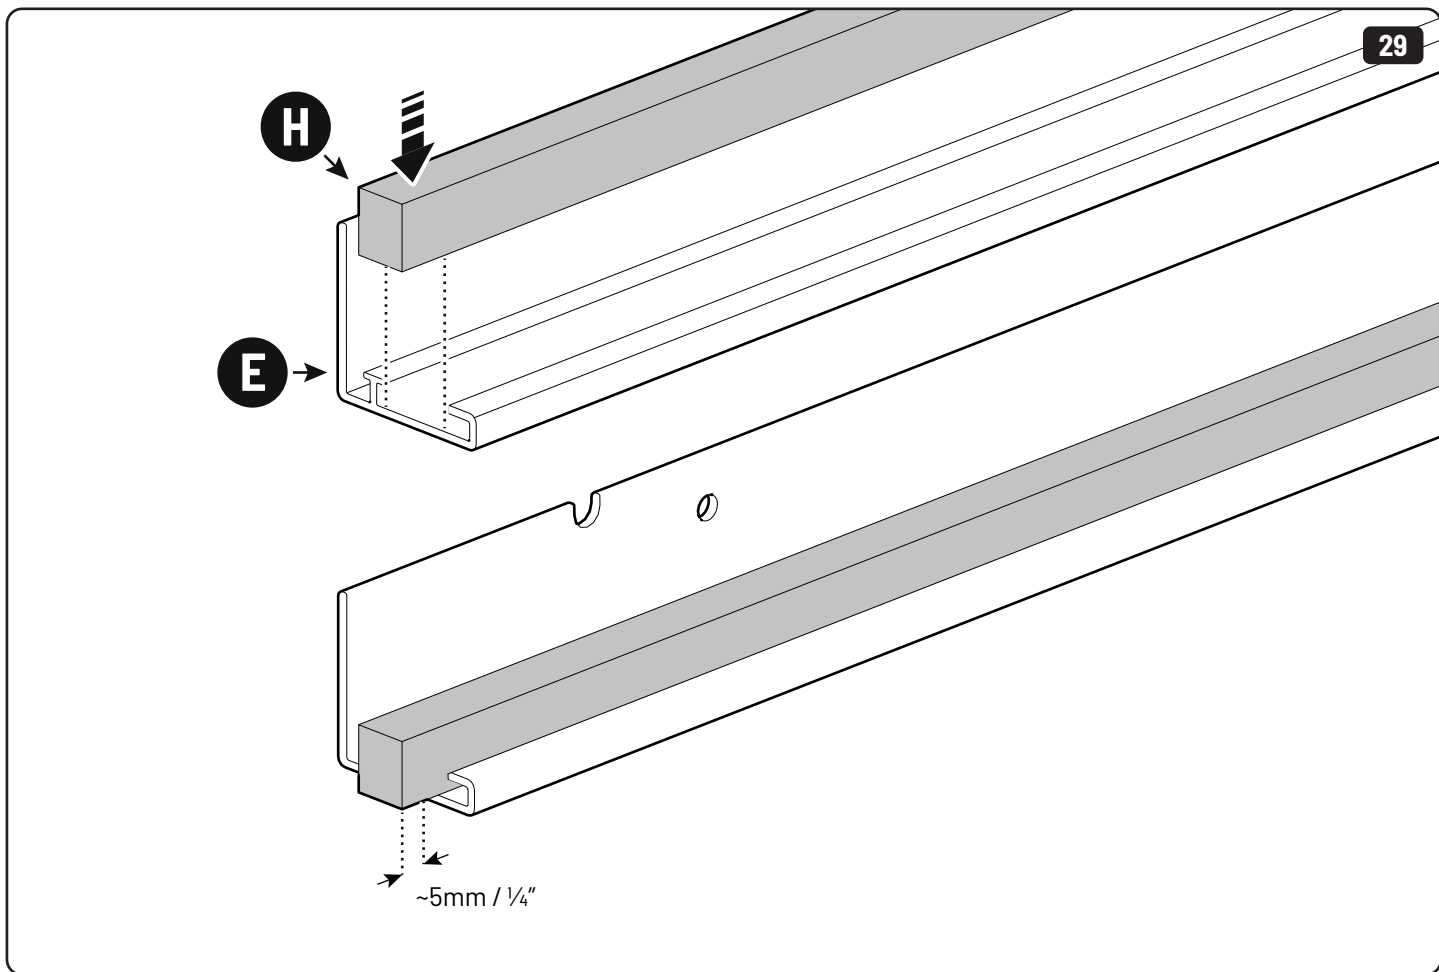
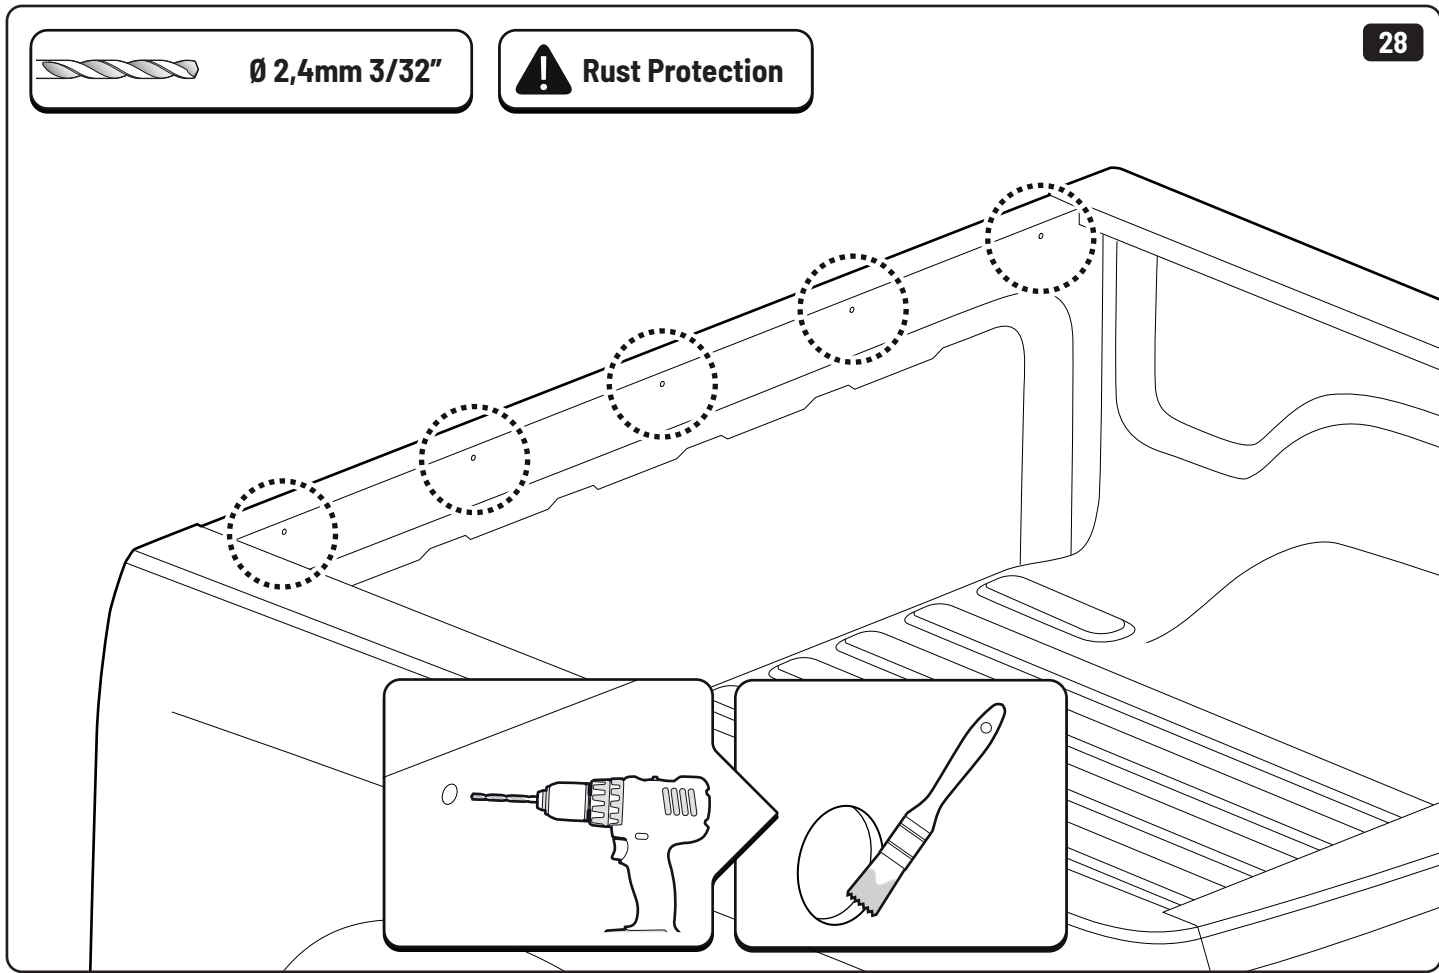



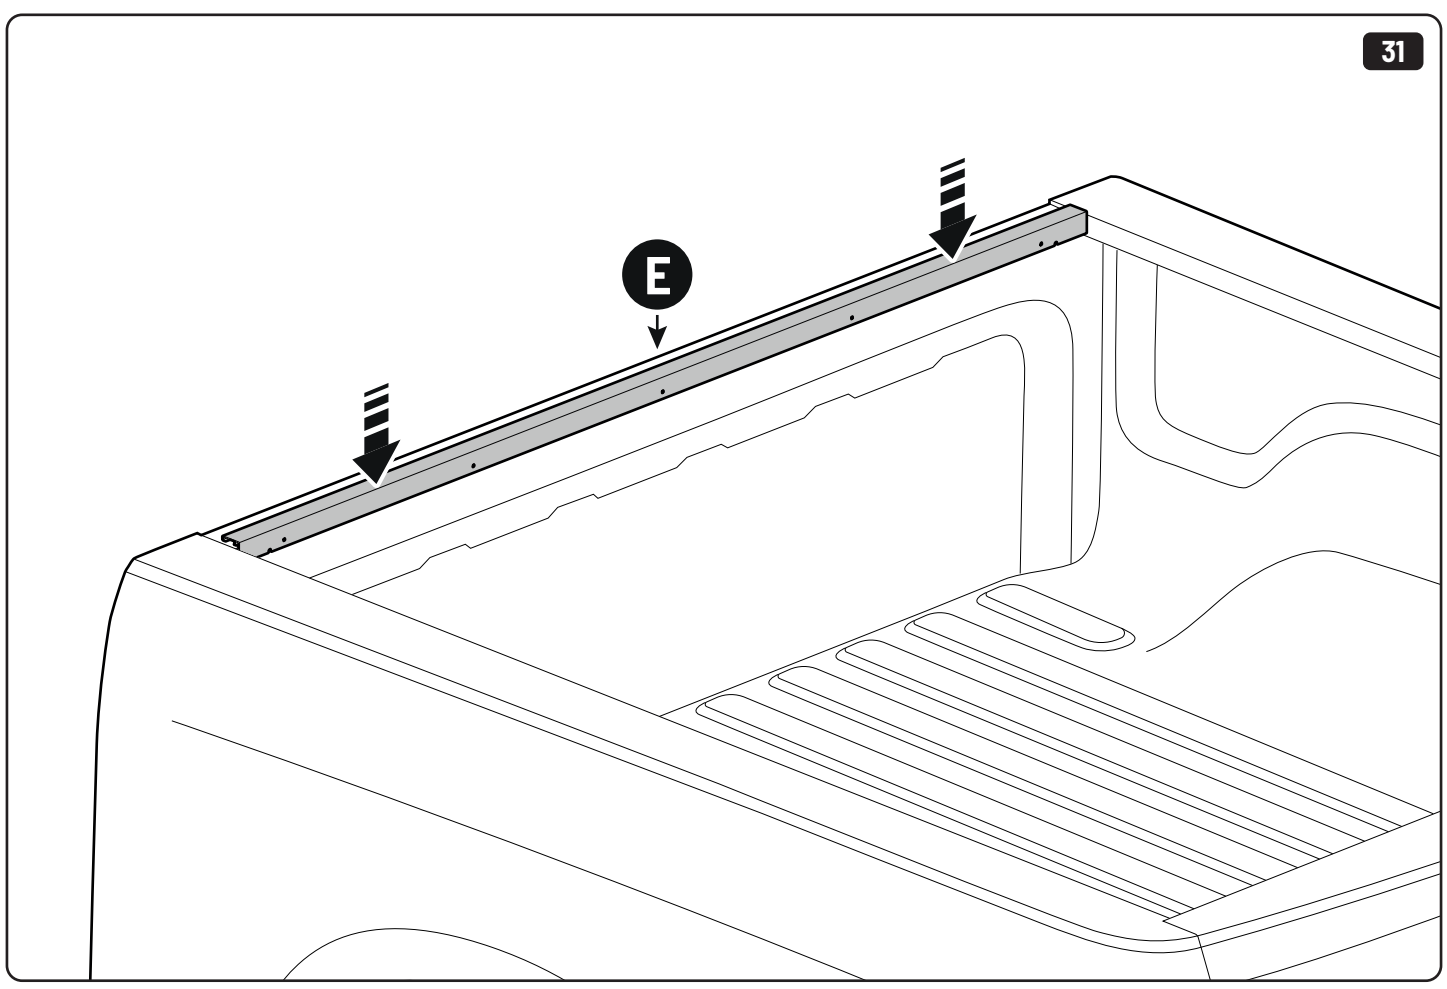
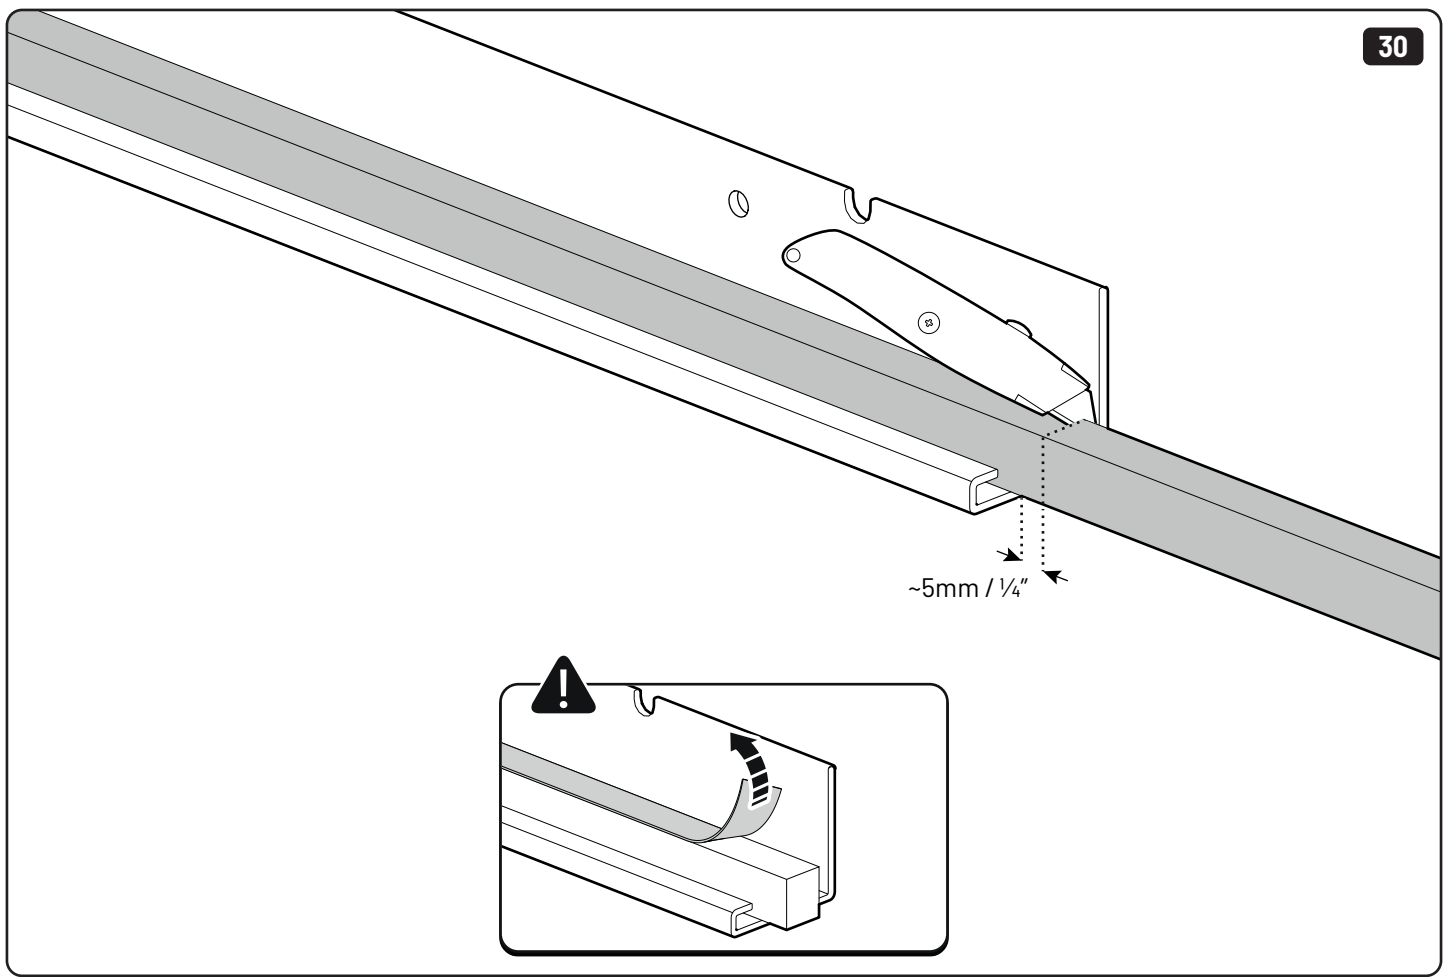


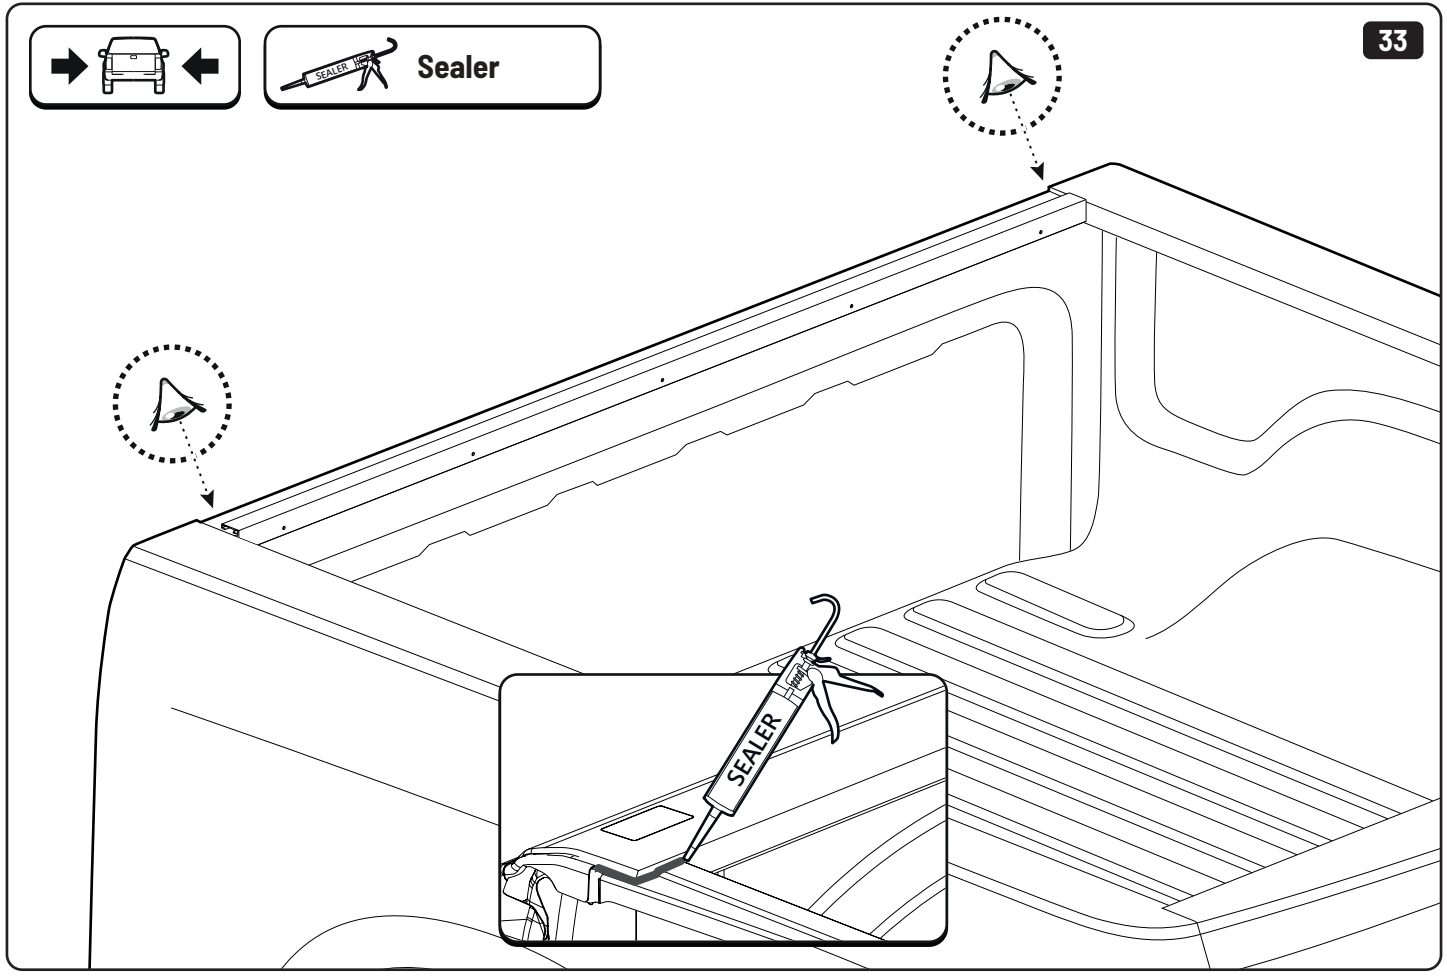
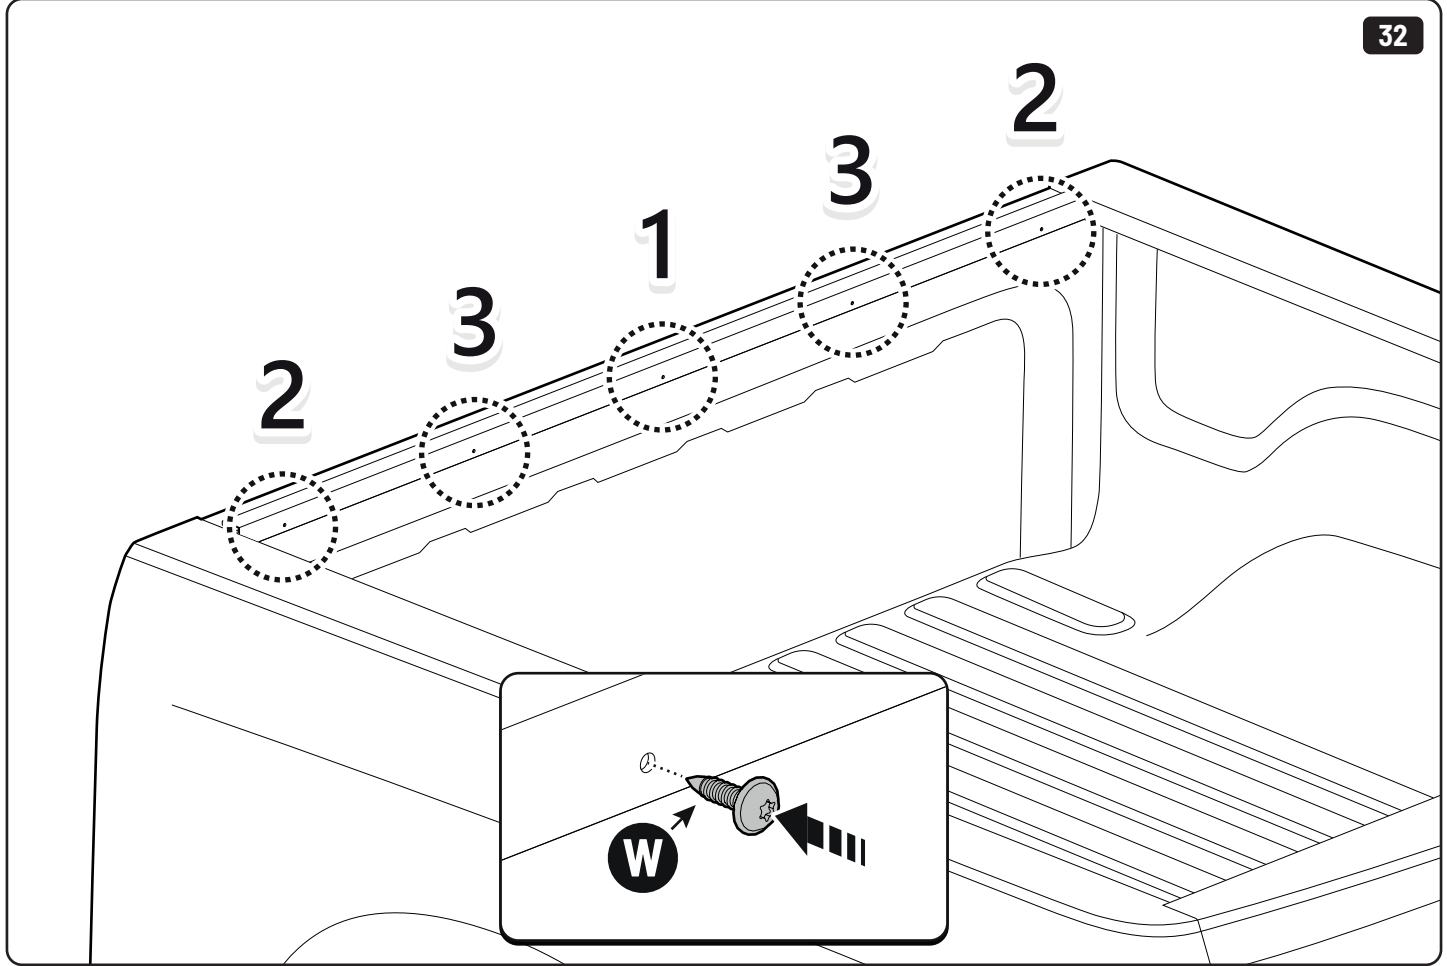


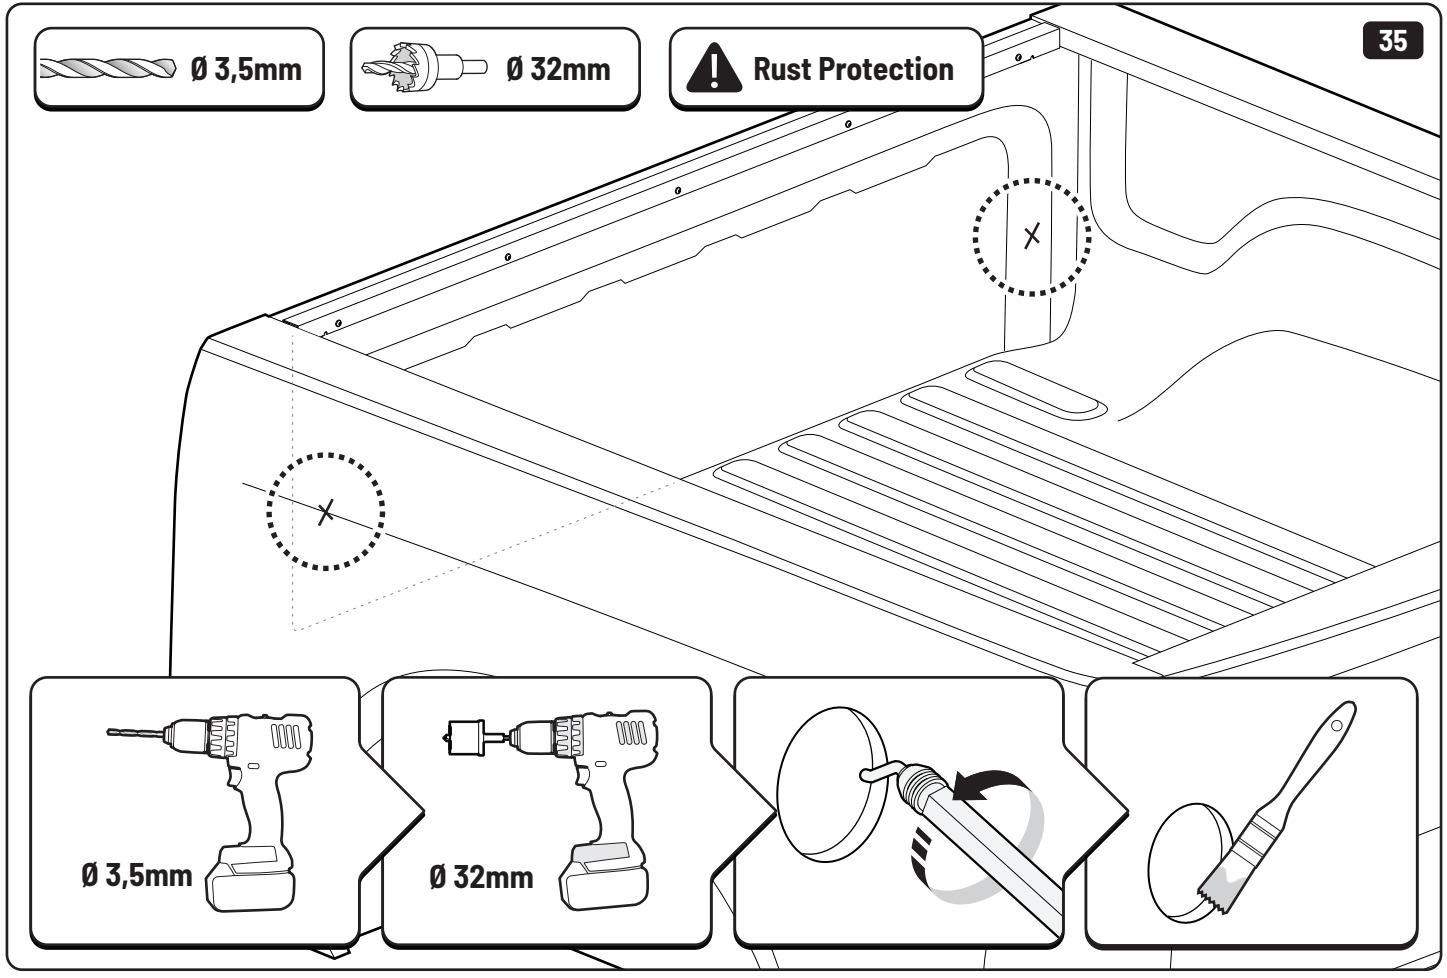
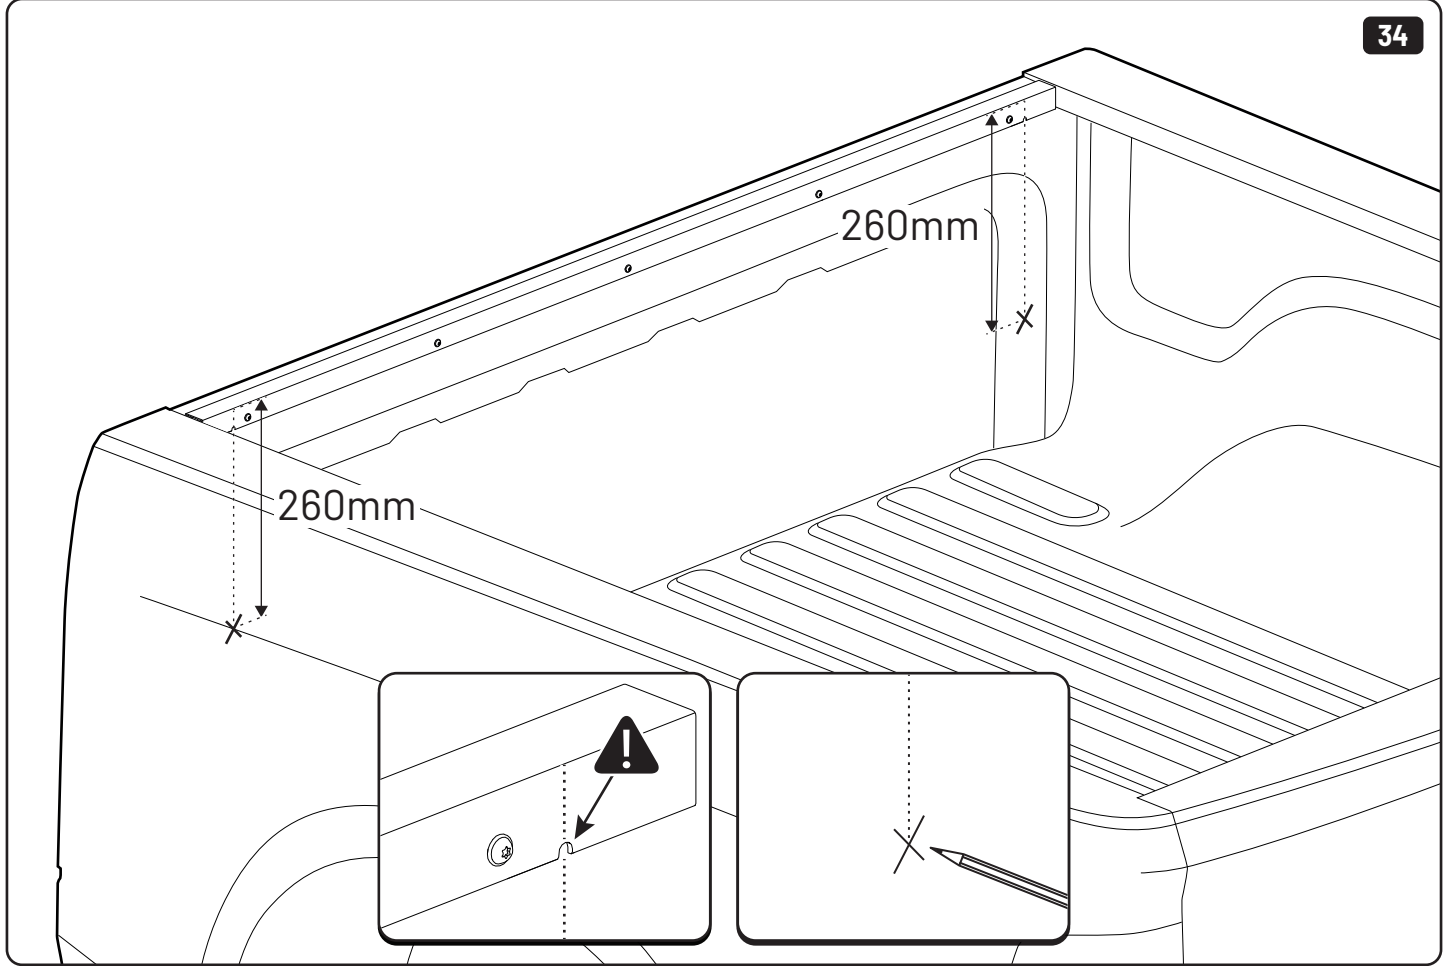


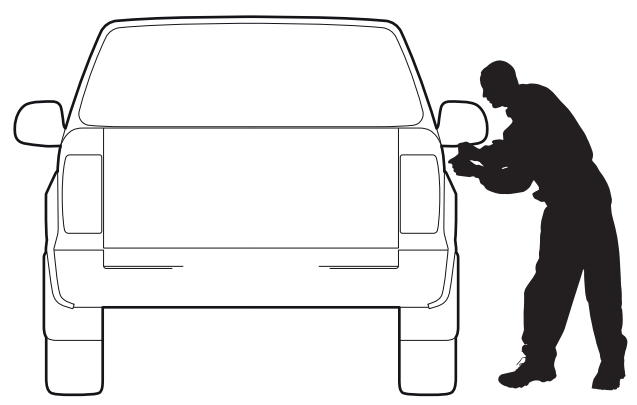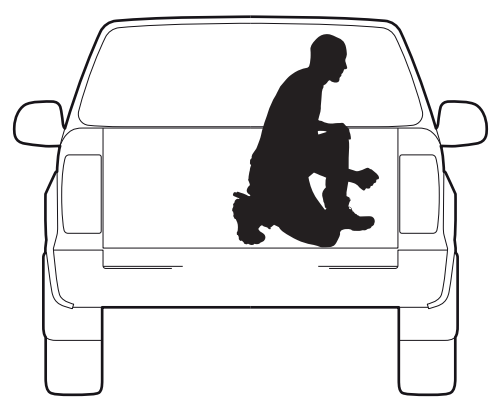
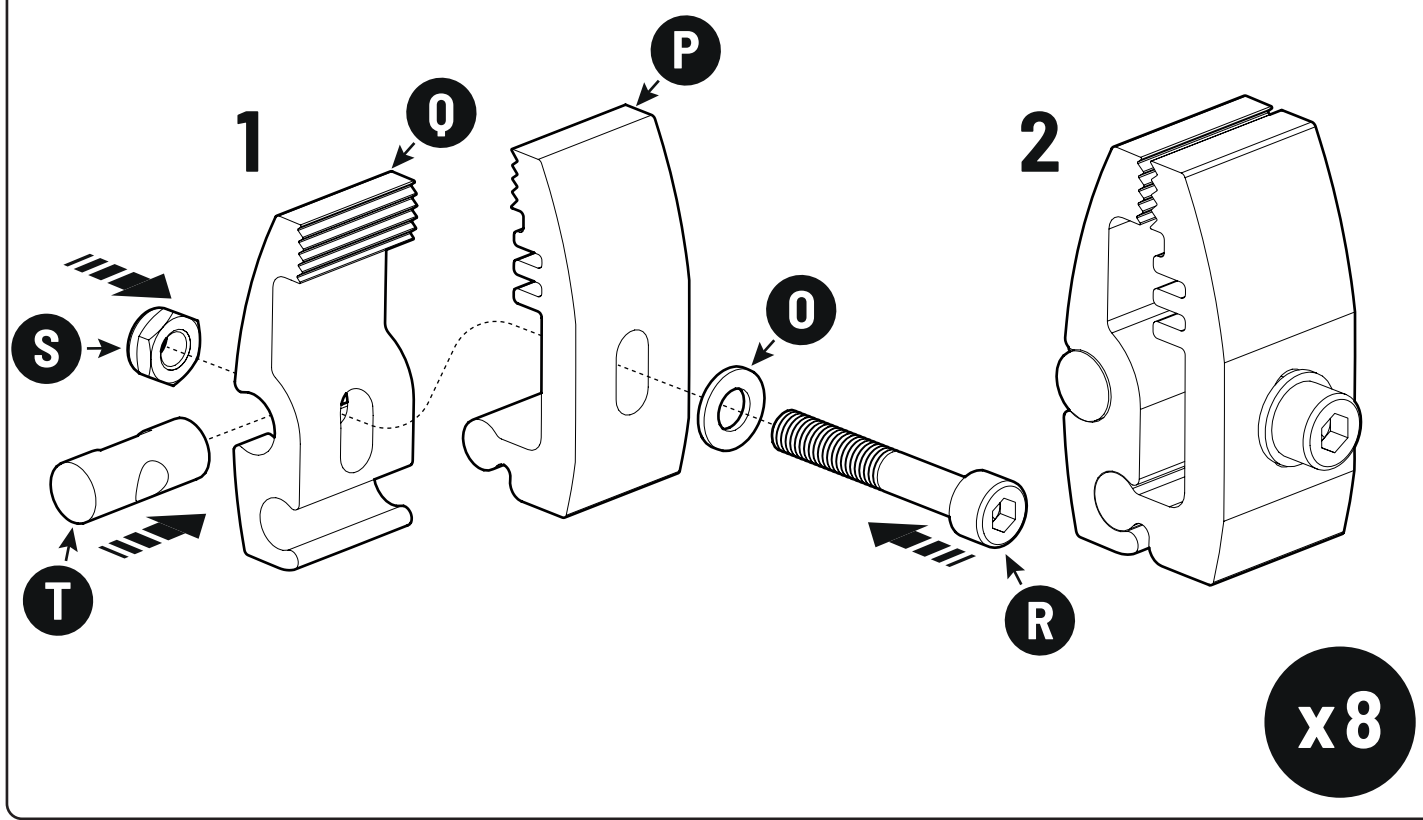


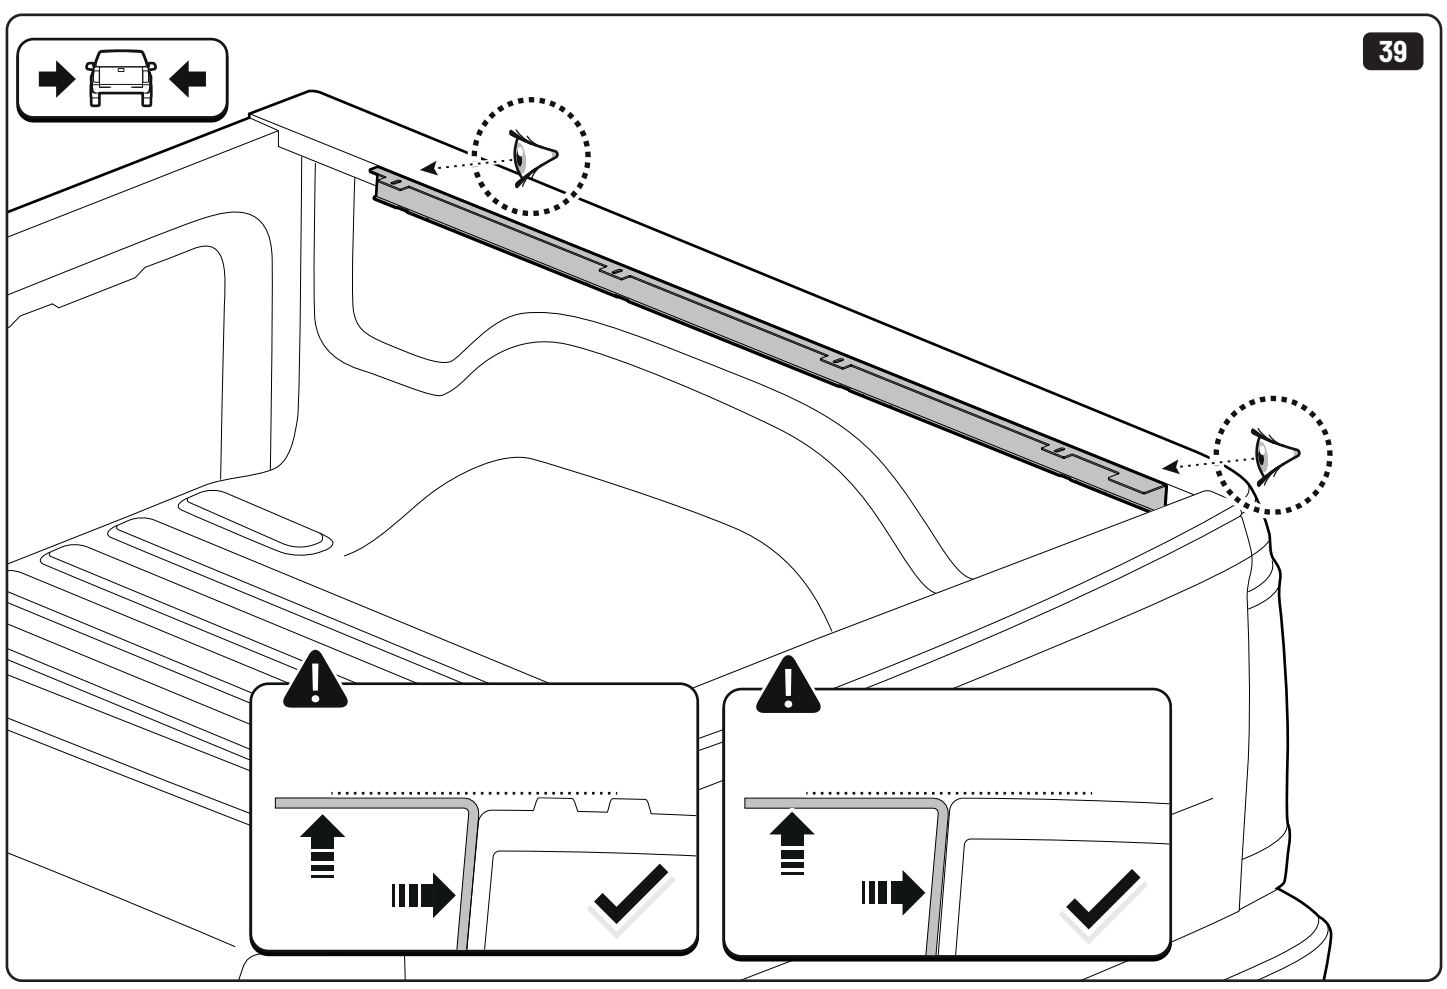
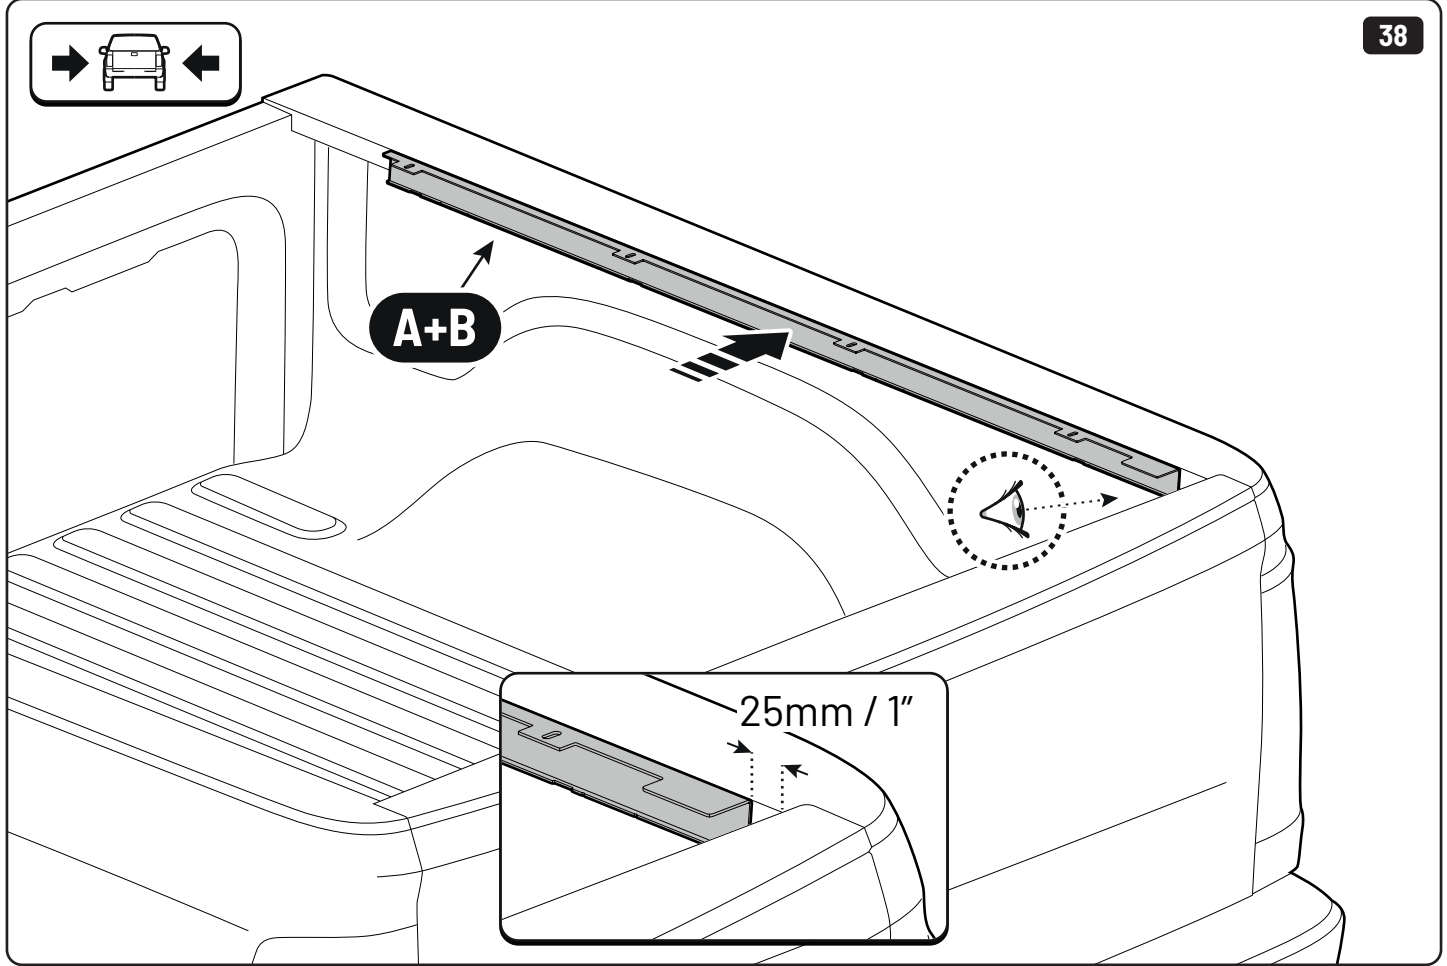


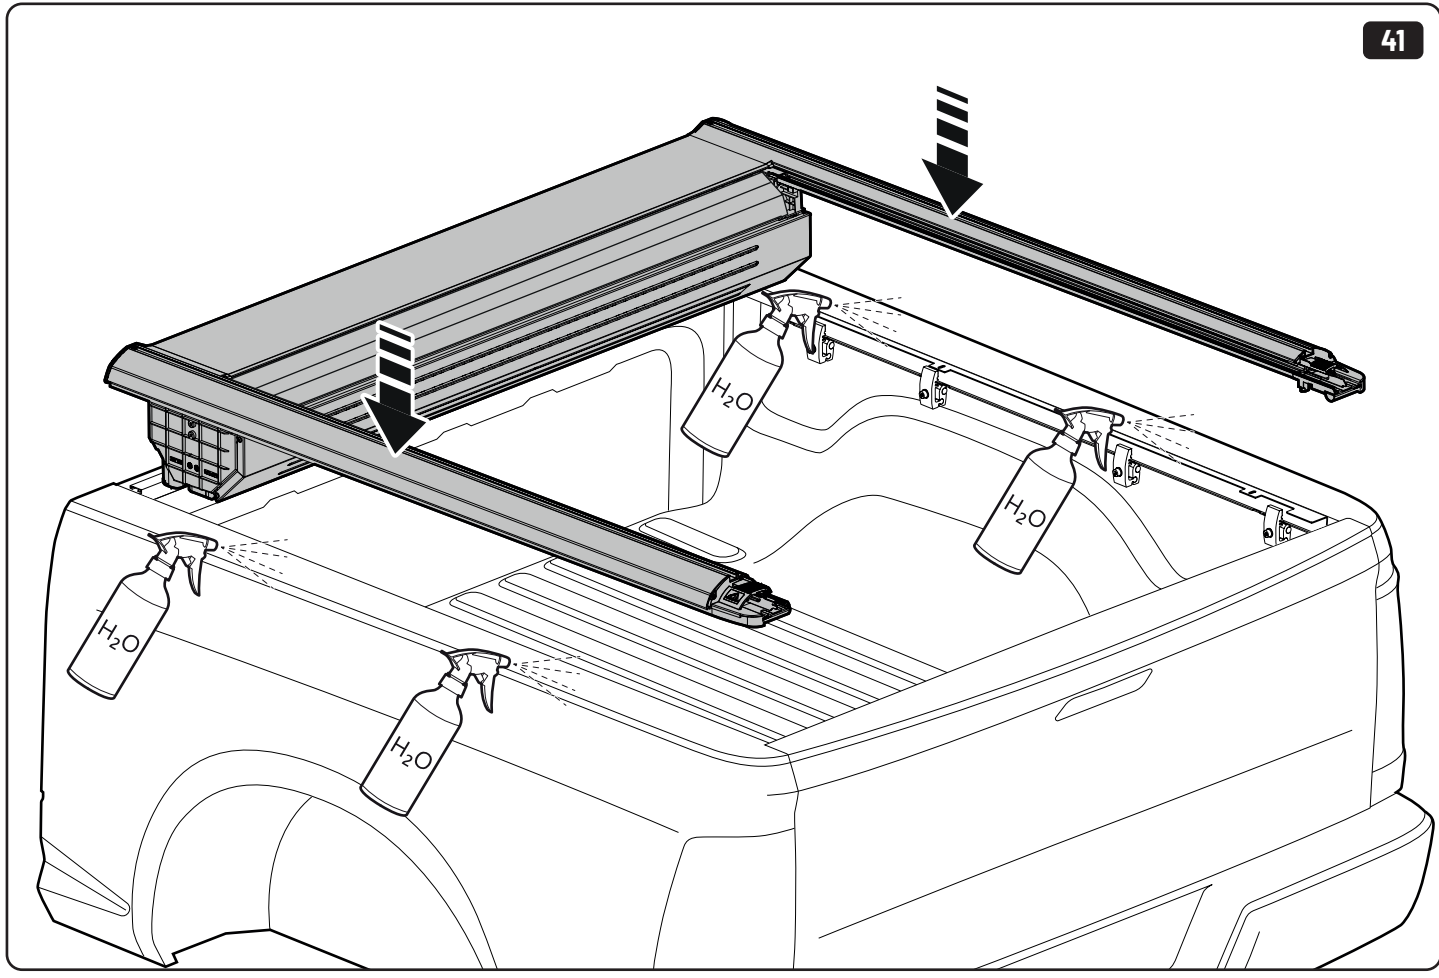
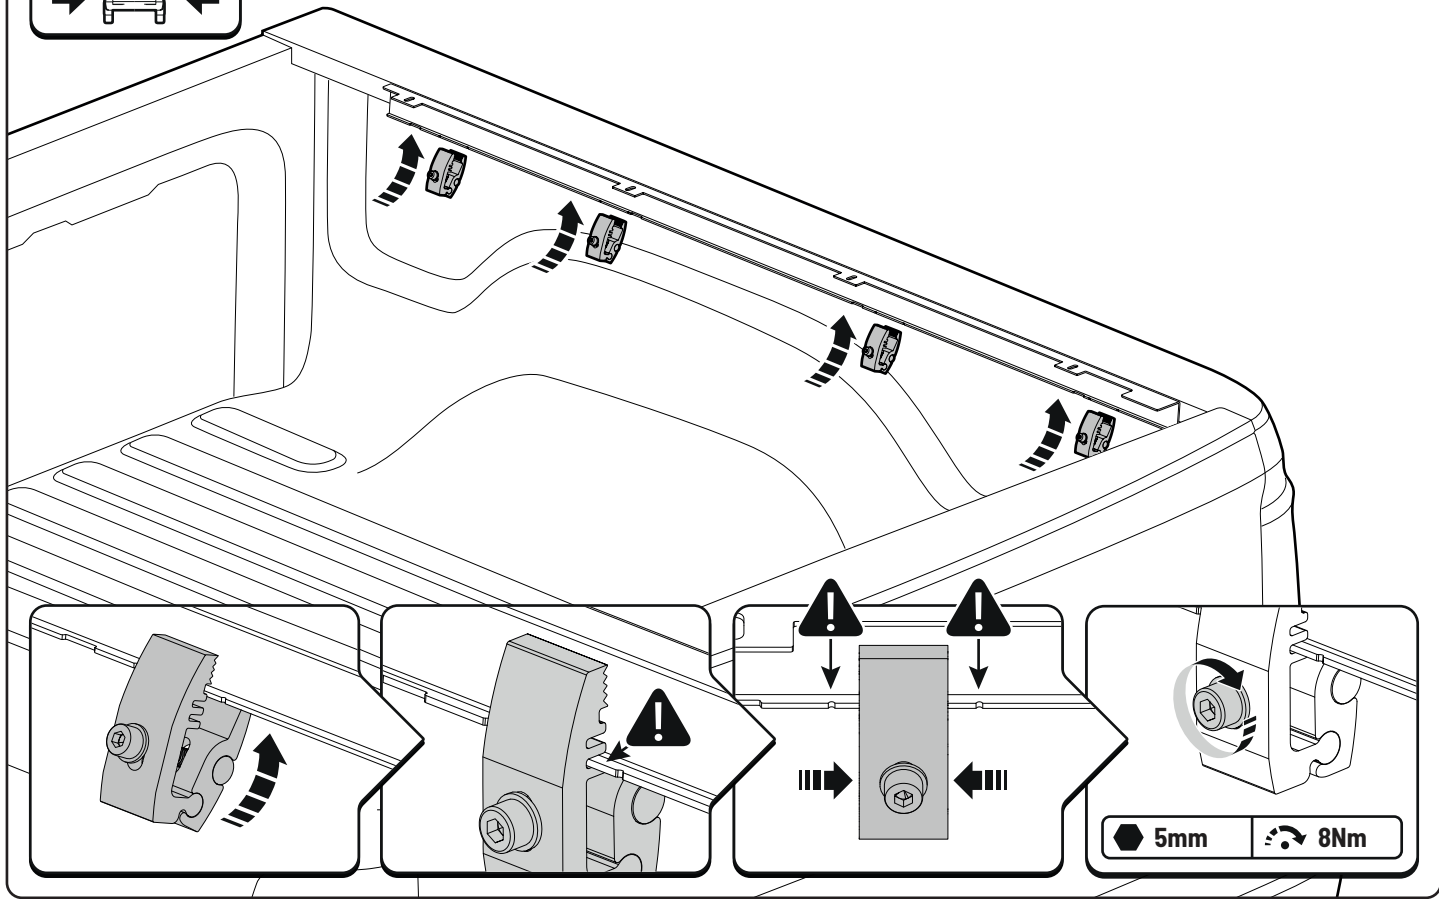



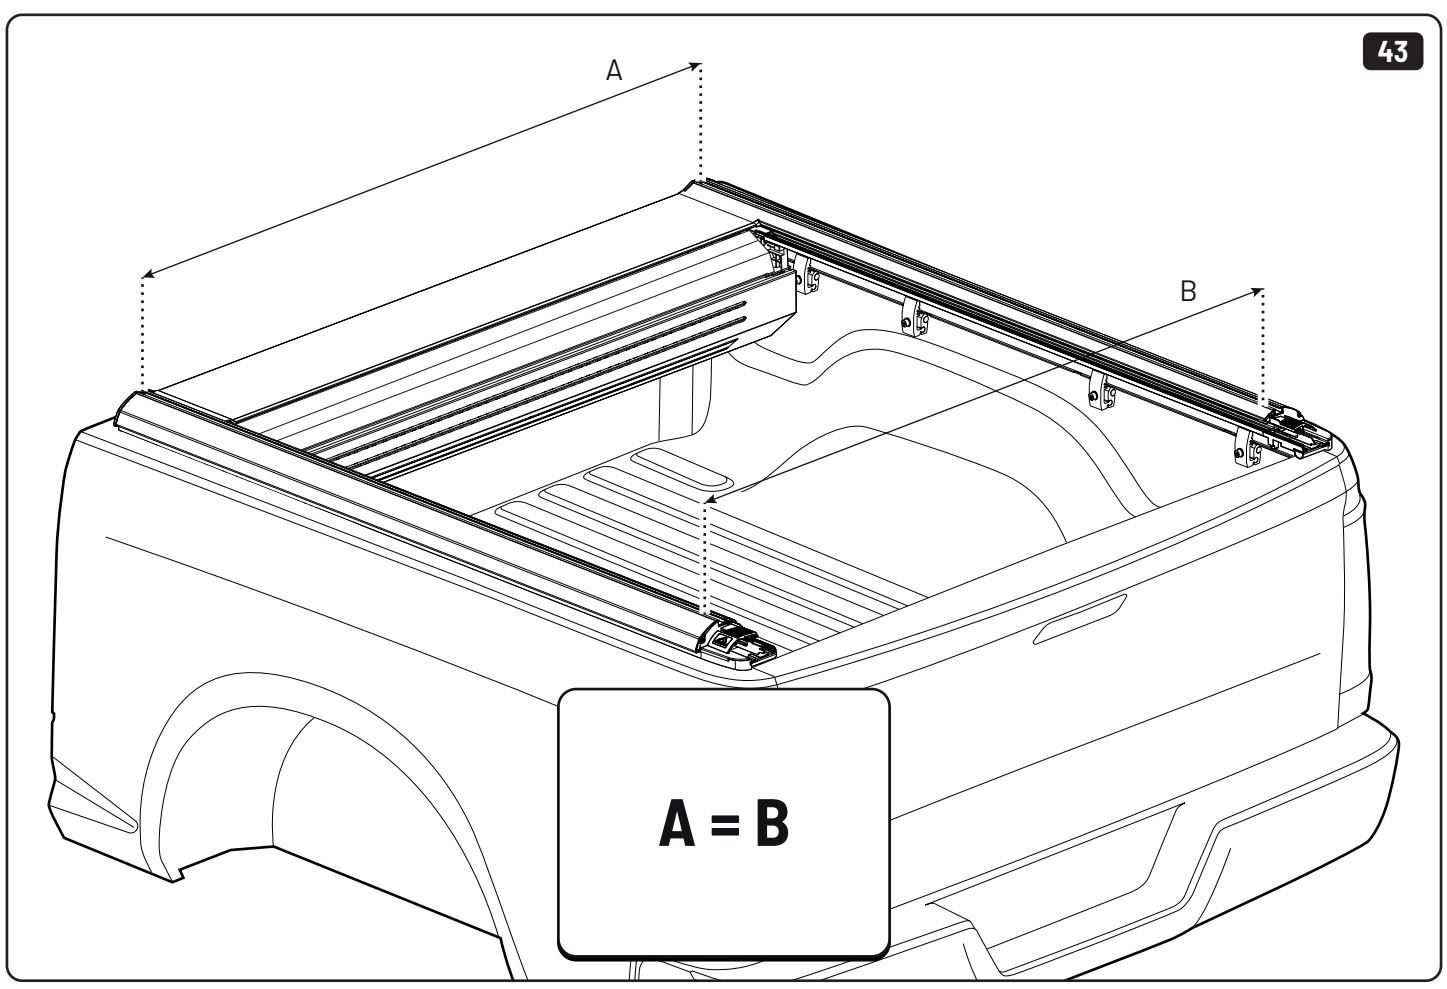
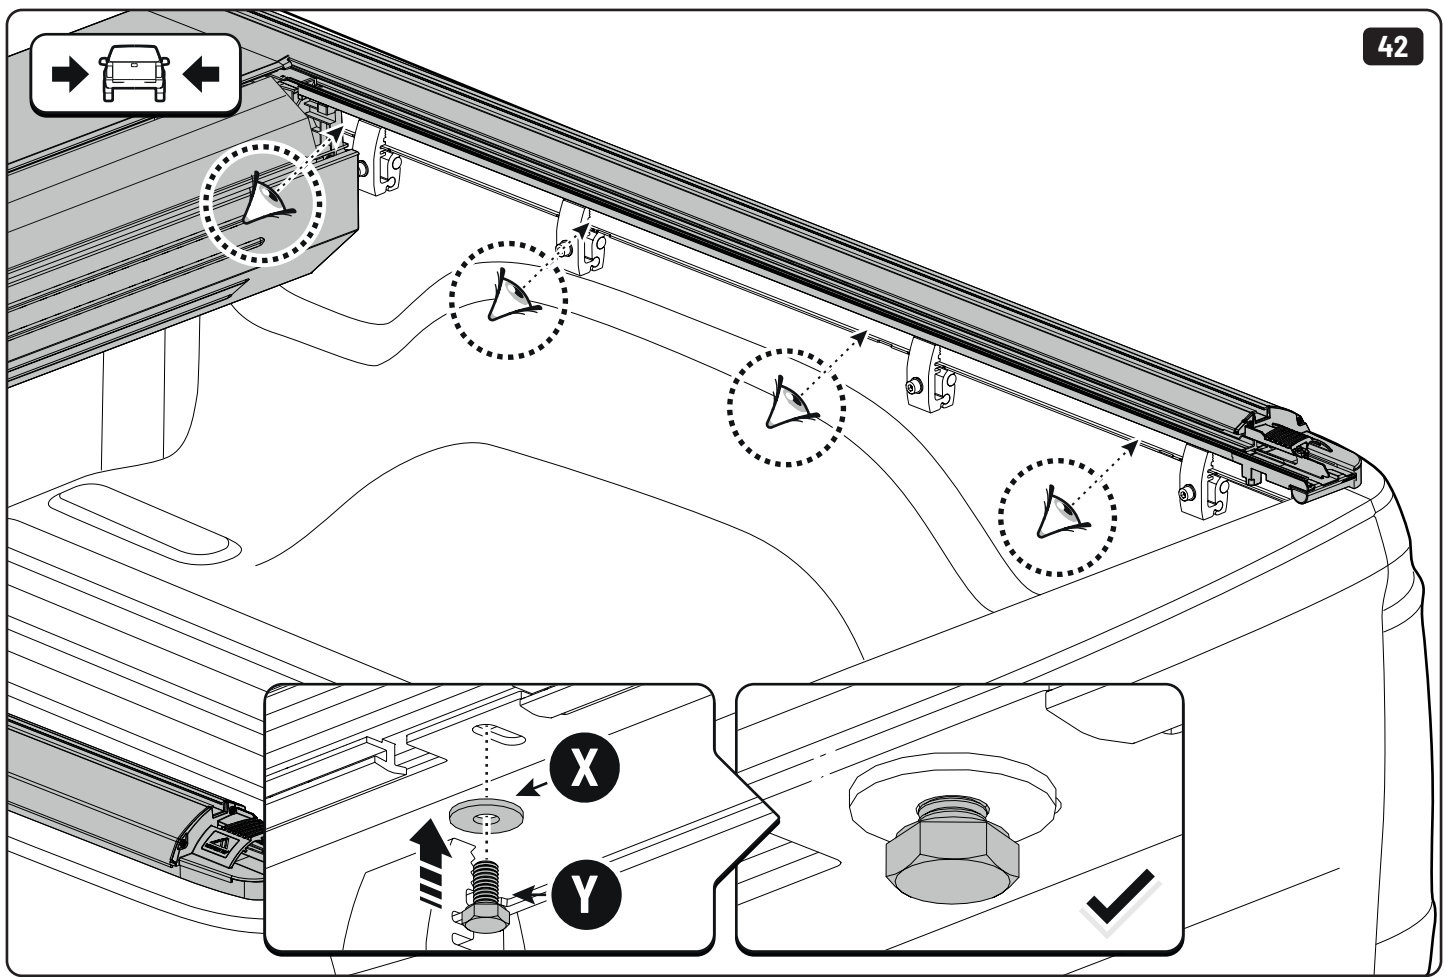


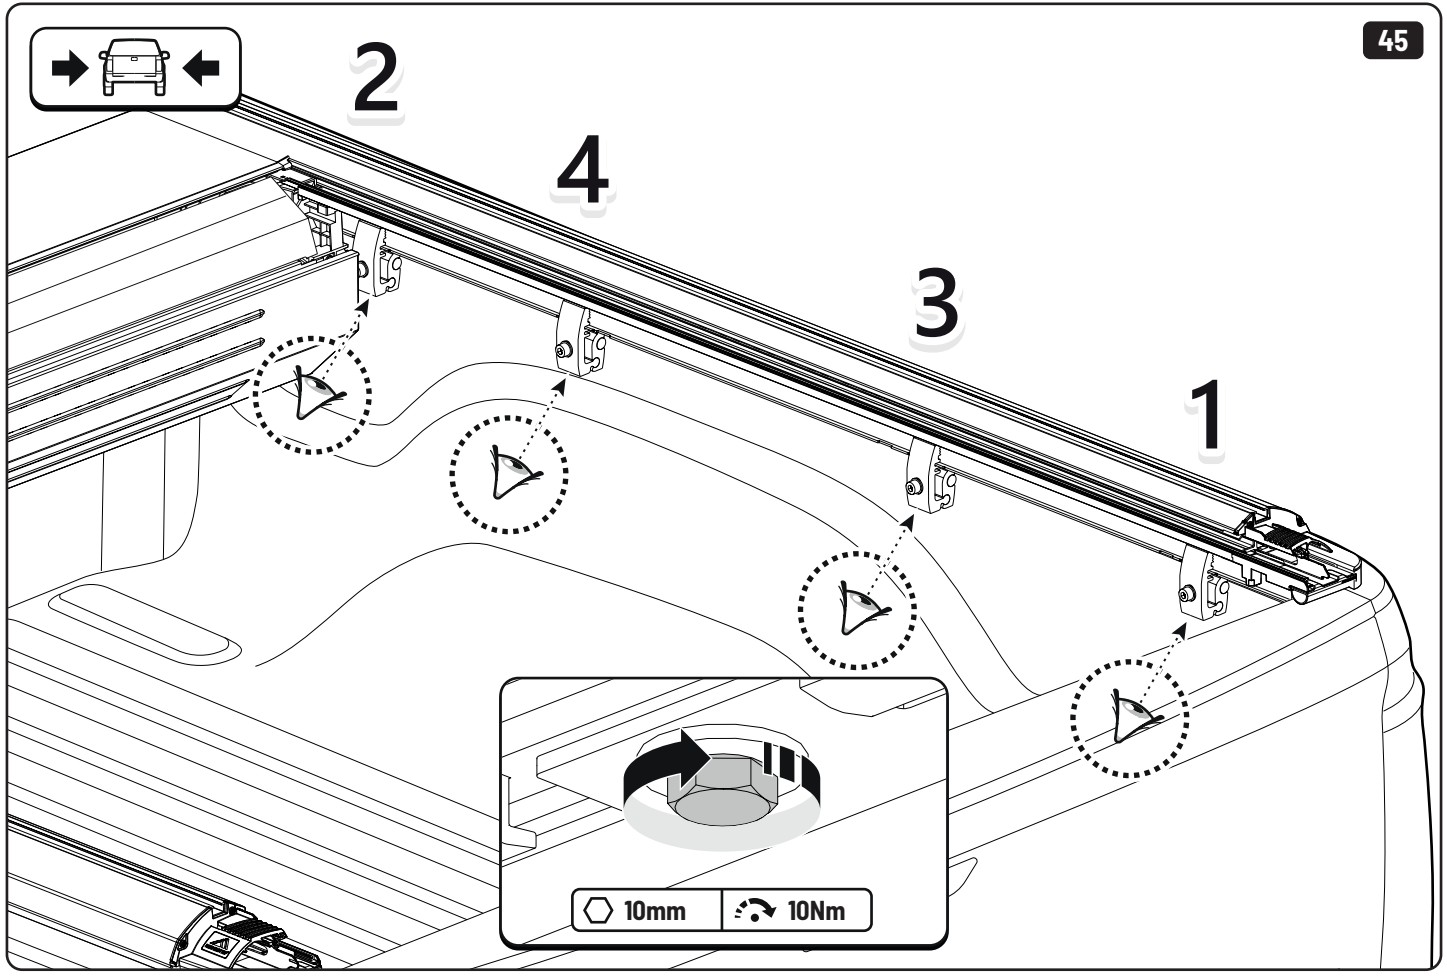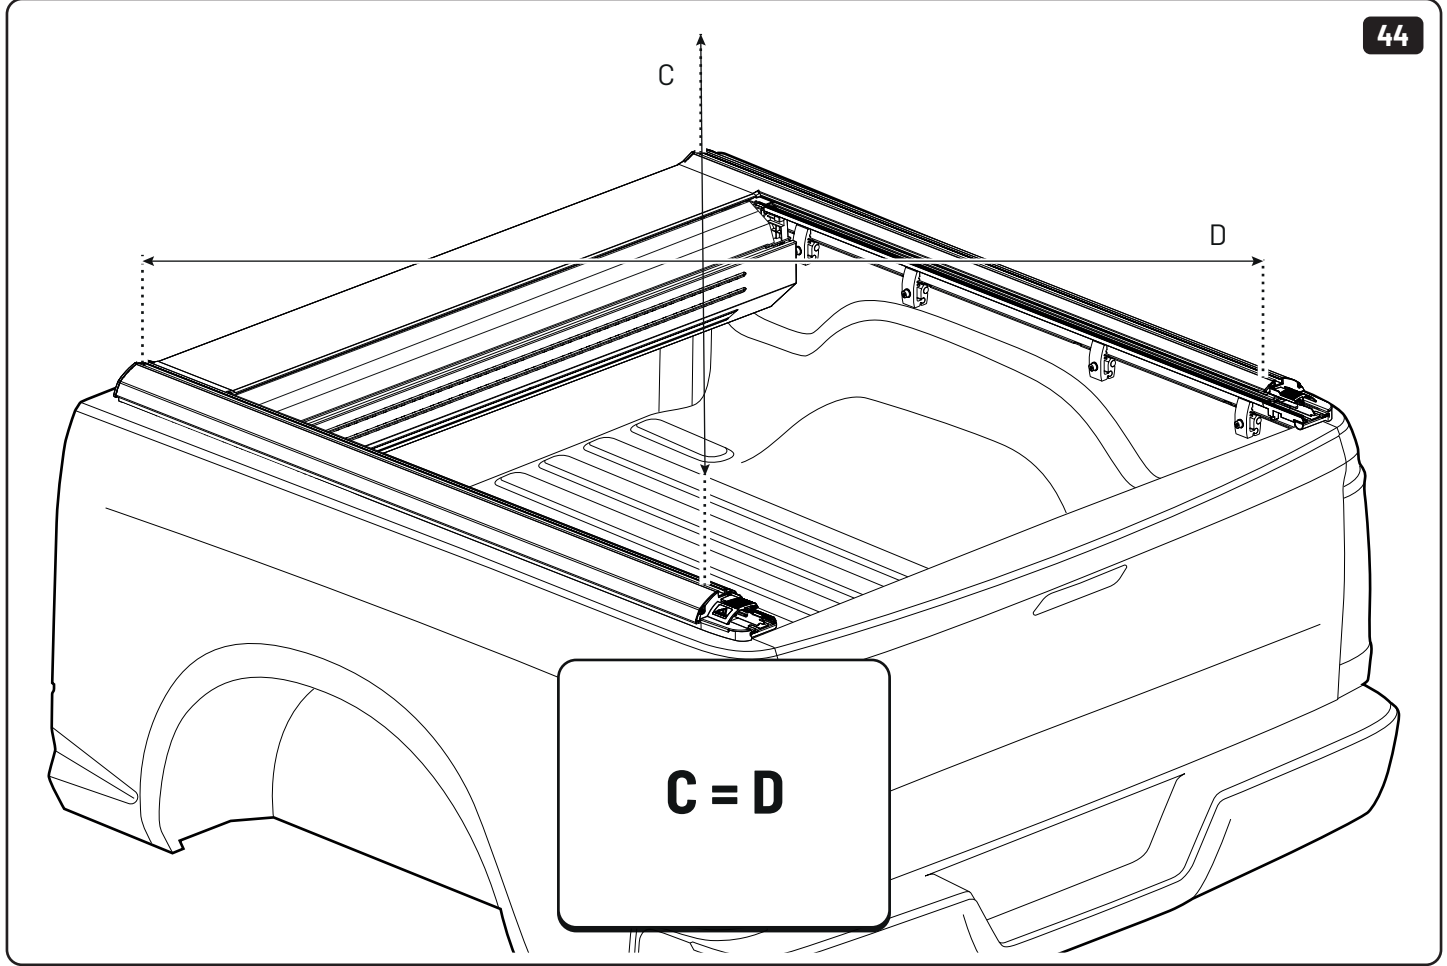

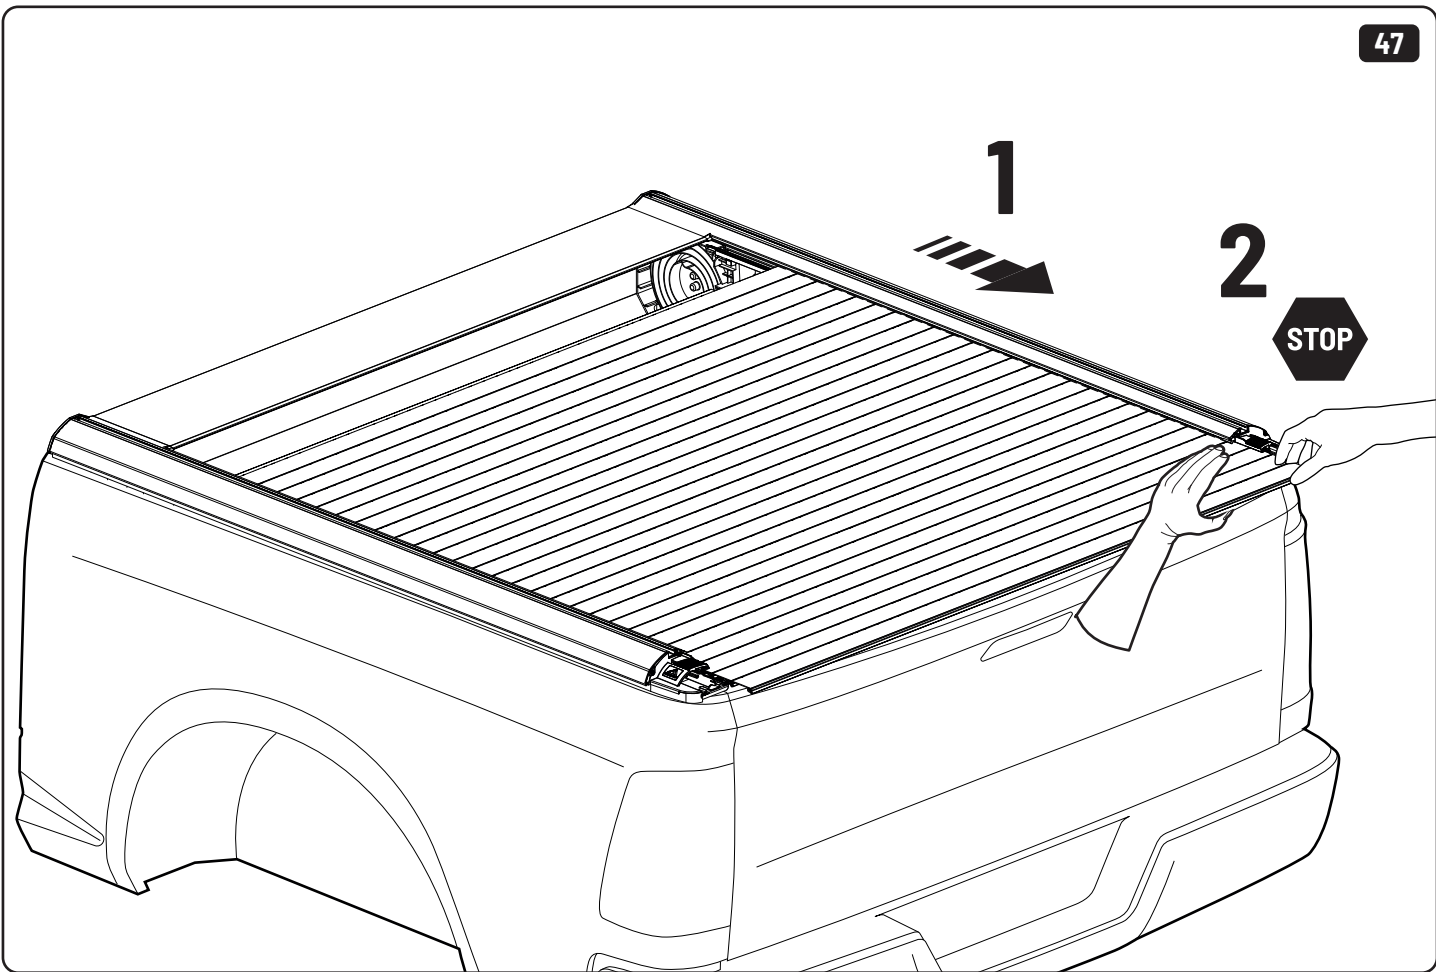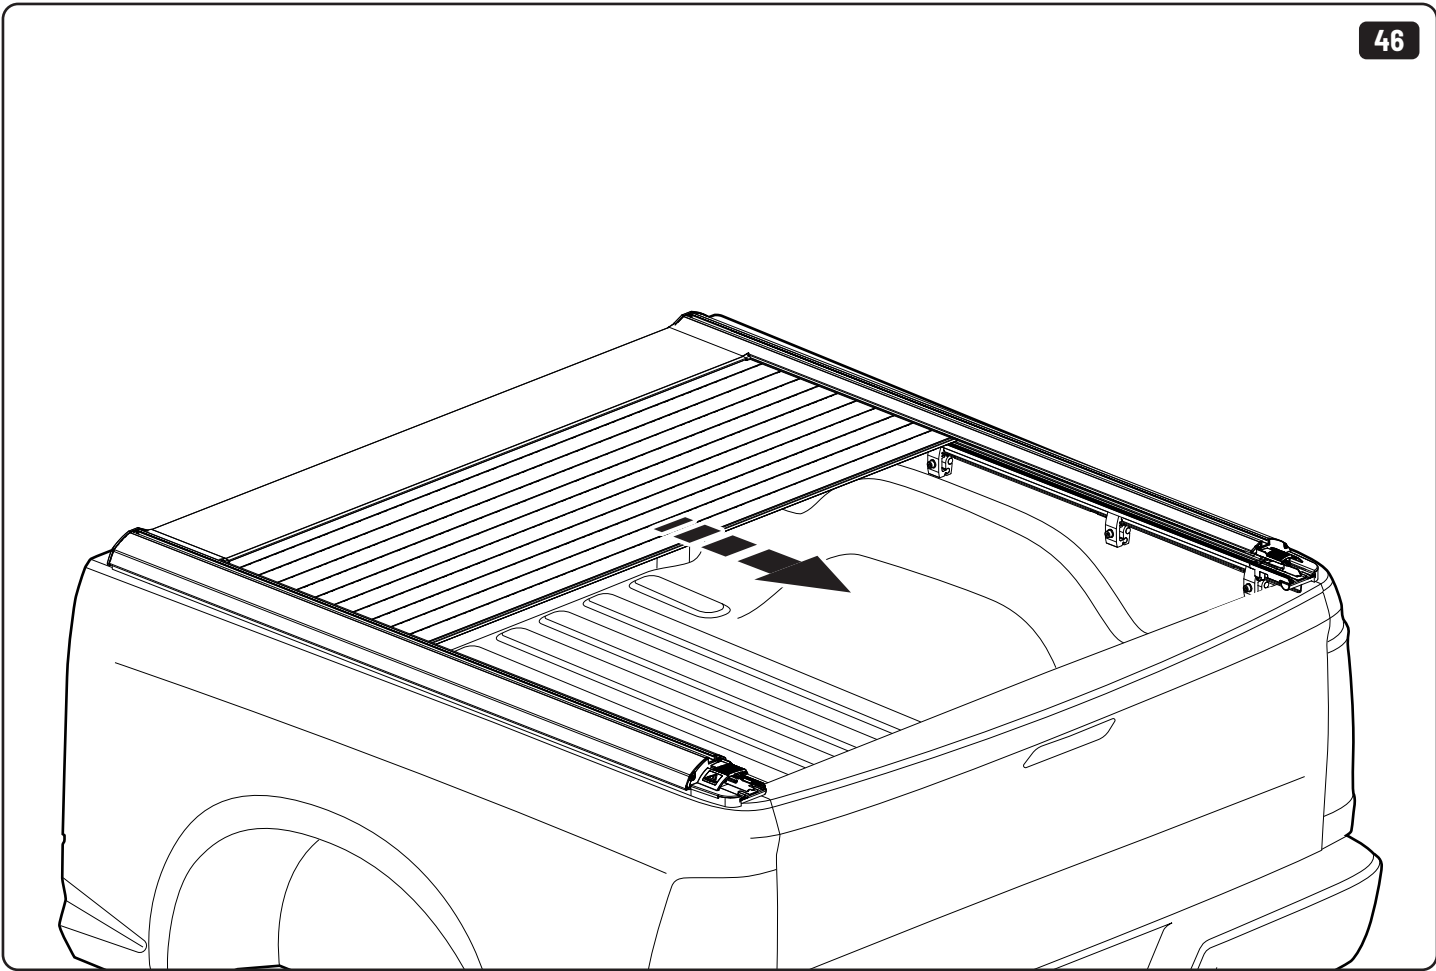

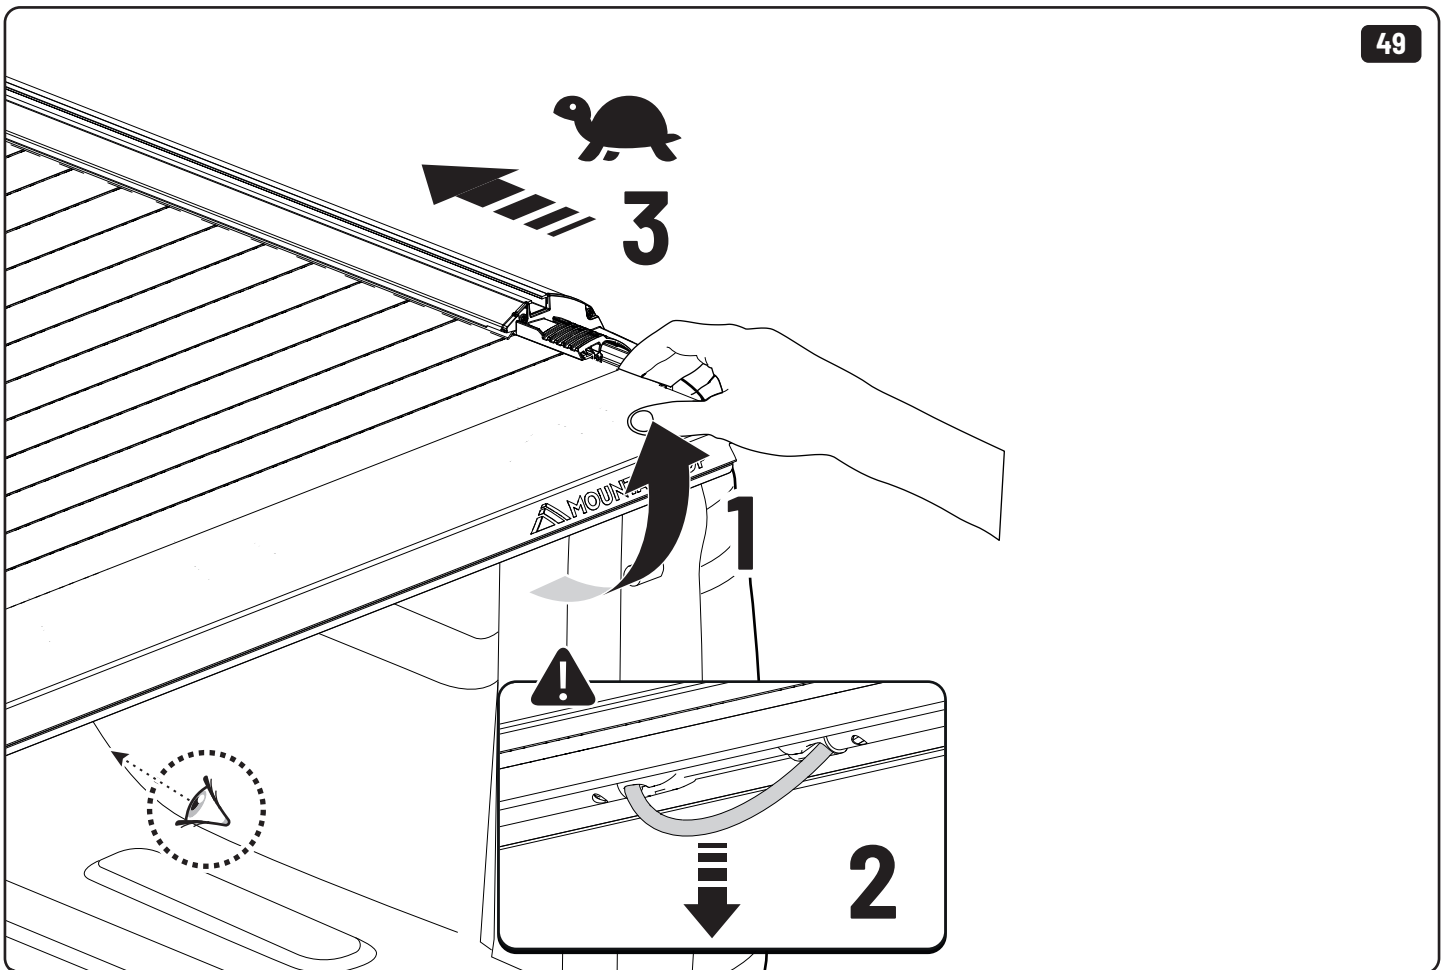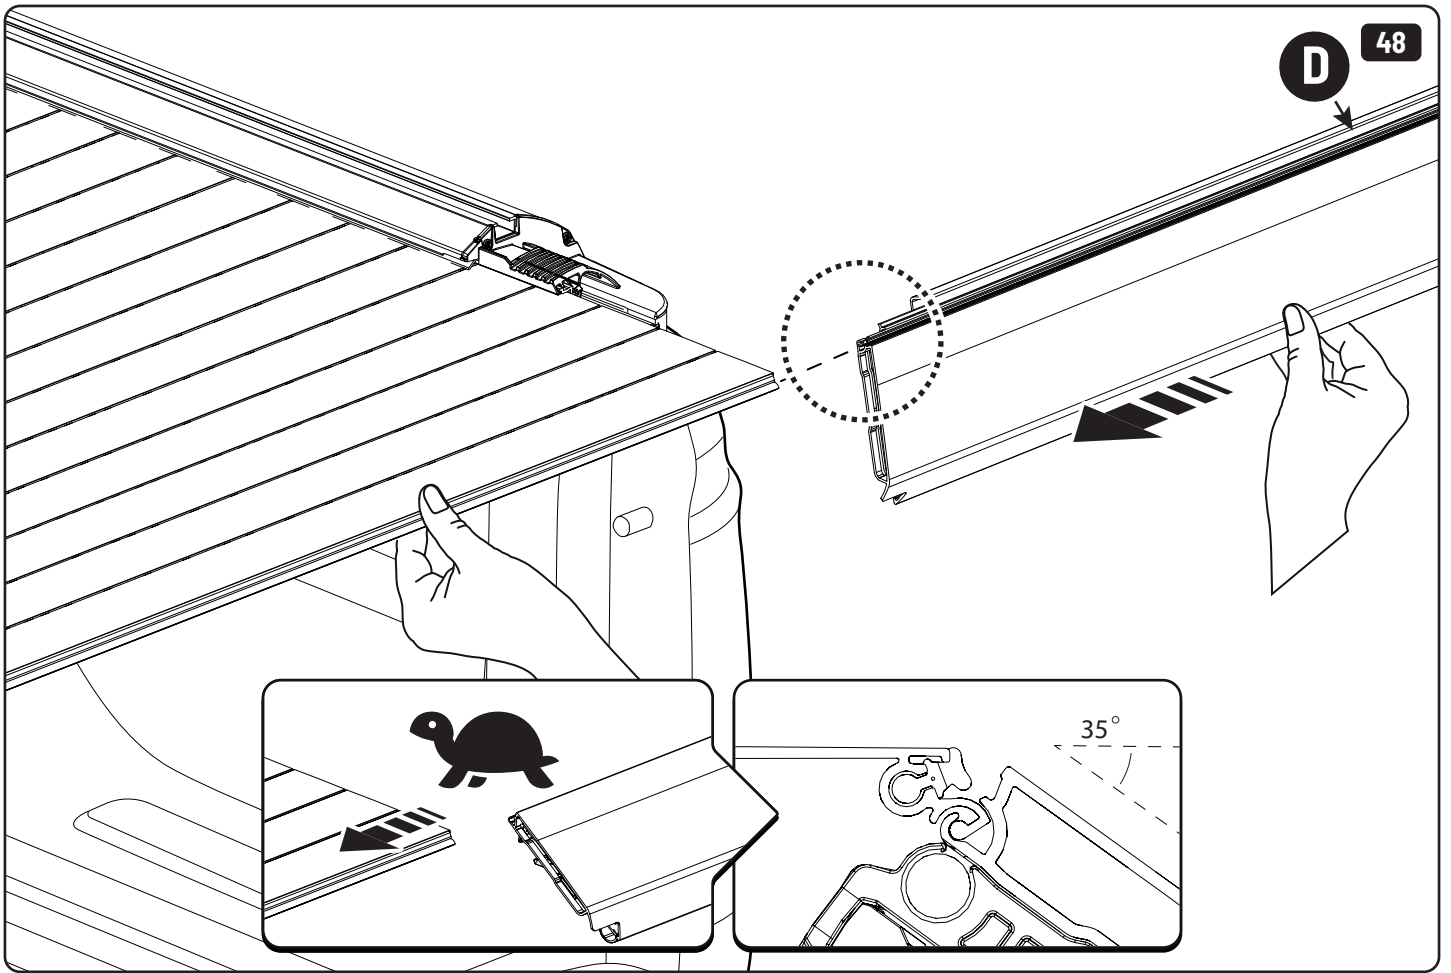

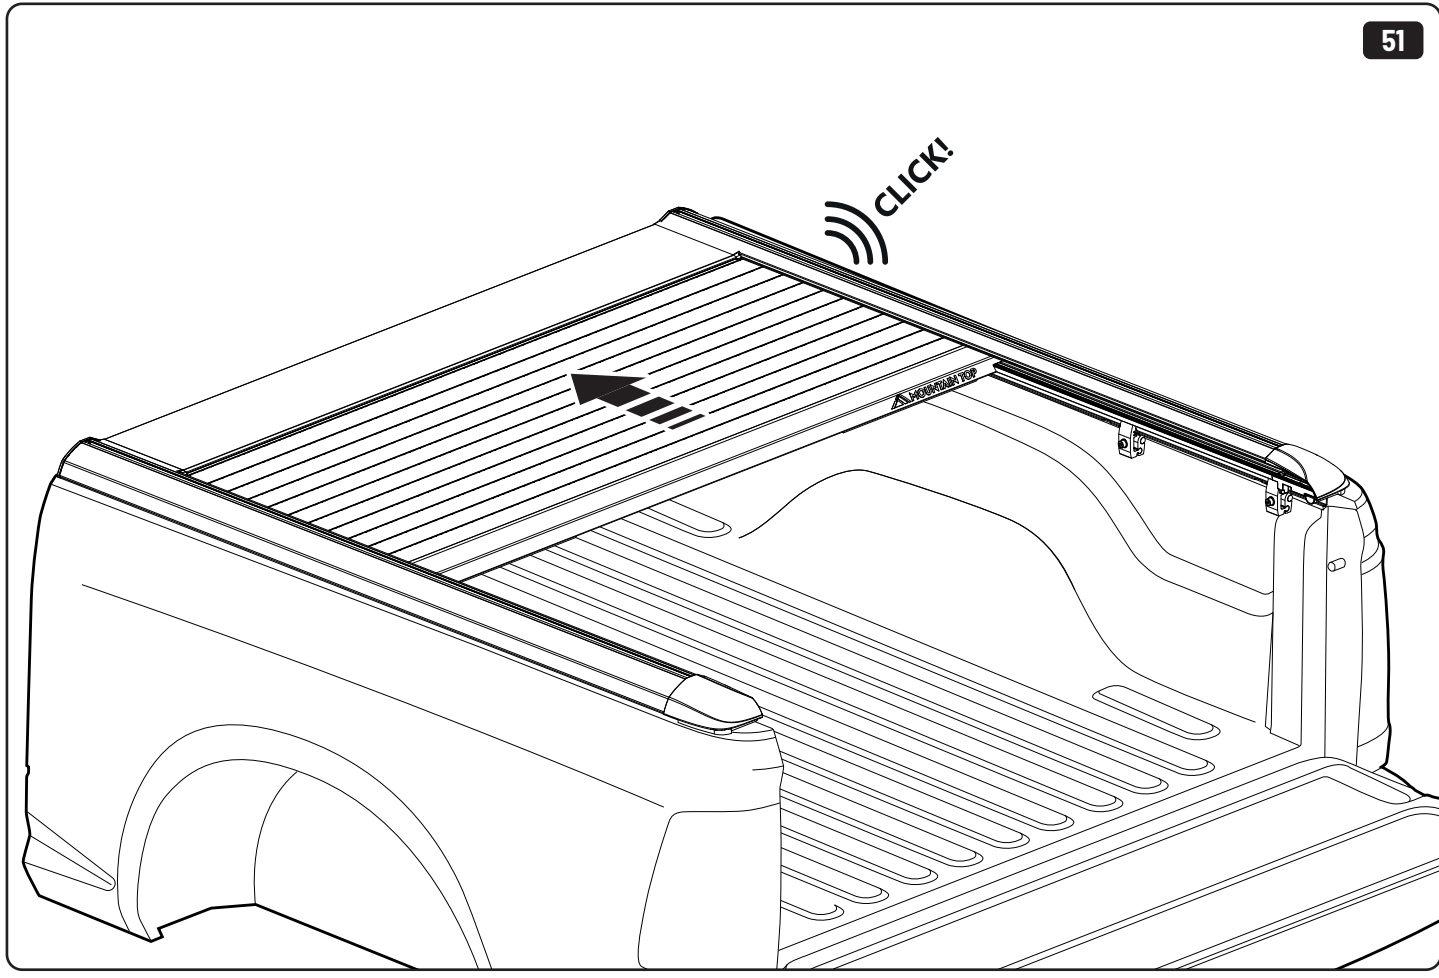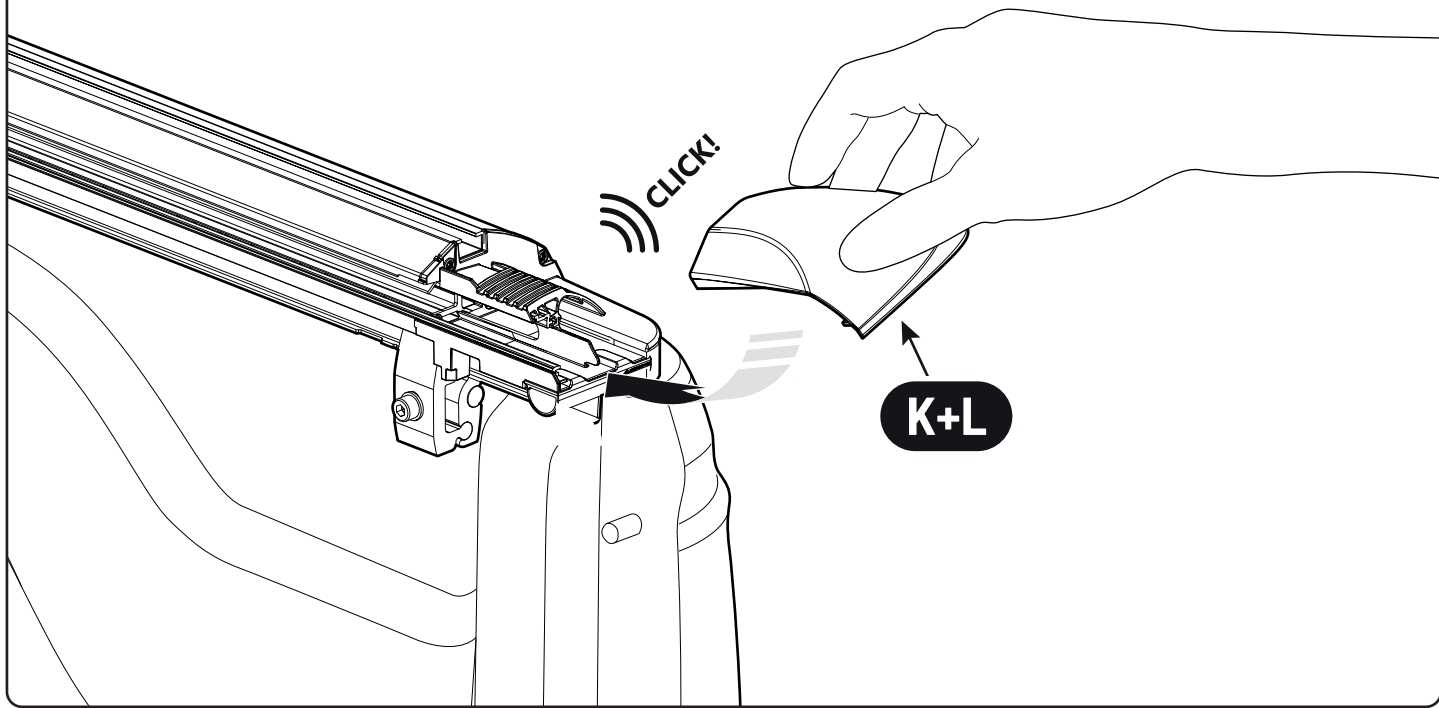

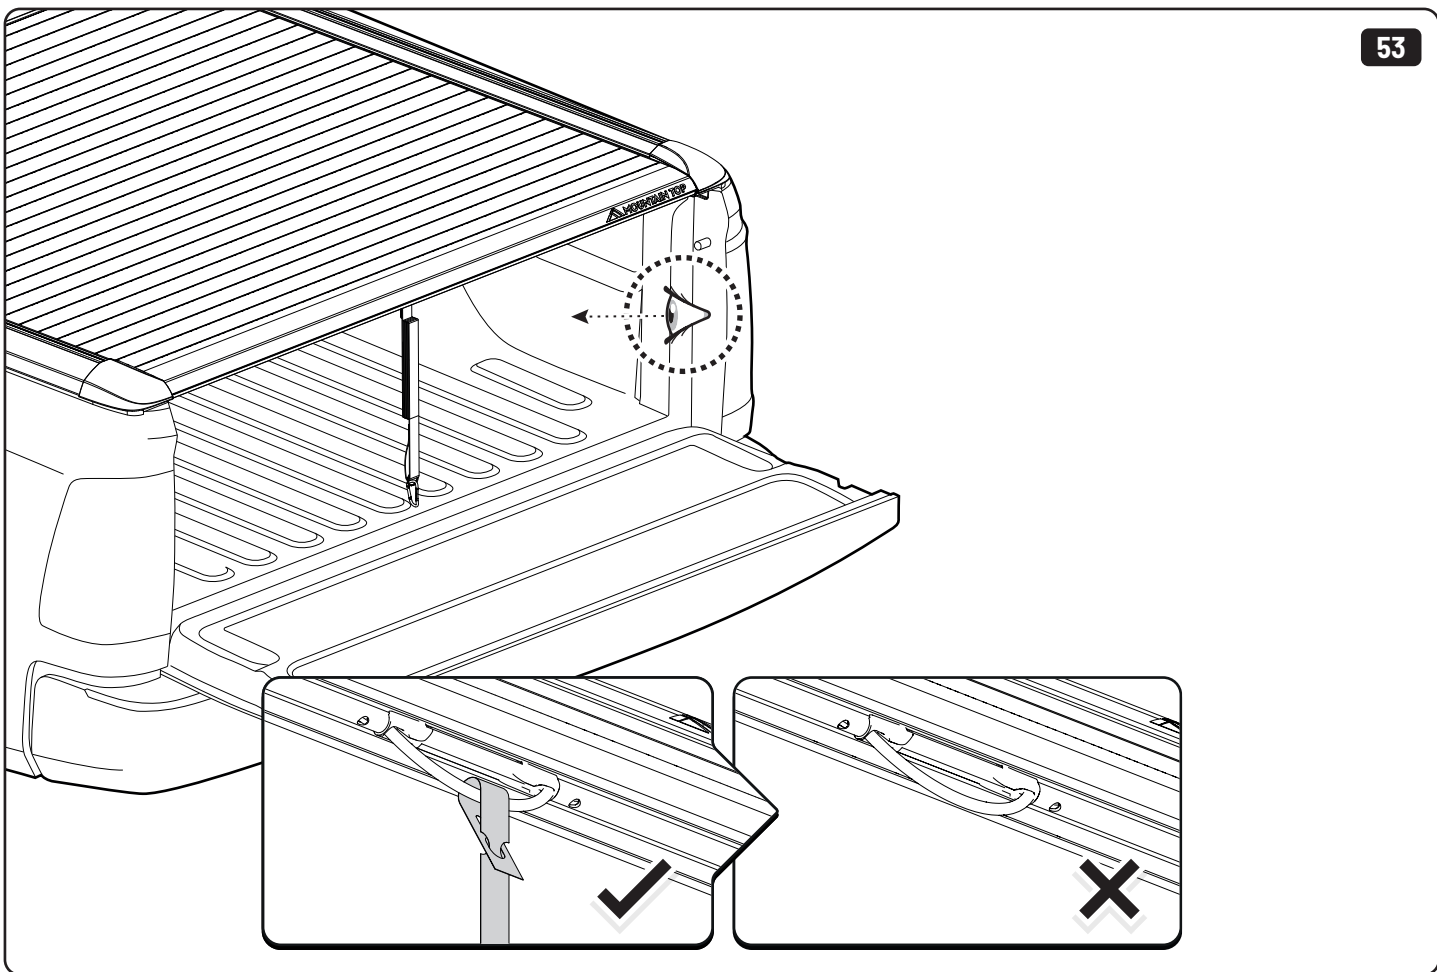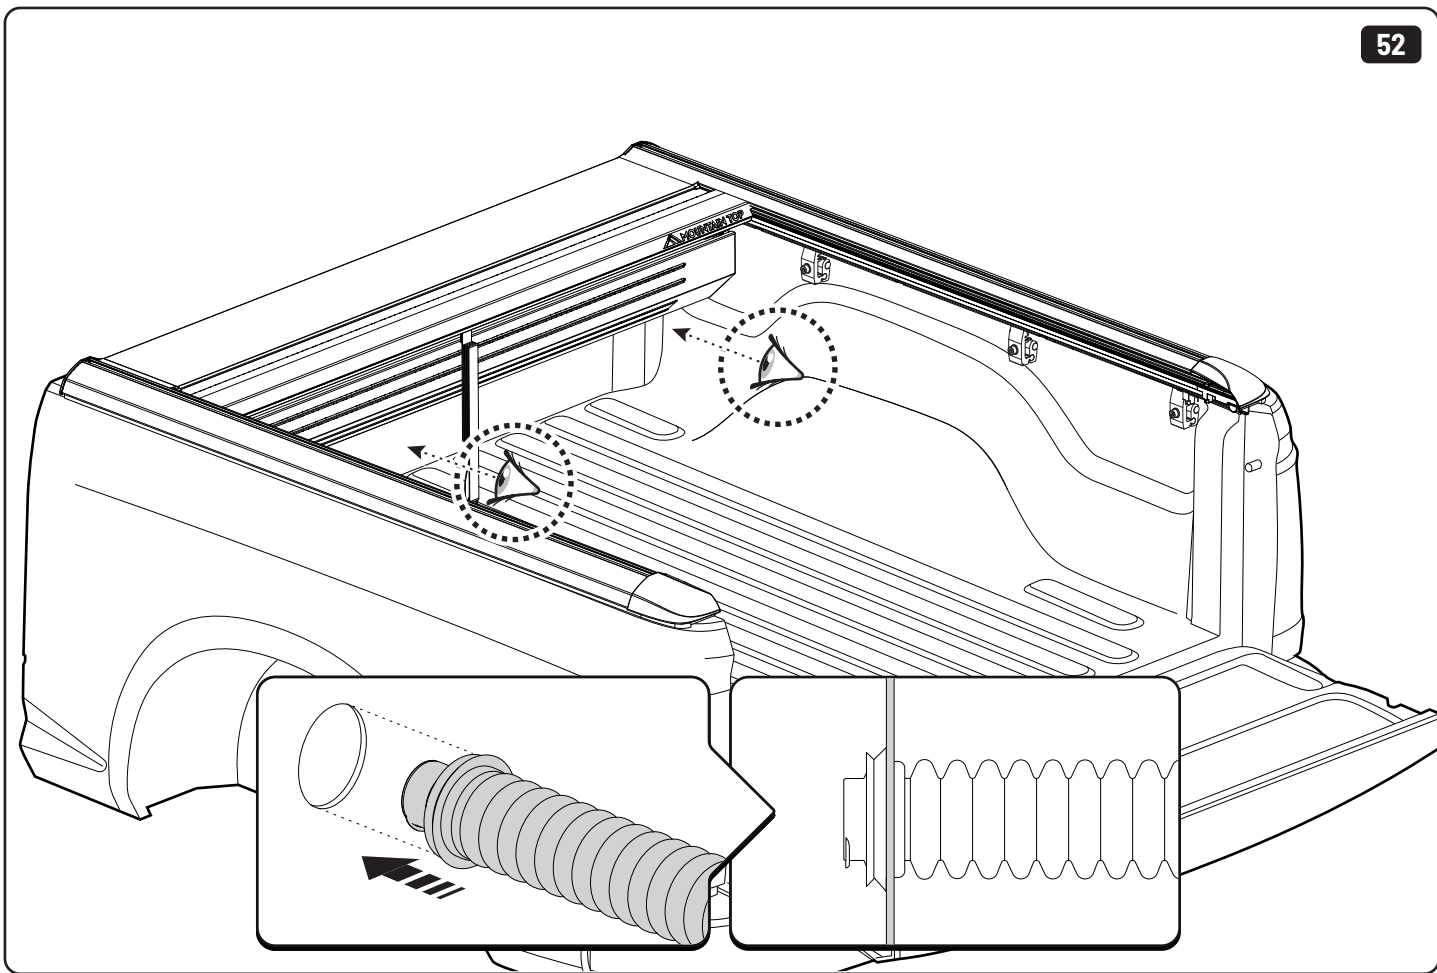

EVOm Installation checklist



Type of Action	Date	Done
Holes for drain		
Mounting gliding rail in canister		
Placement of bracket		
With + Cross measurement		
Tightening the clamp screw		



Customer Service +45 4810 2950 (08:00 - 16:00 CET)
Support info@mountaintop.dk
Website www.mountaintop.dk
Address Pedersholmparken 10, 3600 Frederikssund, Denmark

Part number (s)	Model / Year	Cab type (s)	Installation time	Weight
Chevrolet silverado	Model / 2019 - TD	Cab type	1 hour (s)	XXX Kg
Ford F-150	Model / 2015 - TD	Cab type	1 hour (s)	XXX Kg
RAM 1500	Model / 2019 - TD	Cab type	1 hour (s)	XXX Kg
Toyota Tundra	Model / 2007 - TD	Cab type	1 hour (s)	XXX Kg

GB Installation manual	S Monteringsanvisning	D Einbauanleitung
SF Asennusohje	E Instrucciones de montaje	CZ Návod k instalaci
F Notice de montage	H Szerelési utasítás	I Istruzioni de montaggio
PL Instrukcja montażu	P Instruções de instalação	GR Οδηγίες Εγκατάστασης
NL Installatie-instructies	RUS Инструкция по установке	DK Monteringsvejledning
TR Montaj Talimatı	N Monteringsveiledning	RO Instructiuni de instalare